

Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.

Date Purchased: \_\_\_\_\_ Model Number: \_\_\_\_\_ - \_\_\_\_\_ Color \_\_\_\_\_

## Parts List

Make sure you have all the parts listed below before using your Bouncer. If any parts are missing, call Consumer Affairs at 1-800-992-6624.



Seat



Support Bar



Toy Bar



Support Base



Canopy



Mini to Mini Connector

## Name of Parts



- 1 Canopy
- 2 Head Pillow
- 3 Toy Bar
- 4 Recline Button
- 5 3-Point Harness
- 6 Support Bar
- 7 Base
- 8 Anti-Bounce Lever

**⚠ WARNINGS:** FAILURE TO FOLLOW THESE WARNINGS AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF THE BOUNCER. KEEP INSTRUCTIONS FOR FUTURE USE. ADULT ASSEMBLY REQUIRED. DO NOT USE THIS BOUNCER IF IT IS DAMAGED OR BROKEN. KEEP SMALL PARTS AWAY FROM CHILDREN.

In the event of damage or problems, discontinue use and contact Consumer Affairs for instructions: 1-800-992-6624.

**⚠ FALL HAZARD:**

- Never leave child unattended.
- Child's activity can slide bouncer. Use only on floor. Never use on any elevated surface.
- Always use 3-point harness. Adjust harness to fit snugly around your child.
- Maximum weight of child must not exceed 25 lbs. (12.4 kgs). Never use for a child able to sit up unassisted.
- Do not left product by using the toy bar.
- Do not left product while occupied.
- Never use this bouncer as a car seat.

**⚠ SUFFOCATION HAZARD:**

- Never use on a soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.
- Never add a pillow, comforter or padding. Use only the pad provided by Combi.

**⚠ STRANGULATION HAZARD:**

- Strings can cause strangulation. DO NOT place items with a string around a child's neck such as hood strings or pacifier cords.
- Do not suspend strings over product or attach strings to toys.
- Do not use product in an area where there are cords, such as window blind cords, phone cords, etc.

- ⚠** Maximum combined weight capacity for both storage pockets MUST not exceed 1lb.



## Assembling the Bouncer

1. Attach the Support Bar by pressing into the Seat Base until the metal pins snap into place as shown in figure 1.

The Support Bar can only be attached one way. Notice that one side of the Seat Base and Support Bar is notched, as shown in figure 2, and the other side is not. Be sure you have the correct sides aligned before attempting to attach.



figure 1

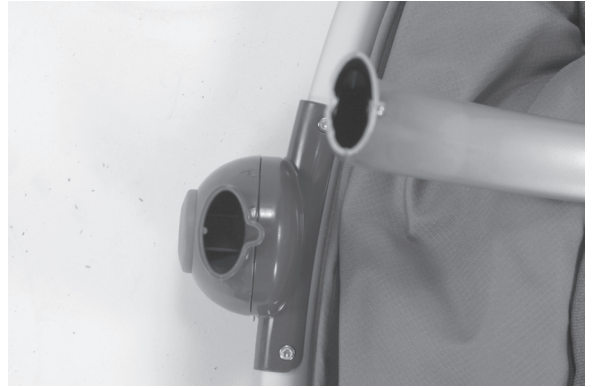


figure 2

2. Align the Support Bar with the Support Base as shown in figure 3. The Support Bar and Support Base can only be attached one way. Notice the metal post in the Support Bar and the middle hole in the Support Base are slightly off center as shown in figure 4. Aligning these will ensure the Support Bar and Support Base will be attached correctly.



figure 3

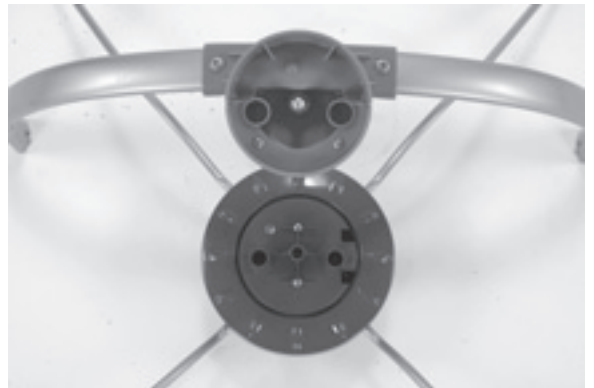


figure 4

3. Slide the Support Base onto the Support Bar and press firmly until you hear them snap together as shown in figure 5. Lift up on the Support Base to ensure they are locked together.



figure 5

## Attaching the Toy Bar

1. Slide the Toy Bar onto the Seat as shown in figure 6. The Toy Bar will only attach one way, so if it will not attach try it the other way.



figure 6

## Attaching the Canopy

1. Unzip the pocket and remove the Canopy as shown in figure 7.
2. Snap the Canopy onto the Seat frame as shown in figure 8.
3. Once the Canopy is attached, you can slide it up or down on the Seat frame so it aligns with the top of the Seat as shown in figure 9.



figure 7



figure 8



figure 9

## Reclining the Bouncer

1. Press in the Recline Buttons on both sides of the Seat while rotating the Seat to the desired recline level as shown in figure 10. Then let go of the Recline buttons and move the Seat up and down slightly to ensure it is locked in position.



figure 10

## Adjusting the Head Pillow

1. Detach the hook and loop fastener on back of the seat as shown in figure 11. Adjust the Headrest to the desired height as shown in figure 12. Then reattach the hook and loop fastener in the back of the seat.



figure 11



figure 12

## Using the Restraint System

### Connecting

Connect restraint system by fastening the clip on the belt, as shown in figure 13.

### Disconnecting

Disconnect restraint system by pressing sides of the clip on the belt.



figure 13

## Using an External Music Device

1. Unzip the pocket in the back of the Seat and remove the Mini to Mini cable that is included.
2. Insert one end into the Bouncer and the other end into your music device as shown in figure 14. You can place small MP3 players in the small pocket on the back of the Seat as shown in figure 15.



figure 14



figure 15



## Using the Anti-Bounce Lever

1. Pull down the Anti-Bounce Lever from the bottom of the Support Base as shown in figure 16.

### **⚠ WARNING**

Do not lift up the Bouncer with a child in it. The Bouncer may tip over and the child could be injured.

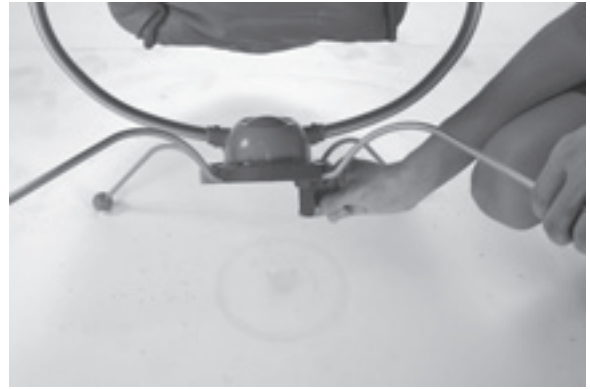


figure 16

## Using the Music / Vibration Unit

1. Turn on the power by pressing the power button.
2. Turn on the music by pressing the music button.
3. Turn on the vibration by pressing the vibration button.
4. Press the buttons again to turn off the desired function.



figure 17

## Installing the Batteries

1. The battery compartment is located underneath by the foot of the seat. Use a flat screwdriver to remove battery lid as shown in figure 18.
2. Insert 3 AA batteries and close the battery compartment lid.



figure 18

### **⚠ WARNING**

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries when bouncer is stored for long periods of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Keep batteries out of children's reach.

## Trouble Shooting

### MUSIC AND SOUND EFFECTS ARE NOT WORKING

- Check that the battery is in the correct position as indicated inside the unit.
- Replace with a new battery, if necessary.

## Routine Maintenance

### STORE IN A COOL AND DRY AREA.

### ALWAYS MAKE SURE FRICTION PADS ARE KEPT CLEAN , CLEAN WITH WATER ONLY.

### TO CLEAN FRAME AND SEAT COVER, USE A DAMP CLOTH. NO BLEACH OR DETERGENT.

### LIMITED WARRANTY

1. Combi Juvenile Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free of defect in materials and workmanship for a period of one (1) year from date of purchase. Warranty is valid for products purchased and used in the U.S. only, and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt in case of return for warranty service is necessary.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service call 1-803-548-6633. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by other than an authorized Combi repair center or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



## Pod Bouncer

## Instruction Manual

If you would like to place an order for the replacement parts, please fill out the form below and return to the following address:

**Combi**

Attn: Consumer Affairs Department  
1962 Highway 160 W, Suite 100  
Fort Mill, SC 29708-8027

or Fax this completed form to

**803-548-3663**

**IMPORTANT: We must have this information to process your order:**

Model Number: \_\_\_\_\_ - \_\_\_\_\_ Color & Pattern of Fabric: \_\_\_\_\_

### Parts List for the Pod Bouncer

	Price	Quantity	Total
1. Toy Bar (Toys included)	\$20.00		
2. Toy Bar (without Toys)	6.00		
3. Stuffed Sun	6.00		
4. Stuffed Planet	6.00		
5. Stuffed Star	6.00		
6. Canopy	10.00		
7. Mini to Mini Connector	3.99		
8. Head Pillow	12.00		

If you need to order other parts for your Bouncer, please call us toll-free at 1-800-992-6624.

**Shipping and Handling Fees:** Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S.

Combi USA reserves the right to change pricing at any time.

### Ship To:

Customer Name \_\_\_\_\_

Street Address \_\_\_\_\_

Street Address \_\_\_\_\_

City, State, Zip \_\_\_\_\_

Telephone Number \_\_\_\_\_

Amount of Order		
ADD Shipping & Handling		
Sales Tax (6%) (SC residents only)		
Total		

### Charge to my credit card:

- VISA                       MASTERCARD  
 DISCOVER

Card Number \_\_\_\_\_

Expiration Date \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

Cardholder's Signature \_\_\_\_\_ 082207