

# Combi®

# Cosmo™

## Instruction Manual

CombiUSA.com



Read all instructions BEFORE assembly and USE of product.  
KEEP INSTRUCTION FOR FUTURE USE. Record the following  
information for quick reference.

**Note:** Illustrations and photographs are only representative and not actual.  
Attach copy of sales receipt for future reference.

Date of Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_ - \_\_\_\_\_ (Located near rear of basket)

Color: \_\_\_\_\_

### Combi USA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273

Customer Service 1.800.992.6624

## WARNINGS & GENERAL SAFETY INFORMATION



# WARNING

**AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT – ALWAYS USE RESTRAINT SYSTEM. NEVER LEAVE CHILD UNATTENDED!** PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

**In the event of damage or problems, discontinue use and contact Combi® Customer Service for instructions: 1-800-992-6624**

***All operating and assembly procedures should be performed by an adult:***

- Avoid serious injury from falling or sliding out. Always use restraint system.
- Never lift and carry the stroller while occupied. The stroller may fold.
- Never allow your child to stand in or on the stroller.
- Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.
- Never leave child unattended.
- Never use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.
- Never hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.
- Always engage the brakes when parking the stroller.
- Never allow children to lean over sides of stroller. It may become unbalanced and tip over.
- Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs (4.5kg) in the basket.
- To avoid finger entrapment, always remove carrier attachments when you are not using the Combi Shuttle™ Infant Carrier.
- Completely remove all plastic bags and packing material before using this product to prevent a possible choking hazard.
- When Combi Shuttle infant seat is attached, ALWAYS ensure it is secure by pulling up on the handle.
- ALWAYS secure your child with the infant carrier restraint system before using it with the stroller.
- The guardrail MUST be attached to the stroller before attaching the Combi infant carrier.
- To ensure your child's safety, please refer to an the Combi Shuttle instruction manual before using it with the stroller.
- If unable to securely attach the Combi Shuttle to your stroller, discontinue use and contact Combi Customer Service.
- To prevent tipping: do not place more than 1.0 lbs (.045 kg) in the parent cupholder.
- Never carry stroller by using the Combi Shuttle handle.
- TIPPING HAZARD: Never place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.
- Stroller is intended for walking speed only. NEVER use while jogging, skating, etc.
- Child may slip into leg opening and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.
- Not locking the swivel wheels before folding the stroller can damage the wheels.
- To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected and locked in position before allowing your child near the stroller.

Use only the Combi Shuttle infant carrier with this stroller.

 
Total Maximum weight of the child MUST NOT exceed 55 lb (25 kg).

Total Maximum weight of Canopy pocket MUST NOT exceed 1.0 lbs (0.45 kg).

This product meets or exceeds all requirements covered in the ASTM F833 Standard Consumer Safety Performance Specification for Carriages and Strollers.

Total Maximum weight of Stroller Pack MUST NOT exceed 3.0 lbs (1.36 kg).


# OVERVIEW

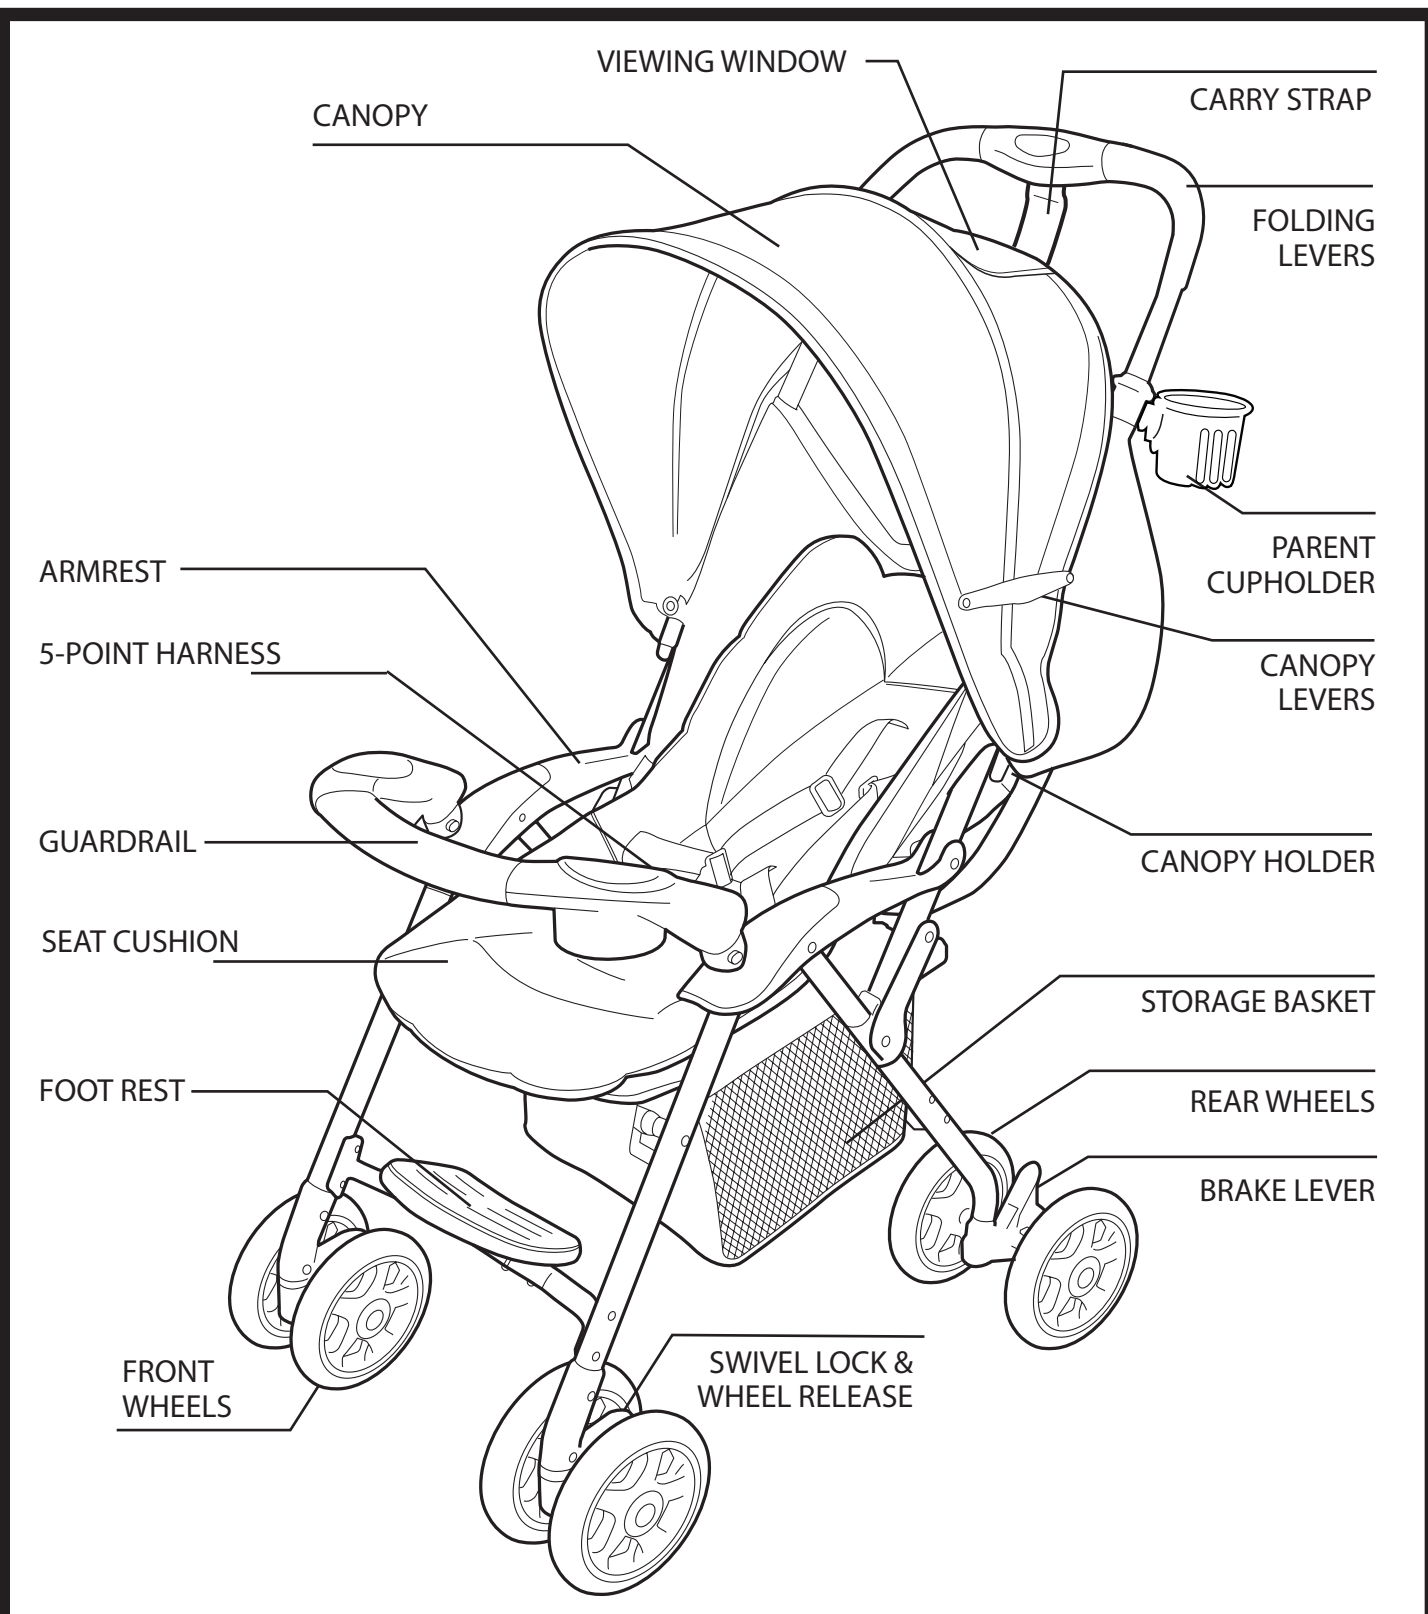

**Note:** All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Due to continuous product improvements, the pictures displayed in the instruction manual may differ slightly from the actual product. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.

# STROLLER ASSEMBLY

 
## OPENING THE STROLLER

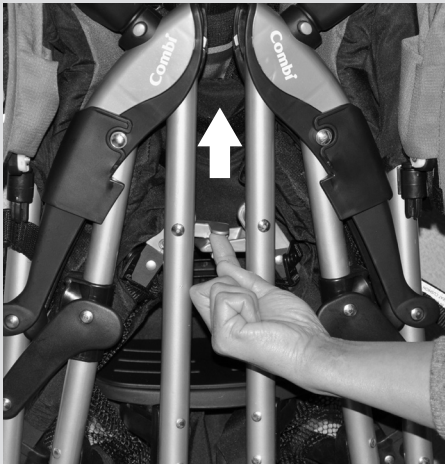

1. Release latch by pulling it up.



 2. Grip the handle on each side and turn outward to open.

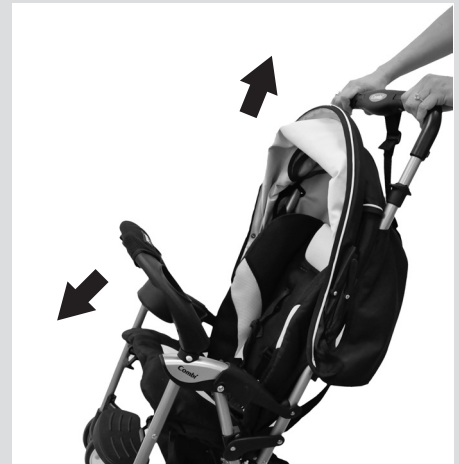

3. Lift handle and snap the stroller away from you. It will open and lock automatically into position.

## ATTACHING THE REAR WHEELS



1. Stand behind the stroller.
2. Locate the small opening on each rear wheel assembly.



3. Locate the small silver pin on each rear stroller leg.
4. Insert the leg into the wheel assembly until the small silver pin locks into the opening.

## ATTACHING & REMOVING THE FRONT SWIVEL WHEELS



1. Place front swivel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

**Swivel lever MUST be locked before folding and storing stroller to avoid damage.**



**To Remove Swivel Wheels:** Press in the square release button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.



# STROLLER ASSEMBLY

## ATTACHING THE CANOPY



### Attaching the Canopy:

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy Velcro® together around the handle (2 places).



### Removing the Canopy:

1. Pull the Velcro® apart.
2. Squeeze the bottom of the canopy holder (male) and pull the canopy up from above the canopy holder (female). This must be done on both sides of the canopy to completely remove it.

**CAUTION:** Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent bending. NEVER place items on top of canopy during storage.

## USING THE SWIVEL WHEELS



### To Lock Swivels:

 
Lift both swivels lock levers up.

### To Unlock Swivels:

Push both swivel lock levers down.

**NOTE:** Swivel levers **MUST** be locked before folding and storing stroller to avoid damage.

## USING THE BRAKES

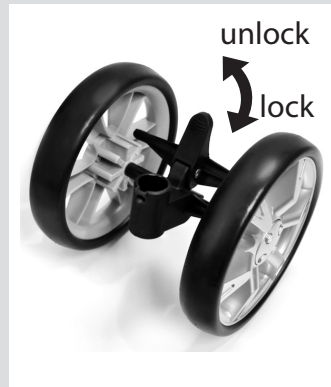

### To Lock Brakes:

Push both brake levers down.

### To Unlock Brakes:

Lift both brake levers up.

**CAUTION:** Push the stroller forward to ensure that the brakes are properly engaged.

## ADJUSTING THE RECLINING BACKREST



1. To place the backrest in the upright position, press and hold down the button on the recline mechanism and pull the strap tight while pushing the recline mechanism toward the seat back.

2. To achieve a full recline, press and hold down the button on the recline mechanism and pull downward.

Use **CAUTION** when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

# STROLLER OPERATION

## USING THE GUARDRAIL



**Attaching:** Push the guardrail onto the guardrail posts on the armrest until they lock in place. Ensure each side is firmly attached.

**Removing:** Press the buttons on each side of the armrest while pulling the guardrail away from the armrest to remove.

**WARNING:** Ensure guardrail is securely attached by lifting up each side of guardrail gently. NEVER lift the stroller by the guardrail.

## USING THE SAFETY BOOT



1. Lift up the seat cushion, unzip the boot and pull it out.
2. Place the boot over the guardrail and secure it with the zipper.

Before folding stroller, unfasten and store the boot under the seat. The stroller will not fold with it attached to the guardrail.

**WARNING:** Child may slip into leg openings and strangle. NEVER use in reclined carriage positions(s) unless safety cover (boot) is securely fastened.

## USING THE HARNESS



### Buckling The Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into each side of buckle.
3. Lift buckle with tongues inserted and attach right and left harness hooks to holes in buckle tongues.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle and adjust to desired position.

### Unbuckling The Harness

1. Press levers down on right and left harness hooks to detach shoulder straps from buckle tongues.
2. Press center buckle button down while gently pulling buckle tongues from buckle to release.

**WARNING:** Avoid serious injury from falling or sliding out. Always use the 5-point harness.

# STROLLER OPERATION

 
## HARNESS HEIGHT ADJUSTMENT



1. Unhook the shoulder strap from the center buckle.



2. Pull the seat cushion forward while removing the shoulder straps from the cushion.

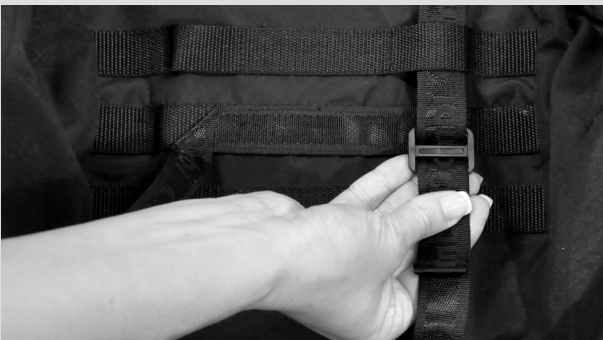

3. To raise the height, thread both shoulder straps through the upper two loops. To lower the height, thread the shoulder straps through the lower two loops.



4. Thread the shoulder straps through the appropriate slot of the seat cushion depending on which height the straps are set.

## FOLDING THE STROLLER

1. ALWAYS lock both front swivel wheels. Not locking the swivel wheels before folding the stroller can damage the wheels.
2. Empty the basket.
3. Fold the canopy by lifting the canopy levers.
4. Remove all items from canopy pocket.
5. Lift and hold the folding levers up on both sides of the handle.
6. Tilt the stroller onto its back wheels and roll it forward and then pull it back quickly and the front guardrail will fold inward.
7. Turn handle inward with an underhand hold to latch and lock.



**CAUTION:** Folding levers should be operated only when folding the stroller.



## USING THE PARENT CUP HOLDER



### Attaching the Cup Holder:

1. Locate slot on stroller handle.
2. Slide Cup Holder notch into slot.



### Removing the Cup Holder:

1. Press the button on slot of cup holder
2. Slide Cup Holder out.

## REMOVING/ATTACHING THE STROLLER PACK

### Removing:

1. Pull Velcro® strap from each side of the handle.
2. Remove strap from each loop.

### Attaching:

1. Locate the sides of handle.
2. Place the straps of the stroller pack above the screws on the sides of the handles.
3. Wrap straps around handle and thread through loop on each side.
4. Press straps to secure Velcro®.

## REMOVING/ATTACHING THE SEAT CUSHION

### Removing:

1. Unbuckle restraint system and detach harness hooks.
2. Pull seat pad forward to detach from stroller while pulling all harness straps through top and side slots in cover.
3. Unzip zipper at the base of seat cover and pull seat cushion to detach.

### Attaching:

1. Attach Velcro® at the bottom of the seat pad to Velcro® on the stroller base.
2. Pull top of seat pad forward; the seat pad can rest on front guard rail.
3. Insert buckle strap into slot at the bottom back of the seat pad.
4. Locate zipper on the back of the seat pad and locate the zipper in the seat bite of the stroller (The boot also has a zipper to attach the cover). Zip seat pad to stroller.
5. Insert harness straps with hooks and harness straps with buckle tongues through slots on back of seat pad.
6. Attach Velcro® on top of seat pad to stroller.

## REMOVING THE BASKET



1. Unhook and unloop the fasteners from the front and back of the stroller basket.
2. Slide the basket off the basket frame.

**CAUTION:** Do not place more than 10 lbs in the basket. Remove all items from the basket before folding the stroller.



## CAR SEAT ATTACHMENT INSTRUCTIONS

Combi Car Seat Adapters are compatible with the following infant car seats: Combi® Shuttle, Combi® Shuttle 33, Combi® Navette 22

### ATTACHING THE COMBI® SHUTTLE™ INFANT SEAT



**STEP 1:** Recline the backrest to the lowest position.

**STEP 2:** Snap carrier attachments onto both armrest. Pull up on attachments to confirm they are attached securely.

**STEP 3:** Insert Combi Shuttle infant carrier into the stroller, pressing down on both sides of carrier until it locks onto the carrier attachments.

**STEP 4:** Be certain that the Combi Shuttle is securely attached to the stroller by lifting up on the car seat handle.



### DETACHING THE COMBI® SHUTTLE™ INFANT SEAT



**STEP 1:** Squeeze center of red lever located on the back of the Combi Shuttle infant carrier while lifting carrier upwards to release from stroller.

**STEP 2:** To remove attachments, pull both sides of attachments away from stroller arm while lifting upward to remove.

**WARNING:** TO AVOID FINGER ENTRAPMENT, ALWAYS remove carrier attachments when you are not using the Combi Shuttle Infant Carrier.

## ROUTINE MAINTENANCE

**Store in a cool and dry area, especially in the summer. To avoid damaging stroller, NEVER place items on top of stroller during storage.**

### **Canopy, Restraint System, and Basket:**

Hand wash with a soft bristle brush. Wipe out excess water with a dry cloth and allow to dry in a shaded area. For stubborn dirt, dilute a mild detergent with warm water and apply directly to the dirty area. Wipe away the detergent with a warm, damp cloth.

### **Stroller Frame**

Briskly wipe off any mud and dirt. To clean the frame, wipe with a damp cloth then wipe out any traces of moisture on the frame with a dry cloth. If fabric is not dried completely, mold or mildew could occur. Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

### **Wheel Assemblies:**

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button, then wipe off mud and dirt. Do not use soap and water to wash wheels. Periodically check that all screws, bolts and nuts are tight.

**Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration.**

Add silicone\* to the wheel assemblies in small amounts. Do not use oil-based lubricants because oil attracts dust and would hinder the movement rather than improve it.

\*Silicone spray is available at most hardware stores.

## TROUBLESHOOTING

### **Stroller will not fold:**

- Ensure waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.

### **Difficult to steer or Stroller pulls to one side:**

- NEVER hang items from the handle.
- Make sure weight in basket is distributed evenly.
- Check that brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

### **Navigating curbs:**

Pulling the stroller backwards, while contacting the curb with the rear wheels makes going up a curb difficult and could pose a safety hazard. To safely move the stroller over a curb, lift the handle up and place the rear wheels onto the curb, then pull the stroller backward until the front wheels are also over the curb.

### CLEANING THE SEAT



Hand Wash



Do Not Use Bleach



Dry Flat



Do Not Iron



Do Not Dry Clean



## LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

---

### Combi USA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273  
Customer Service 1.800.992.6624