

Combi®

Twin Cosmo™

Instruction Manual

CombiUSA.com



Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTION FOR FUTURE USE. Record the following
information for quick reference.

Note: Illustrations and photographs are only representative and not actual.
Attach copy of sales receipt for future reference.

Date of Purchased: _____

Model Number: _____ - _____ (Located near rear of basket)

Color: _____

CombiUSA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273

Customer Service 1.800.992.6624

WARNINGS & GENERAL SAFETY INFORMATION



WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT – ALWAYS USE RESTRAINT SYSTEM. NEVER LEAVE CHILD UNATTENDED! PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

In the event of damage or problems, discontinue use and contact Combi Customer Service for instructions: 1-800-992-6624

All operating and assembly procedures should be performed by an adult:

- Avoid serious injury from falling or sliding out. Always use restraint system.
- Never lift and carry the stroller while occupied. The stroller may fold.
- Never allow your child to stand in or on the stroller..
- Never carry more than one child in stroller. Do not allow a child to ride or sit on areas of the stroller other than seat.
- Never leave child unattended.
- Never use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.
- Never hang items on the handle or place items on canopy. This could cause the stroller to become unbalanced or tip over.
- Always engage the brake when parking the stroller.
- Never allow children to lean over sides of stroller. It may become unbalanced and tip over.
- Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition. Do not load more than 10 lbs (4.5kg) in the basket.
- To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected or folded, and locked in position before allowing your child near the stroller.
- Completely remove all plastic bags and packing material before using this product to prevent a possible choking hazard.
- When Combi Shuttle infant seat is attached, ALWAYS ensure it is secure by pulling up on the handle.
- ALWAYS secure your child with the infant carrier restraint system before using it with the stroller.
- The guardrail MUST be attached to the stroller before attaching the infant carrier.
- To ensure your child's safety, please refer to the Combi Shuttle instruction manual before using it with the stroller.
- If unable to securely attach the Combi Shuttle to your stroller, discontinue use and contact Combi Customer Service.
- To prevent tipping: do not place more than 1.0 lbs (.045 kg) in the parent cupholder.
- Never carry stroller by using the Combi Shuttle infant car seat handle.
- TIPPING HAZARD: Never place weight on rear of infant seat while attached to the stroller. This could cause the stroller to become unbalanced and tip over.
- Stroller is intended for walking speed only. NEVER use while jogging, skating, etc.
- Child may slip into leg opening and strangle. Never use in reclined carriage position unless the permanently attached safety cover is used.
- Not locking the swivel wheels before folding the stroller can damage the wheels.
- To avoid finger entrapment or pinching, use care when folding and unfolding the stroller. Be certain the stroller is fully erected and locked in position before allowing your child near the stroller.


Use only the Combi Shuttle infant carrier with this stroller.

Total Maximum weight of the children MUST NOT exceed 90 lbs (45 kg), 45 lbs per seat.

Total Maximum weight of Canopy pocket MUST NOT exceed 1.0 lbs (0.45 kg).

This product meets or exceeds all requirements covered in the ASTM F833 Standard Consumer Safety Performance Specification for Carriages and Strollers.


NAME OF PARTS

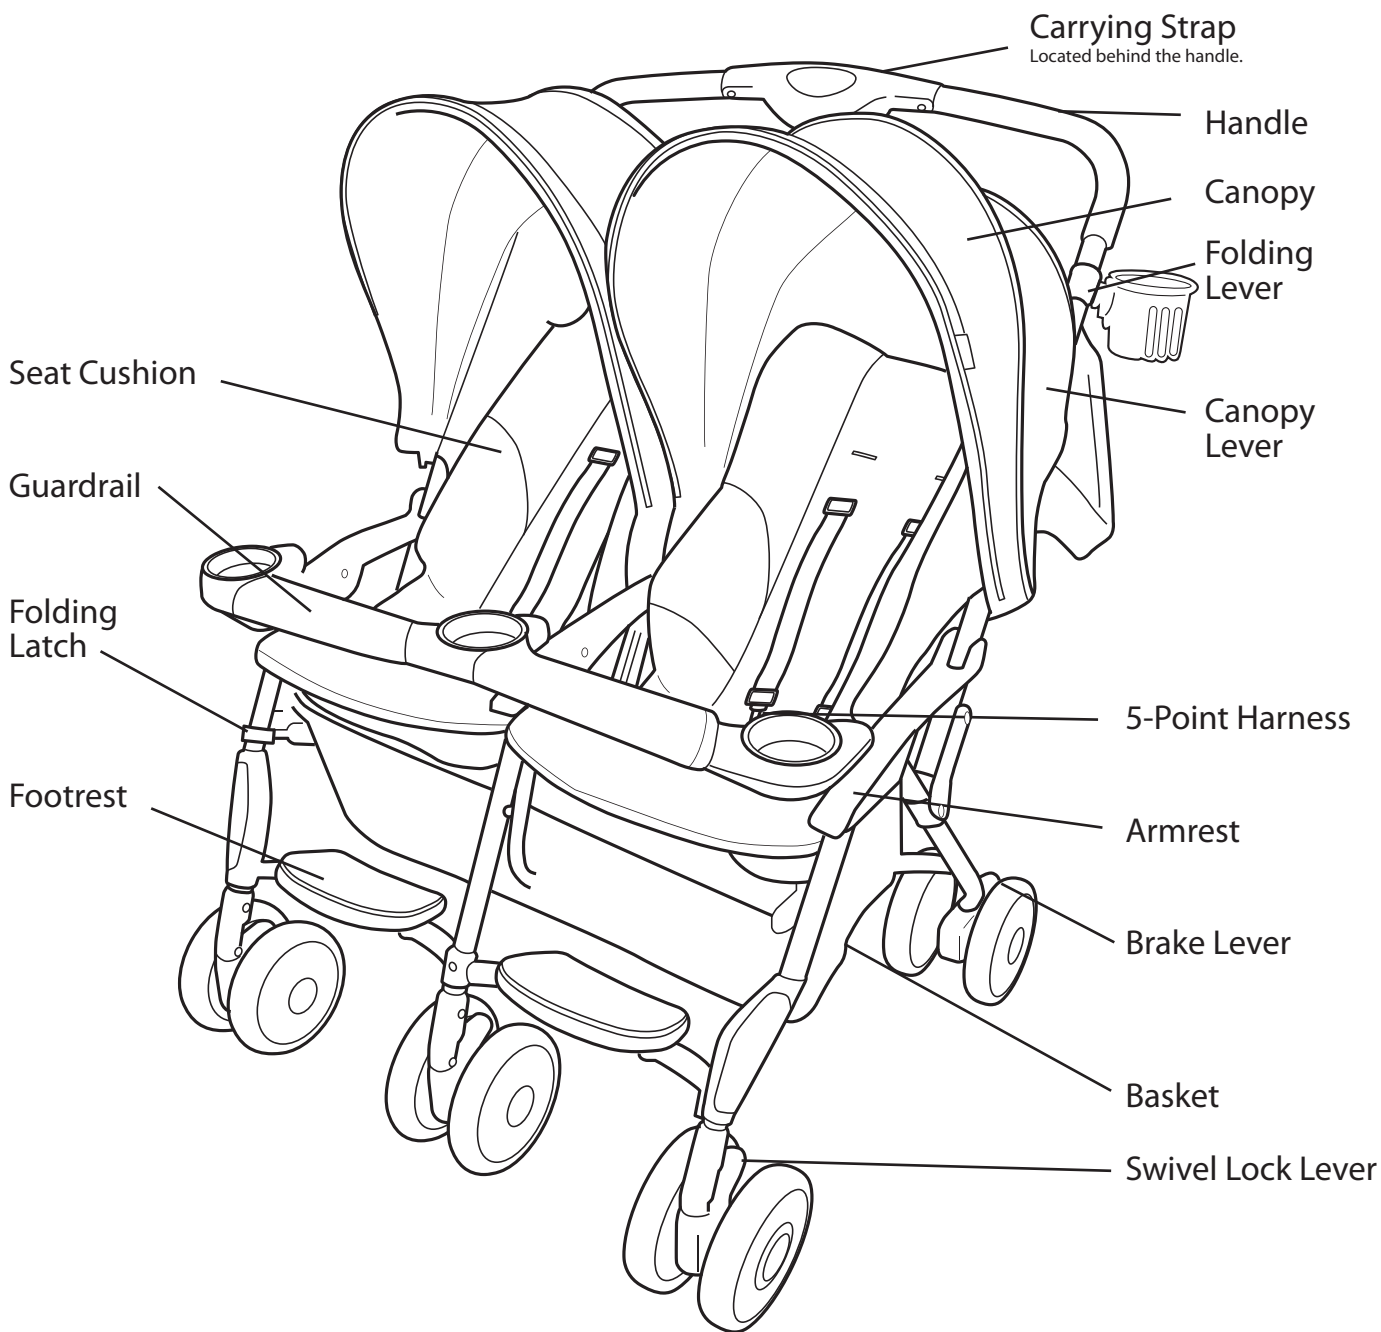

Note: All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Due to continuous product improvements, the pictures displayed in the instruction manual may differ slightly from the actual product. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.


STROLLER ASSEMBLY

OPENING THE STROLLER

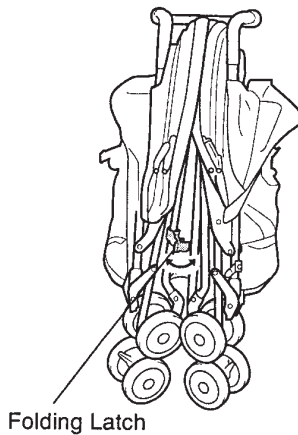

Folding Latch

1. Release latch by pulling it up.

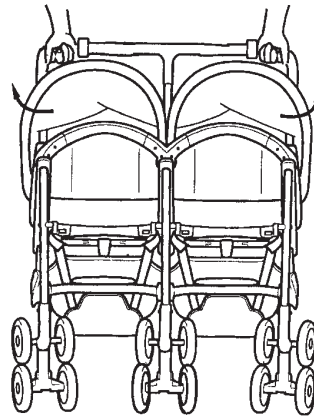


2. Grip the handle on each side and turn outward to open. (Holding from underneath will make this process easier.)




3. Lift handle and snap the stroller away from you. It will open and lock automatically into position.

ATTACHING THE CANOPY

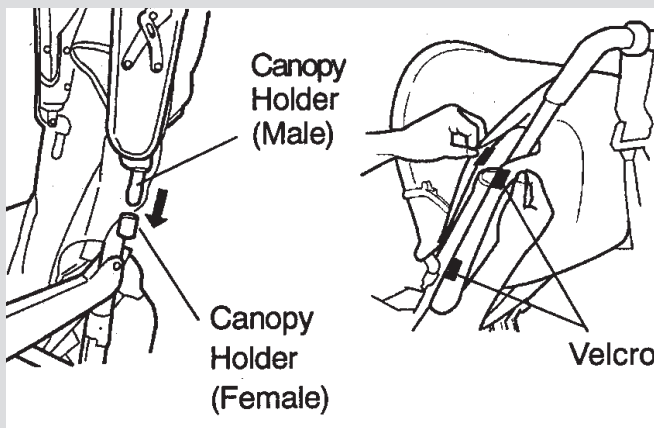

Attaching the Canopy:

1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) into the canopy holder (female) until a click is heard.
3. Fasten the canopy Velcro® together around the handle (2 places).

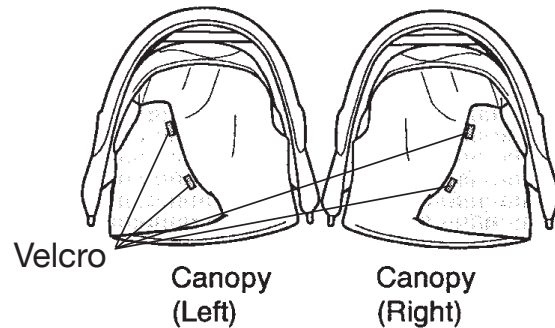


Removing the Canopy:

1. Pull the Velcro® apart.
2. Squeeze the bottom of the canopy holder (male) and pull the canopy up from above the canopy holder (female). This must be done on both sides of the canopy to completely remove it.

CAUTION: Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller (by laying it down), be sure the canopy is off the ground to prevent bending. NEVER place items on top of canopy during storage. Always close canopy before folding stroller.

STROLLER ASSEMBLY

ATTACHING THE COMBI® SHUTTLE INFANT SEAT

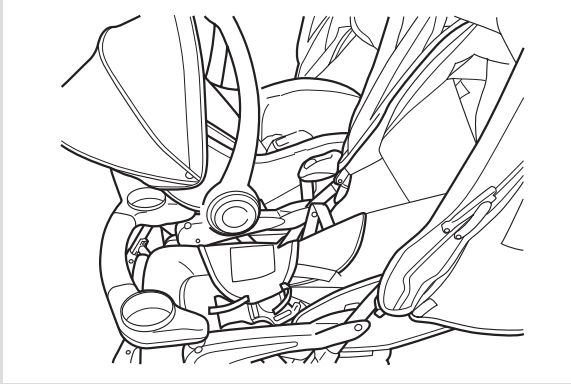

1. Insert Combi Shuttle infant carrier into left side of stroller seat (while facing the stroller). Ensure bottom of Infant Seat rests on stroller seat.



2. Press top and bottom of infant seat down into stroller until it locks in place.


3. Find the car seat attachment straps located under the seat pad. Route car seat attachment straps through the Shuttle™ vehicle belt path. (Refer to the Shuttle™ instruction manual for additional information.) Buckle the car seat attachment straps. Lift up gently on handle to ensure seat is secure.

WARNING: After installation, lift car seat to verify it is securely locked onto the stroller. Infant car seat **MUST** be attached to the stroller in the rear facing position only.

REMOVING INFANT SEAT

Pull red release lever on Combi Shuttle, while lifting up to release from stroller.


USING THE SWIVEL WHEELS

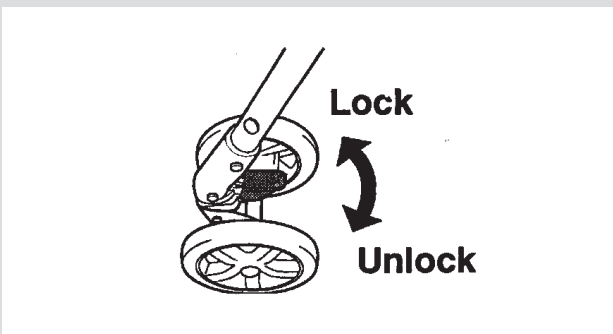

To Lock Swivels: Make sure the lock lever is behind the stroller frame; the lift both swivels lock levers up.

To Unlock Swivels: Push both swivel lock levers down.

USING THE BRAKES

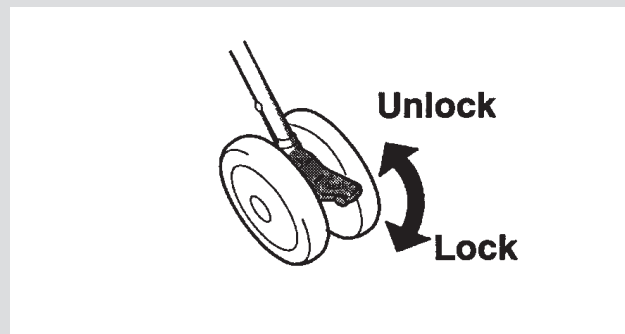


To Lock Brakes: Push both brake levers down.

To Unlock Brakes: Lift both brake levers up.

CAUTION: Push the stroller forward to ensure that the brakes are properly engaged.

STROLLER ASSEMBLY

ADJUSTING THE RECLINING BACKREST

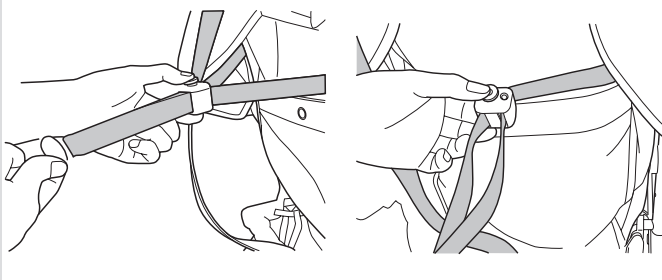


1. To place the backrest in the upright position, press and hold down the button on the recline mechanism and pull the strap tight while pushing the recline mechanism toward the seat back.

2. To achieve a full recline, press and hold down the button on the recline mechanism and pull downward.

Use CAUTION when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.


USING THE GUARDRAIL

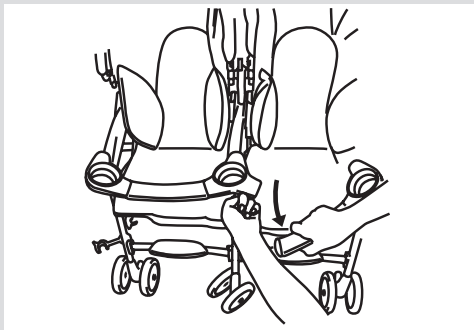


To remove individual sides of the guardrail:

1. Press release button on the underside of the center section of the guardrail and pull out.

Note: To rotate either side of the guardrail to permit easy access, release center button and swing the guardrail out.

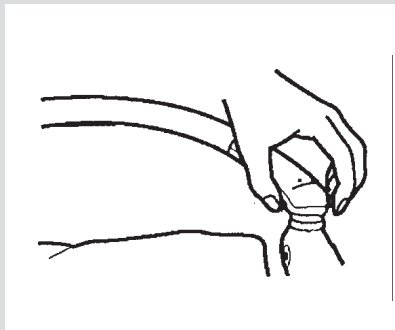

2. Squeeze the buttons on the outside of the stroller and lift up to remove one side of the guardrail.

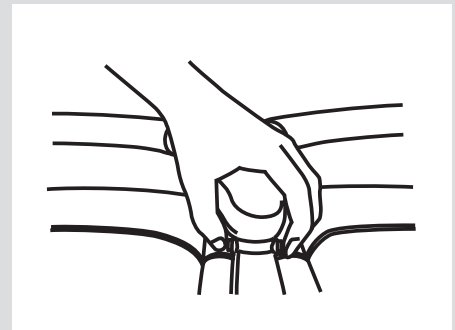


To remove the complete guardrail:

1. Squeeze both buttons on the underside of the middle section and lift up.

2. Squeeze the buttons on the both outside sections of the stroller and lift up to completely remove the guardrail.


STROLLER ASSEMBLY

USING THE HARNESS

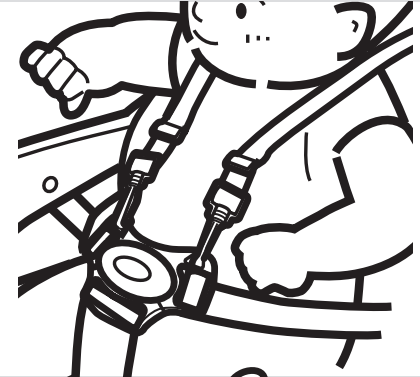

Buckling the Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into buckle.
3. Lift buckle with tongues inserted and attach right and left tongue.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

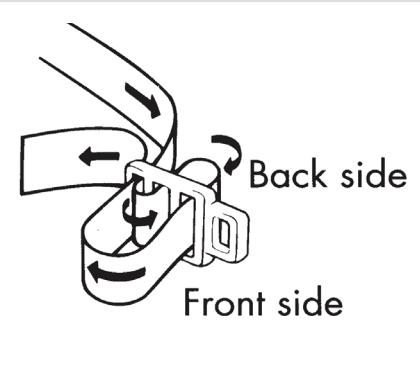


Unbuckling the Harness

1. Press levers down on right and left harness hooks to detach from buckle tongues.
2. Press button down (with Combi logo) and detach buckle tongues from buckle.




WARNING Avoid serious injury from falling or sliding out. Always use the 5-point harness.


HARNESS HEIGHT ADJUSTMENT

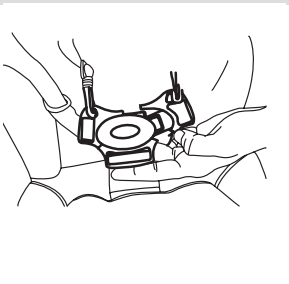


1. Unhook the shoulder straps from the center buckle.

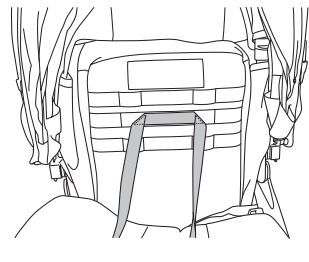

2. Pull the back seat cushion forward and pull the shoulder straps through the seat cushion.

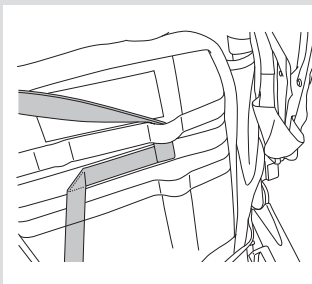

3. To raise the height, thread both shoulder straps through the upper two loops. To lower the height, thread the shoulder straps through the lower two loops.

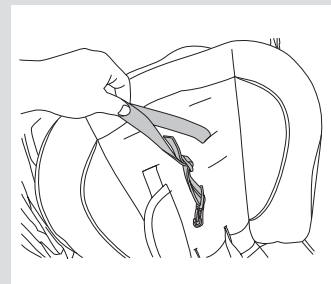



4. Thread the shoulder straps through the appropriate slot of the seat cushion depending on which height the straps are set.

STROLLER OPERATION

FOLDING THE STROLLER



1. ALWAYS lock both front swivel wheels. Not locking the swivel wheels before folding the stroller can damage the wheels.
2. Empty the basket.
3. Lock all front swivel wheels.
4. Make sure seat backs are in the upright position.
5. Fold both canopies by lifting up on the canopy levers.
6. Remove all items from the canopy pocket.
7. While lifting up the folding levers on both sides of the handle, tilt the stroller back until it folds together.
8. Turn handle inward with an underhand hold and attach folding latch.

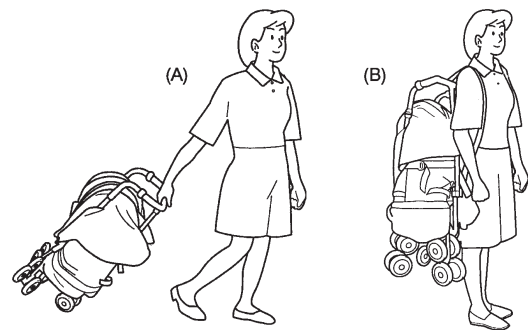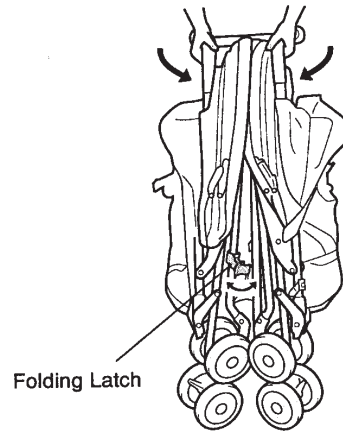


The stroller can be pulled behind you as shown in (A) or carried over your shoulder as shown in diagram (B).

CAUTION: Before folding the stroller, unfasten and store the safety cover (boot) under the seat. The stroller will not fold with it attached to the guardrail.

STROLLER OPERATION

REMOVING/ATTACHING THE SEAT CUSHION

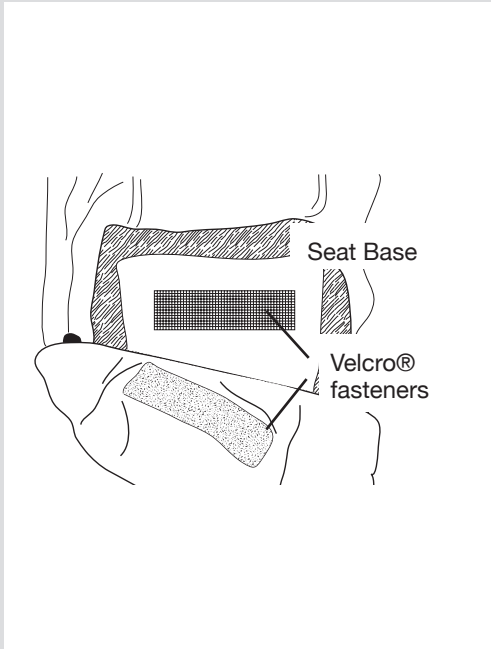

Removing


1. Press levers down on right and left harness hooks to detach hooks from buckle tongues.
2. Press buckle button down and detach buckle tongues from buckle.
3. Pull top of seat pad forward to detach Velcro®.
4. Pull all the harness straps through the top and side slots in cover.
5. Unzip zipper at the base of the seat cover.
6. Pull bottom of seat pad upward to detach Velcro®.

Attaching


1. Attach Velcro® at the bottom of the seat pad to Velcro® on the stroller base.
2. Pull top of seat pad forward; the seat pad can rest on the front guard rail.
3. Insert buckle strap into slot at the bottom back of the seat pad.
4. Locate zipper on the back of the seat pad and locate the zipper in the seat bite of the stroller. Zip seat pad to the stroller.
5. Insert harness straps with hooks and harness straps with buckle tongues through slots on back of seat pad.
6. Attach Velcro® fastener on top of seat pad to stroller.

CAUTION: If seat cushion is ripped or torn, do not use. Do not use the stroller without the seat cushion.

REMOVING & ATTACHING THE FRONT SWIVEL WHEELS

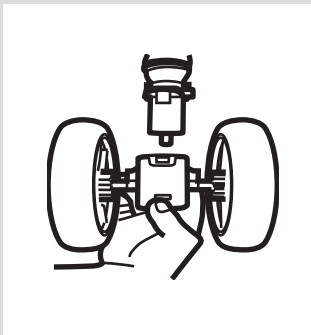


Place front swivel wheel assembly on the swivel shaft. The assembly is secure when it locks onto the shaft.

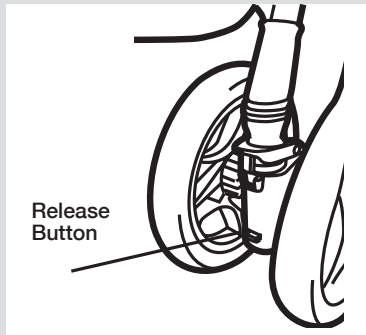

To remove the Swivel Wheels

Press in the square release button located at the bottom of the wheel holder while pulling the assembly off of the swivel shaft.

REMOVING THE BASKET

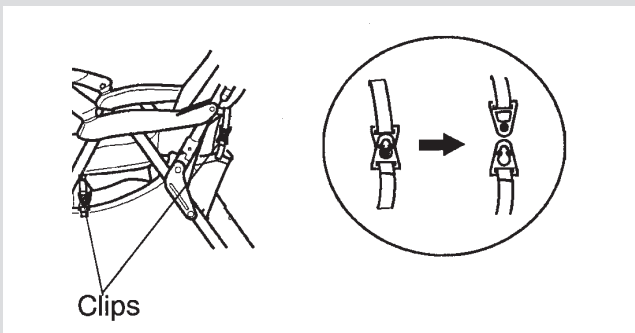

1. Unhook and unloop the fasteners from the front and back of the stroller basket.
2. Slide the basket off the basket frame.

CAUTION: Do not place more than 10 lbs. in either basket. Remove all items from the basket before folding the stroller.

ROUTINE MAINTENANCE

Store in a cool and dry area, especially in the summer. To avoid damaging stroller, NEVER place items on top of stroller during storage.

Canopy, Permanently Attached Seat Base, Restraint System, and Basket:

Hand wash with a soft bristle brush. Wipe out excess water with a dry cloth and allow to dry in a shaded area. For stubborn dirt, dilute a mild detergent with warm water and apply directly to the dirty area. Wipe away the detergent with a warm, damp cloth.

Stroller Frame

Briskly wipe off any mud and dirt. To clean the frame, wipe with a damp cloth then wipe out any traces of moisture on the frame with a dry cloth. If fabric is not dried completely, mold or mildew could occur.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

Wheel Assemblies:

After prolonged normal use, the wheels of your stroller may not swivel or turn as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, remove the swivel wheels by pressing in the release button, then wipe off mud and dirt. Do not use soap and water to wash wheels. Periodically check that all screws, bolts and nuts are tight.

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration.

Add silicone* to the wheel assemblies in small amounts. Never use oil-based lubricants because oil attracts dust and would hinder the movement rather than improve it.

*Silicone spray is available at most hardware stores.

TROUBLESHOOTING

Stroller will not fold:

- Ensure waist belt is not caught in the side.
- Make sure front swivels are locked.
- Remove all items from the basket.

Difficult to steer or Stroller pulls to one side:

- NEVER hand items from the handle.
- Make sure weight in basket is distributed evenly.
- Check that brakes are not in the locked position.
- Clean and add silicone to wheels, if necessary.

Difficult to get up curbs:

- Pulling stroller backwards makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

CLEANING THE SEAT



Machine Wash



Do Not Use Bleach



Dry Flat



Do Not Iron



Do Not Dry Clean

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CombiUSA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273
Customer Service 1.800.992.6624