



High Chair

Instruction Manual

Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTION FOR FUTURE USE. Record the following information for quick reference.

Note: Illustrations and photographs are only representative and not actual.
Attach copy of sales receipt for future reference.

Date of Purchased: _____

Model Number: _____ - _____ (Located near rear of basket)

Color: _____

CombiUSA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273

Customer Service 1.800.992.6624

WARNINGS & GENERAL SAFETY INFORMATION



WARNING

FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS COULD RESULT IN SERIOUS INJURY OR DEATH.

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT – ALWAYS USE RESTRAINT SYSTEM. NEVER LEAVE CHILD UNATTENDED! PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

In the event of damage or problems, discontinue use and contact Combi® Customer Service for instructions: 1-800-992-6624

All operating and assembly procedures should be performed by an adult:

- The child should be secured in the high chair at all times by the restraining system, either in the reclining or upright position. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.
- Prevent serious injury or death from falls or sliding out. Always secure child in restraint system.
- Do not use this high chair for more than one child at a time and do not leave other children playing unattended near the high chair.
- To avoid the risk of fire, never leave the high chair near sources of strong heat such as open fires, electric heaters, and gas stoves. If the high chair is exposed to direct sunlight, wait for it to cool down before placing your child in it.
- Adjust the 5-point harness according to the size of your child. Adjust for every recline position.
- Do not leave the high chair near walls, curtains, or windows, where the child can become tangled, or where a child may be able to use its feet to push against the high chair.
- Never place the high chair near stairs or steps.
- Do not adjust the height or recline of product with the child in it.
- Do not move the product with the child in it.
- ALWAYS use seat belt.
- Never leave child unattended. Always keep your child in view.
- Do not place any heavy bags, packages, or other items on the high chair tray. They may cause the high chair to tip over.
- Do not use accessories, spare parts, and components other than those supplied by Combi®.
- **STRANGULATION HAZARD:** Do not place product in any location where there are cords, such as window blind cords, phone cords, etc.
- Do not force tray against child. Use only the three adjustment positions. Always ensure both sides of tray are locked in place.

This product is designed as a high chair for use with child up to 3 years of age. Total maximum weight of child MUST not exceed 40lbs (18kg).

This product meets or exceeds all requirements covered in the ASTM F404 Standard Consumer Safety Specification for High Chairs.

Note: All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.

OVERVIEW

Note: All products specifications are subject to change without notice. Sizes and weights are intended as guides and are approximations. Due to continuous product improvements, the pictures displayed in the instruction manual may differ slightly from the actual product. Combi® reserves the right to modify the products in its line during the course of the year. Non contractual media. Colors are as accurate as the media in which they appear allows.

HIGH CHAIR ASSEMBLY

ATTACHING THE SEAT CUSHION AND HARNESS



1. Place the seat cushion on the seating area of your high chair. Route the shoulder straps through the slots in the backrest.



2. Gently pull the top portion of the seat cushion over the backrest.



3. Fit the recline lever through the slot at the top of the seat cushion.



4. Route the waist belt portion of the harness into the slots at the rear of the high chair. Repeat on the opposite side of seat.



5. Route the crotch belt portion of the harness into the slot behind the middle post.



6. Pull bottom portion of seat cushion over middle post.



7. Attach snaps to both side of the seat cushion as shown.



8. Attach the Velcro to the post of the footrest.

HIGH CHAIR ASSEMBLY

REMOVING THE SEAT CUSHION AND HARNESS

Follow the previous directions of “Attaching the Seat Cushion and Harness” in reverse.

ATTACHING/REMOVING THE TRAY



Attaching The Tray: Squeeze the adjuster lever located under the tray while placing the tray onto the main body of the high chair. Pull the tray to ensure that it is secure before use.



Removing The Tray: Squeeze the adjuster lever for the tray while pulling the tray away from the high chair.

ADJUSTING THE TRAY



1. Squeeze the adjuster lever located under the tray and position the tray to the desired use position.
2. Pull the tray to ensure that it is secure before use.

WARNING: Do not force tray against child. Use only the three adjustment positions. Always ensure both sides of tray are locked in place.

ATTACHING/REMOVING THE SNACK TRAY



Attaching The Snack Tray


Place the snack tray over the tray and snap into place on both sides.

Removing The Snack Tray

Pull up on both sides to release the snack tray from the main tray.

HIGH CHAIR OPERATION

UNFOLDING AND FOLDING THE HIGH CHAIR

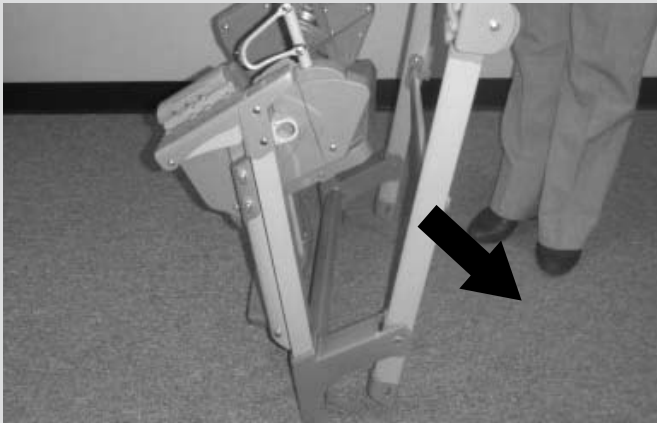

1. To unfold the high chair, hold the backrest while pushing down on the rear leg assembly until the rear leg assembly locks into position



2. To fold the high chair, pull up on the folding mechanism on each side of the high chair while leaning the high chair back, then pull up on the rear leg assembly until the rear leg is upright.

ADJUSTING THE HEIGHT



1. Squeeze the height adjustment buttons on both sides of your high chair while pulling up or lowering down to adjust the high chair to your desired position. There are 5 height use positions.



STORAGE POSITION

WARNING: *The lowest position is not a use position. This position is for storage purposes only.*

WARNING: *Do not adjust the height of product with the child in it.*

HIGH CHAIR OPERATION

USING THE HARNESS

Buckling the Harness

1. Place the crotch belt between the baby's legs.
2. Insert buckle tongues into each side of buckle.
3. Lift buckle with tongues inserted and attach right and left harness hooks to holes in buckle tongues.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle and adjust to desired position.

Unbuckling the Harness

1. Press levers down on right and left harness hooks to detach shoulder straps from buckle tongues.
2. Press center buckle button down while gently pulling buckle tongues from buckle to release.



WARNING: Avoid serious injury from falling or sliding out. Always use the 5-point harness.


ADJUSTING THE RECLINING BACKREST



1. Pull up on the recline lever and adjust the backrest to the desired position. There are 3 recline positions.

WARNING: Do not adjust recline of product with the child in it.

MOVING THE HIGH CHAIR

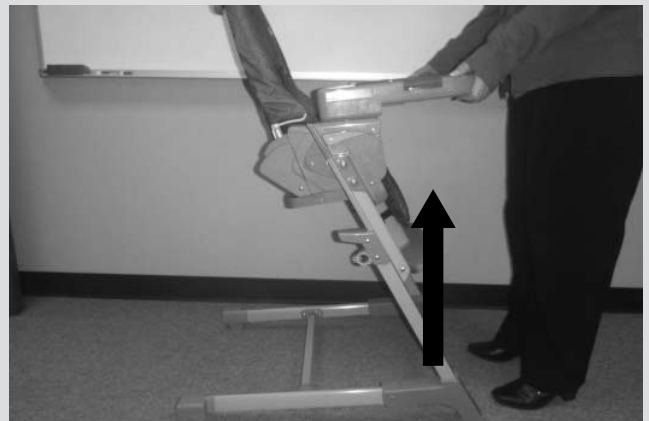

1. Lift up the front legs off the floor. You can then move the high chair freely on the rear wheels.

WARNING: Do not move the high chair with the child in it.

HIGH CHAIR OPERATION

PREPARING THE HIGH CHAIR FOR STORAGE



1. Adjust the height of the high chair to the storage position.
2. Fold the rear legs as shown.
3. Remove the tray from the main body.
4. Notice the location shown on the tray and rear leg to retain the tray for storage.
5. Place the tray on the rear leg.



ROUTINE MAINTENANCE

Store in a cool and dry area, especially in the summer.
To avoid damaging stroller, NEVER place items on top of the high chair during storage.

Seat Cushion and Restraint System:

Wipe soiled area with a warm, damp cloth.

High Chair Frame

To clean the frame, wipe with a warm, damp cloth then wipe out any traces of moisture on the frame with a dry cloth.

CLEANING THE SEAT



Hand Wash



Do Not Use Bleach



Dry Flat



Do Not Iron



Do Not Dry Clean

TROUBLESHOOTING

In the event of damage or problem, discontinue use and contact Combi Customer Service for instructions at 1-800-992-6624.

LIMITED WARRANTY

1. Combi USA Products, when purchased from an authorized retailer; are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from date of purchase. Combi products purchased from unauthorized retailers are not covered under warranty. Warranty is valid for products purchased and used in the U.S. only and used in compliance with the warrantor's use and maintenance instructions. Save your carton and receipt. These items may be required in case of return for warranty assistance.
2. During the warranty period your Combi product will either be repaired or replaced, at the warrantor's discretion, without charge for replacement parts if it is purchased from an authorized Combi dealer and is found to be defective in workmanship or materials. For service, call 1-800-99-Combi (1-800-992-6624). For warranty service, please contact your Combi retailer. The warrantor shall not be responsible for any costs incurred by the consumer in returning a defective product for repair. The consumer will be responsible for all shipping and handling for replacement parts.

This limited warranty shall not apply to normal wear to the product, or if the product has been:

- a. Damaged due to accidents, misuse, abuse or neglect as determined by Combi.
- b. Tampered with or repaired by any one other than an authorized Combi representative or with parts other than Combi approved parts.
- c. Leased or rented for commercial use.

THE WARRANTY PROVIDED HEREIN IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED. WARRANTOR'S OBLIGATIONS AND THE CONSUMER'S OR OTHER BUYER'S REMEDIES UNDER THE LIMITED WARRANTY ABOVE ARE EXCLUSIVE AND ARE STRICTLY LIMITED TO REPAIR OR REPLACEMENT AS STATED. ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ON THE PART OF THE WARRANTOR AND ANY SUPPLIER OR DEALER ARE HEREBY ALSO EXPRESSLY EXCLUDED.

Some states limit or do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

.....
CombiUSA, Inc.

3520 Westinghouse Blvd., Suite B • Charlotte, NC 28273
Customer Service 1.800.992.6624