

Operating Instructions

 
MicroScreen Tabletop Projection Screen by Draper

⚠ **Caution**



- ① Read instructions through completely before proceeding; retain for future reference.
- ② Do not write on viewing surface.
- ③ This screen is for indoor use only.
- ④ Screen must rest on a flat surface. Do not use on slanted or uneven floors.
- ⑤ Do not use solvents or abrasives for cleaning.
- ⑥ Beware of pinching hands and fingers.

NOTE: Screen has been thoroughly inspected and tested at factory and found to be operating properly prior to shipment.

- ① Open all four leg supports 90 degrees to casing. Leg supports snap into correct position.


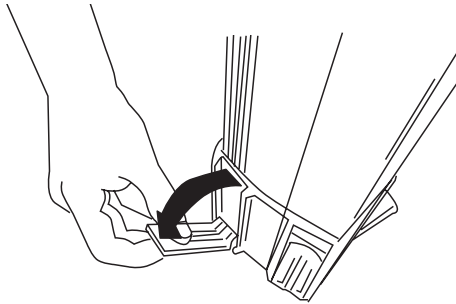


  - ② Place closed unit with carry handle on left side (from audience perspective). Depress two buttons on front and back of housing (clearly marked) with thumb and index finger. Open screen slowly to desired width.

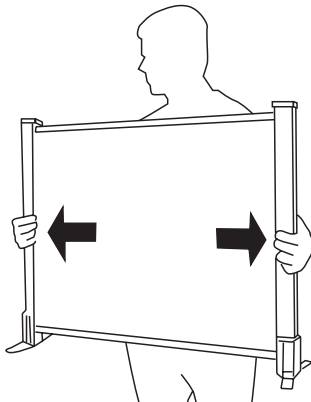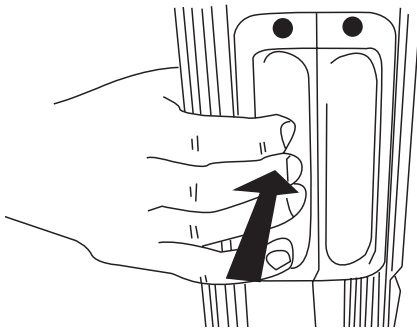

- ③ Place on flat and stable table and position for data projection viewing.
- ④ To close, repeat step two. Casing will automatically snap closed. Take care to close gently.

  
⚠ **Caution:** **Beware of pinch points.**

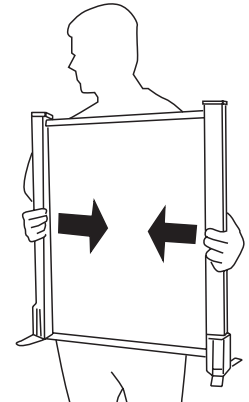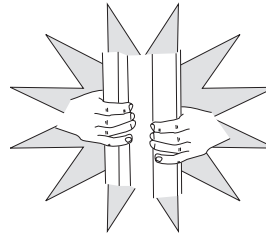

Note: Do not touch the screen surface. Handle the MicroScreen only by the case sides or handle.

- ⑤ To close leg supports, squeeze legs together at base of housing. Fold up to closed position. Legs will automatically snap into closed position.

 Caution: Take care not to pinch fingers between sides when closing.

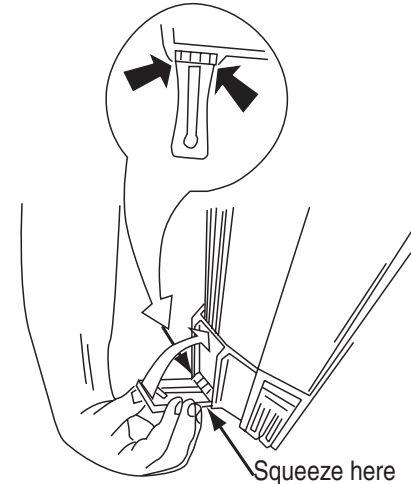

- ⑥ Place unit into protective storage bag.

Note: Do not allow screen surface to be exposed to direct sunlight, as it could fade matt white viewing surface. For presentation, place opened unit away from door drafts and fan air movement.

Dimensions

Diagonal (4:3 NTSC)	Overall Size (H x W)	Image Area (H x W)	Closed Dimensions (D x H x W)	Weight (lbs)
40"	28 ¹ / ₈ " x 36 ¹ / ₂ "	24" x 32"	3" x 3 ¹ / ₂ " x 28 ¹ / ₈ "	6
50"	34 ¹ / ₂ " x 44 ⁵ / ₈ "	30" x 40"	3" x 3 ¹ / ₂ " x 34 ¹ / ₂ "	6

DRAPER[®]

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999
www.draperinc.com ■ fax 765-987-7142

Copyright © 2010 Draper Inc. Form MicroScreen_Inst10-R Made in China

If you encounter any difficulties installing or servicing your screen, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999, or fax (765) 987-7142.