

Please Read and Save this Use and Care Book.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should

- Read all instructions.
- To protect against risk of electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of attachments, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used, but must be used only when the food processor is not running.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutting blade or discs on base without first putting bowl properly in place.
- Be certain cover is securely locked in place before operating appliance.
- Never feed food by hand. Always use food pusher.
- Do not attempt to defeat the cover interlock mechanism.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



10-CUP FOOD PROCESSOR PROCESADOR DE ALIMENTOS DE 10 TAZAS

Customer Care Line:

USA 1-800-231-9786

Accessories/Parts (USA)

1-800-738-0245

For online customer service and to register your product, go to www.prodprotect.com/applica

Servicio para el cliente:

México 01-800 714-2503

Accesorios/Partes (EE.UU.)

1-800-738-0245

Para servicio al cliente y para registrar su garantía, visite www.prodprotect.com/applica



MODELS/MODELOS

- FP2500
- FP2500B
- FP2500S

- Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

Note: The maximum rating is based on the chopping blade. Other attachments may draw significantly less.

POLARIZED PLUG (120V Models Only)
This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW
Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

The cord of this appliance was selected to reduce the possibility of tangling in or tripping over a longer cord. If more length is needed, only extension cords having an electrical rating not less than the appliance.

When using an extension cord, do not let it drape over the working area or dangle where someone could accidentally trip over it. Handle cord carefully for longer life; avoid jerking or straining it at outlet and appliance connections.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.



Product may vary slightly from what is illustrated.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

Note: Do not attempt to sharpen the cutting edges of the blades or discs. They are permanently sharpened at the factory and will be ruined if sharpened.

CLEANING

Note: Before cleaning, be sure unit is turned off and cord is unplugged.

- Completely disassemble processor parts before washing.
- Rinse parts immediately after processing for easy cleanup.
- Wipe base and feet with a damp cloth and dry thoroughly. Do not immerse base in liquid.
- All removable parts can be washed by hand or in a dishwasher.
- Do not use rough scouring pads or cleansers on any plastic or metal parts to clean.
- Do not allow blades or discs to soak in water for long periods of time.
- Remember to clean the internal shaft of the chopping blade; use a baby bottle brush to remove any clogged food particles.

1. Place cover over workbowl with the small latch to the right of the workbowl's handle.
2. Hold feed chute of workbowl cover and rotate cover clockwise until cover locks into place.
3. If using the large workbowl, place the wide-mouth feed chute on top of the cover with the small tab to the right of the workbowl's handle. Turn clockwise until it clicks into position over the handle.

Important: For your protection this appliance has an interlock system. The processor will not operate unless the workbowl, cover and wide-mouth feed chute are properly locked in place.

1. Place cover over workbowl with the small latch to the right of the workbowl's handle.
2. Hold feed chute of workbowl cover and rotate cover clockwise until cover locks into place.
3. If using the large workbowl, place the wide-mouth feed chute on top of the cover with the small tab to the right of the workbowl's handle. Turn clockwise until it clicks into position over the handle.

Locking Cover

1. Attach center post to workbowl. Place the workbowl on the base with handle turned to the right of the locking mechanism over the unlock symbol (■).- 2. Hold handle and rotate workbowl clockwise toward the lock symbol (■) until it clicks firmly into place. Be sure to lock the workbowl in place before attaching the blades and cover.

Locking Large Workbowl in Position

1. Turn the clear outer tabs and turn the center post clockwise until the lower tabs are free. Lift the post out.
2. To return to its original position, place center post into smaller opening in bottom of workbowl and turn counterclockwise until tabs snap into place.

Inserting / Removing Center Post

ASSEMBLING THE PROCESSOR

- Select a level, dry countertop where the appliance is to be used, allowing air space on all sides to provide proper ventilation for the motor.
- Wash removable parts as instructed in CARE AND CLEANING section.

They are very sharp.

- Please go to www.prodprotect.com/applica to register your warranty.
- **Important:** Handle chopping blades and slice/shred disc carefully.

GETTING STARTED

This product is for household use only.

How to Use

PULSE button is pressed.

HIGH and LOW

- You can control the size of the foods, from coarse to fine.
- Pulsing gives better control when chopping, mincing, mixing and blending foods. the food to fall to the bottom of the workbowl.
- The motor of the processor will run as long as the OFF/PULSE button is held down. Press the button and then release to allow the blades to stop running and PULSE mode. When released, the appliance stops.
- The OFF/PULSE button must be pressed and held for the appliance to operate in uniformly of foods being chopped.
- Use PULSE for short processing tasks. This lets you control the size and processor should be stored in OFF position and unplugged when not in use.

OFF/PULSE

The controls are located on the front of the base. Press PULSE, HIGH or LOW to select a function (see directions below).

CONTROLS

4. Insert the food pusher into the central tube of the wide-mouth feed chute. Turn clockwise to lock in place. The pusher is used to guide foods through the feed chute and can be removed when adding liquid or additional foods while the processor is running. To remove, turn counterclockwise.

CHOPPING IN LARGE / SMALL WORKBOWL

1. Lock workbowl into position.
2. Hold chopping blade by center shaft and insert onto center post.

Caution: Blade attachments are very sharp. Use caution when handling and storing.

3. Place food in workbowl.
4. Place cover on workbowl and lock into place by rotating clockwise.
5. Place the wide-mouth feed chute and food pusher in place.

Important: Never use your fingers to direct food through the chute.

6. Select your desired speed (PULSE, LOW or HIGH).

Note: Process foods for no more than a few seconds at a time. Pulsing produces excellent results and offers greater control.

Important: Be sure chopping blade has completely stopped spinning before removing cover from processor.

7. Press the OFF/PULSE button and allow blades to stop revolving before removing cover. Twist cover toward (■) to remove.
8. Unlock workbowl by turning it counterclockwise and lift off base.

Note: Remove bowl from appliance before removing blade to prevent food from leaking through the center opening of the bowl.

9. Carefully remove chopping blade.

10. Unplug appliance when not in use.

SLICING / SHREDDING IN LARGE WORKBOWL

1. Lock workbowl into position.
2. Place disc stem onto center post in workbowl.
3. Carefully place slice/shred disc on stem with appropriate side up (depending on work to be done).
4. Place cover on workbowl and lock into place by rotating cover clockwise.
5. Fill feed chute with food. Select regular opening or wide-mouth, depending upon size of food to be processed. Position food pusher over food.
6. Select PULSE, LOW or HIGH; press firmly on food pusher to guide food through processor, but do not force it.

Note: Heavy pressure on the pusher does not speed the work; use the pusher only as a guide. Let the processor do the work.

7. When finished, press OFF/PULSE and wait for disc to stop rotating before removing cover. Twist cover toward (■) to remove.
8. Carefully remove slice/shred disc. Unlock workbowl by turning it counterclockwise and lifting it off the base.
9. Unplug appliance when not in use.

BLACK & DECKER is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA
es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

Made and Printed in People's Republic of China
Fabricado e Impreso en la República Popular de China

© 2011 Applica Consumer Products, Inc.

500 W 120 V~ 60 Hz

Importado por / Imported by:

RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Piso# 3
[C1425FUG] C.A.B.A. Argentina.
C.U.I.T No. 30-70706168-1

Importado por / Imported by:

Rayovac de México SA de C.V
KM. 14.5 Carretera Puente de Vigas.
Col. Lechería, Tultitlán.

Estado de México.

C.P. 54940

México

Tel: (52) 5831-7070

Del interior marque sin costo

01 (800) 714 2503

Código de fecha / Date Code

2011/2-7-32E/S

