

COASTER[®]
FINE FURNITURE

102090 (B1&B2)

FIXED TOP DINING TABLE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY TIPS:





 


1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.










 

Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

PARTS IDENTIFICATION


A		TABLE TOP	1PC
B		BOTTOM BASE	2PCS
C		WOOD CAP	2PCS
D		MOUNTING PLATE	4PCS
E		METAL COLUMN	2PCS
F		TABLE LEG	4PCS
G		TRESTLE BAR	1PC

HARDWARE IDENTIFICATION

1		WRENCH	1PC
2		FLAT WASHER	12PCS
3		BIG LOCK WASHER	12PCS
4		HEX NUT	12PCS
5		ALLEN WRENCH	1PC
6		BOLT	8PCS
7		SMALL LOCK WASHER	8PCS
8		SCREW	16PCS
9		LEVELER	4PCS


STEP 1

Align and fasten trestle bar and table legs to metal column using flat washer, big lock washer and hex nut and tighten with wrench. Align and fasten mounting plate to table leg using screw and tighten with screw driver (not included).

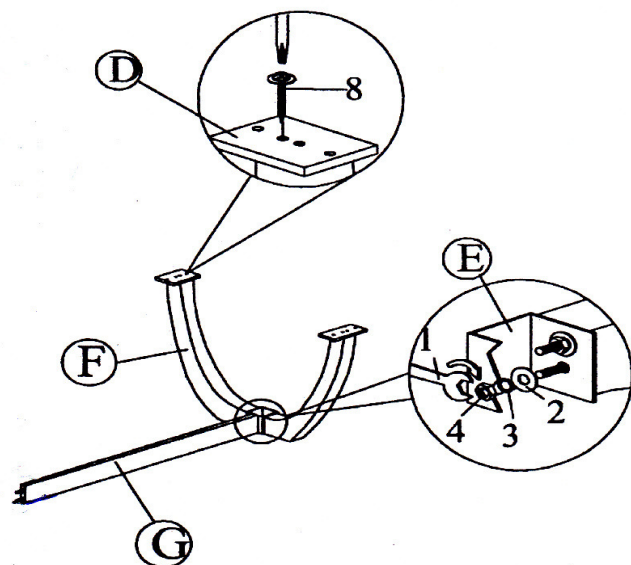


STEP 2

Flip table leg over. Align and fasten bottom base to table leg using bolt and small lock washer . Tighten bolts with Allen wrench. Screw in the leveler to the bottom base.

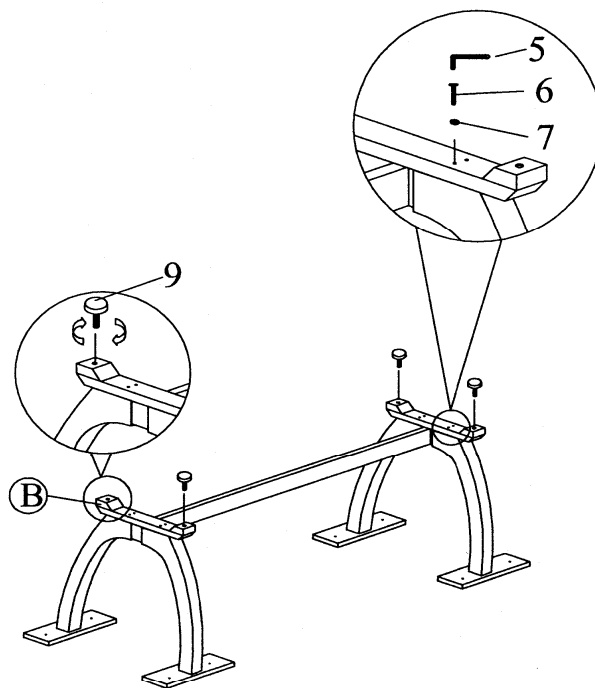

STEP 3

Place table top upside down on soft surface. Align and fasten mounting plate to table top using screw and tighten with screw driver (not included).

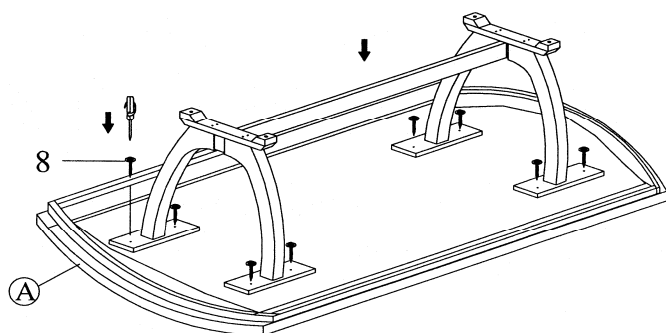

STEP 4

Flip table over using two people to lift and flip this table. Place the wood cap on to the metal column.

