 
 



 

 
 
 



Components and Hardware List

<p>5mm Allen Wrench</p>  <p>(A) 1 pc.</p>	<p>M5/16" x 2" Allen Head Bolt</p>  <p>(B) 9 pcs.</p>	<p>5/16" Spring Washer</p>  <p>(C) 25 pcs.</p>	<p>5/16" x 3/4" Flat Washer</p>  <p>(D) 25 pcs.</p>		
<p>M5/16" x 1-1/2" Allen Head Bolt</p>  <p>(E) 16 pcs.</p>	<p>Top</p>  <p>(F) 1 pc.</p>	<p>Side Leg Panel</p>  <p>(G) 2 pcs.</p>	<p>Middle Leg Panel</p>  <p>(H) 1 pc.</p>	<p>Adjustable & Bottom Shelf</p>  <p>(I) 4 pcs.</p>	<p>Tipping Restraint Kit</p>  <p>(J) 1 pc.</p>

1. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded. To prevent possible scratches or damages, assemble the table upside down on a soft surface such as a blanket or carpet, or it's own packaging materials.

2. Attach the two Side Leg Panels (G) and the Middle Leg Panel (H) to the Table Top (F) but **do not bolt together until after next step because Middle Leg can be assembled incorrectly.**

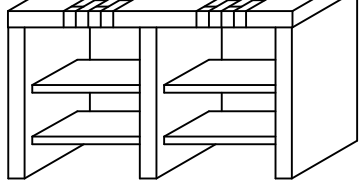3. Using an Adjustable Shelf, verify there is correct spacing between the three Leg Panels for the Adjustable Shelves. If the Adjustable shelves will not fit between the Leg Panels, lift the Middle Leg Panel out of it's pocket, turn half-way around and reinsert back into it's pocket. Check the Adjustable Shelves on each side again for fit.


4. Attach one Shelf (I) at the desired height and one at the lowest level of holes for a Bottom Shelf on each side, using the 1-1/2" Long Allen Head Bolts (E), Spring Washers (C), and Flat Washers (D).

5. Attach the Leg Panels to the Top using the 2" Long Allen Head Bolts (B), Spring Washers and Flat Washers.

6. Tighten all Bolts using the Allen Wrench (A).


7. Carefully turn the Table upright.

Levelers are installed into the bottom of the Leg Panels and can be used to compensate for uneven flooring if necessary.

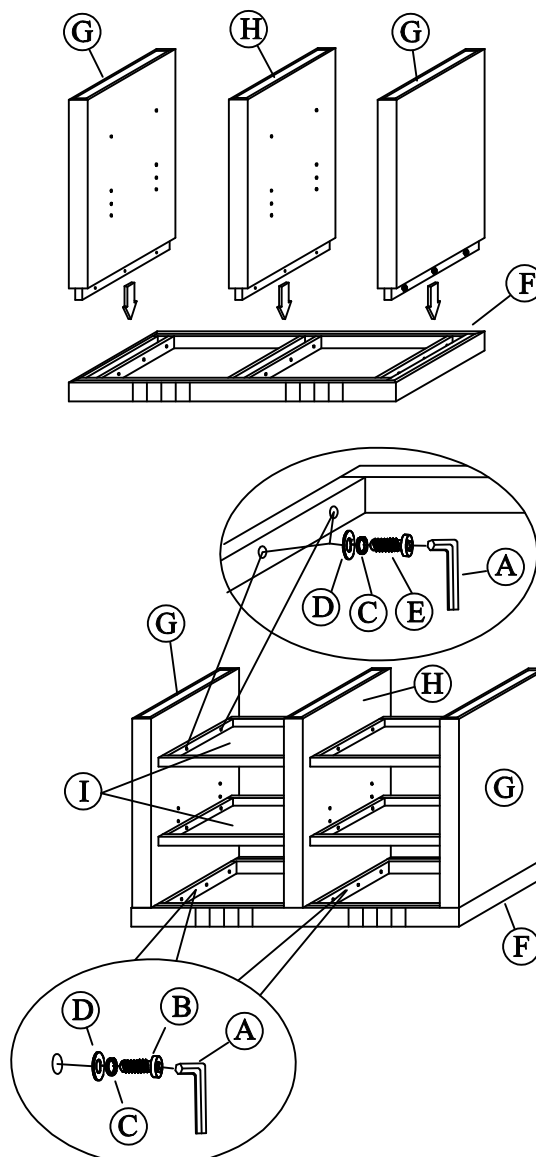

Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

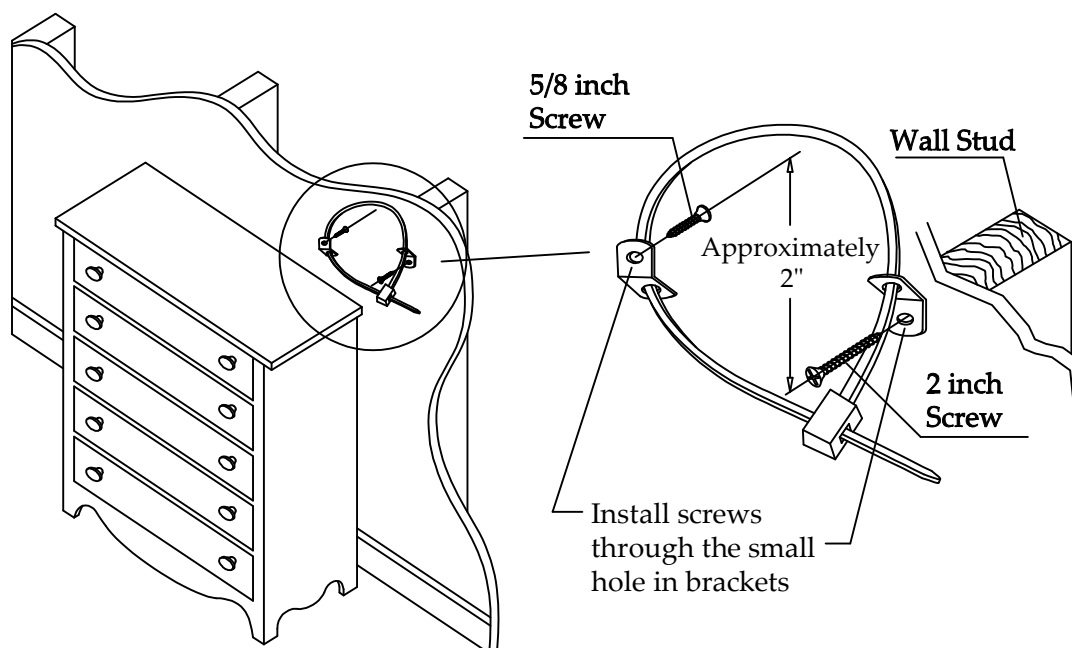

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.