

## Components and Hardware List

 <b>A</b> 1 pc.		 <b>B</b> 2 pcs.		 <b>C</b> 1 pc.		 <b>D</b> 1 pc.		 <b>E</b> 4 pcs.							
 <b>F</b> 4 pcs.		 <b>G</b> 4 pcs.		 <b>H</b> 1 pc.		 <b>I</b> 4 pcs.		 <b>K</b> 32 pcs.		 <b>L</b> 4 pcs.		 <b>M</b> 4 pcs.		 <b>N</b> 4 pcs.	



4941 / 8941  
48 Inch Bridge /  
Back Panel / Shelf

4944 / 8944  
63 Inch Bridge /  
Back Panel / Shelf

**Step 1:** Attach Plastic Blocks (L) to back of pier cabinets using Bolts (M).



**Step 2:** Move left and right piers to approximate final location, allowing appropriate space between piers for the TV console. Connect the Metal Plates (N) on top of each end of the Bridge using Wood Screw (K). Place Bridge in position between the piers and connect the Bridge to the Pier Deck using Allen Head Bolts (E), Spring Washers (F) and Flat Washers (G). Tighten with the Allen Wrench (H). Place upper and lower back panel against the wall behind the piers.

**Step 3:** Raise Upper Back Panel, placing top edge underneath wood Blocks and bottom edge resting on the plastic Blocks. Twist Plastic Block, locking back panel in position.

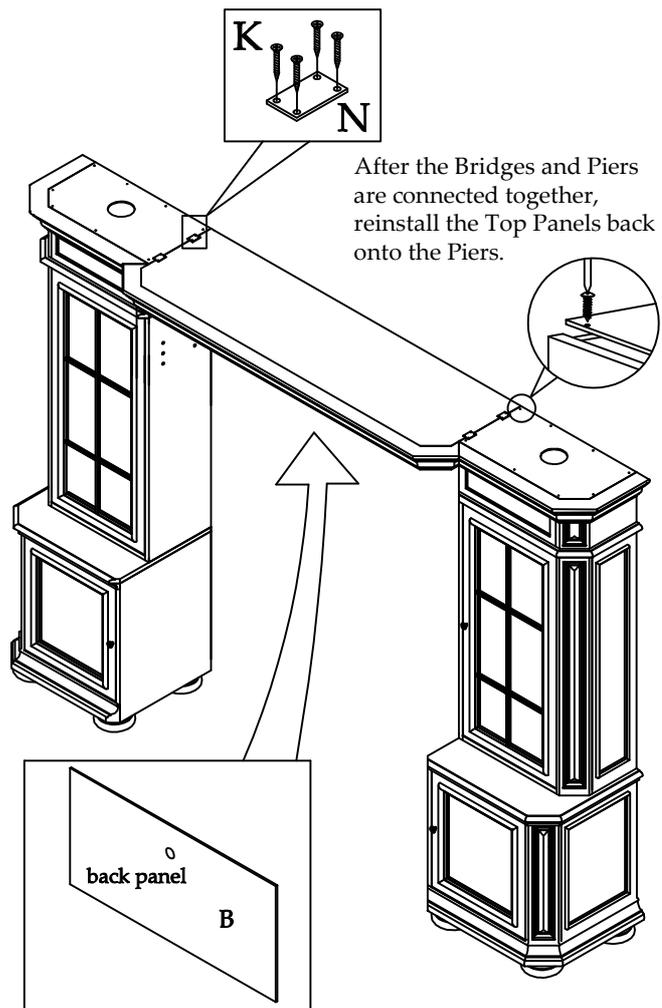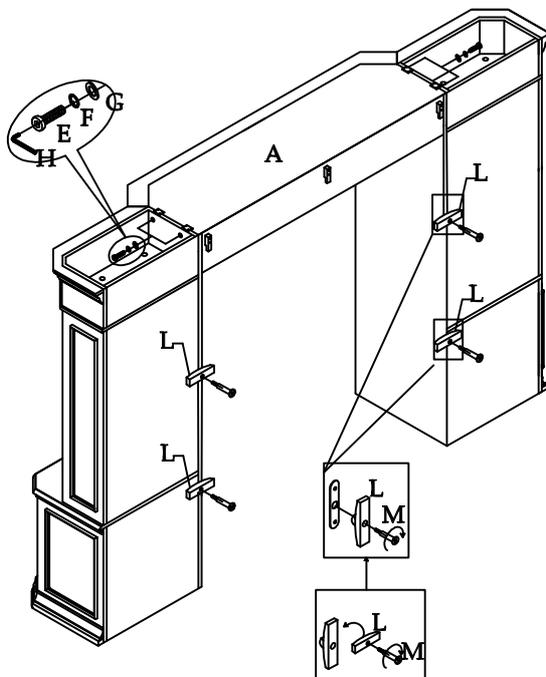

## Components and Hardware List


**Step 4:** Place Center Mullion (D) on top edge of bottom Back Panel. Raise both parts joining the top back panels and place lower edge of bottom back panel onto lower plastic Blocks. Twist plastic Blocks locking Back panel in position.

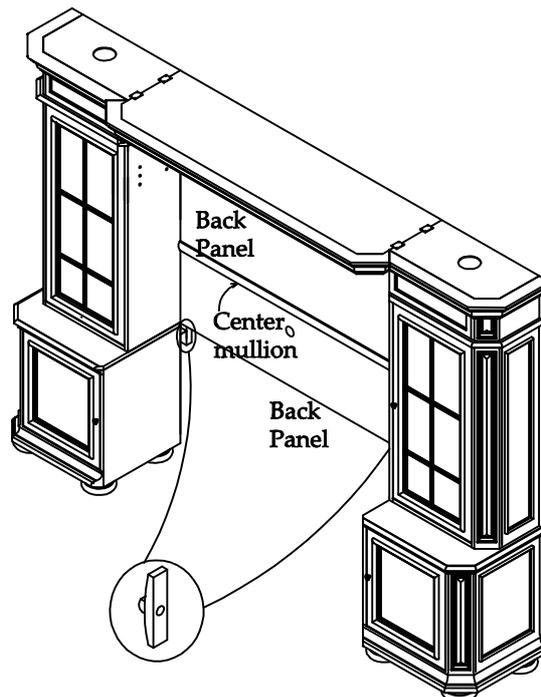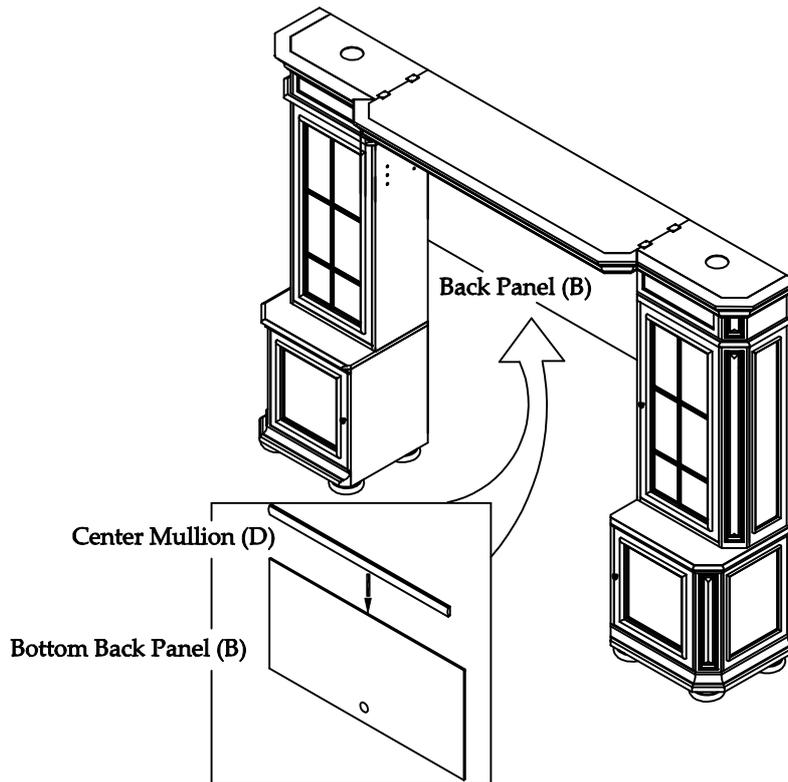

## Components and Hardware List



If 48" TV Console is used , use the 48" Bridge & Shelf  
If 63" TV Console is used, use the 63" Bridge & Shelf.

Step 5: Install the Shelf Pins (I) into the holes in the Side Panels, attach using the Wood Screws (K) and your Phillips Screwdriver. Place the Shelf on the Shelf Pins and connect using the Wood Screws as before.

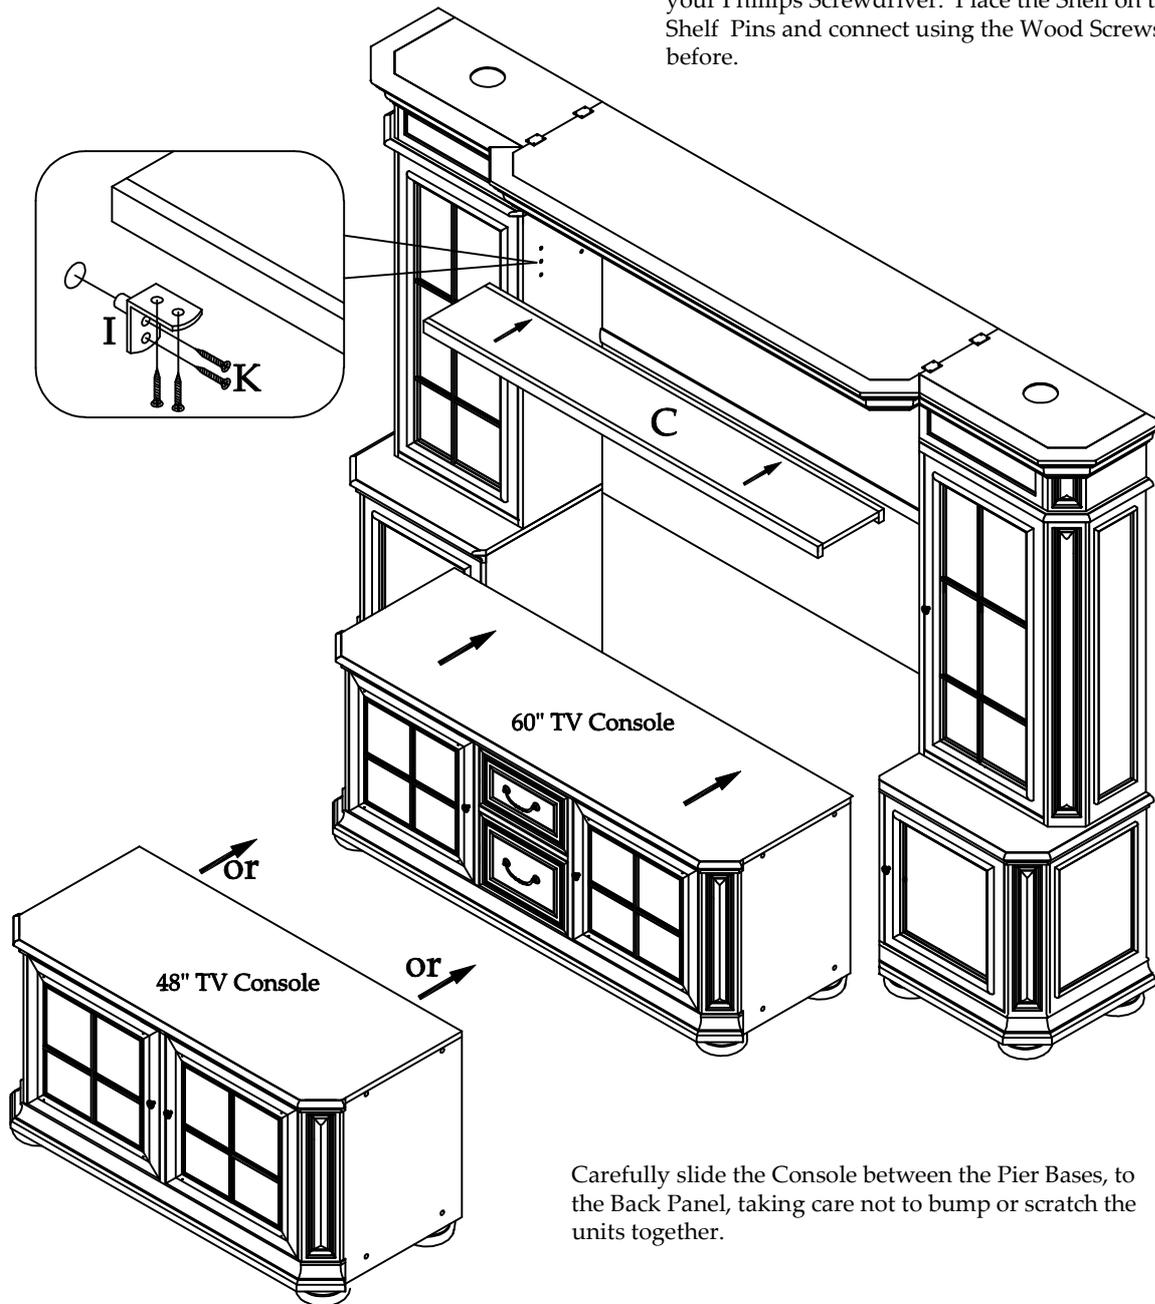

Carefully slide the Console between the Pier Bases, to the Back Panel, taking care not to bump or scratch the units together.

Product No.	Specie	Product Description	Product No.	Specie	Product Description
4945	Cherry	L/H Pier-Base	8945	Oak	L/H Pier-Base
4946	Cherry	L/H Pier-Deck	8946	Oak	L/H Pier-Deck
4947	Cherry	R/H Pier-Base	8947	Oak	R/H Pier-Base
4948	Cherry	R/H Pier-Deck	8948	Oak	R/H Pier-Deck
4940	Cherry	48 Inch TV Console	8940	Oak	48 Inch TV Console
4941	Cherry	48 Inch Bridge/Back Panel/Shelf	8941	Oak	48 Inch Bridge/Back Panel/Shelf
4943	Cherry	63 Inch TV Console	8943	Oak	63 Inch TV Console
4944	Cherry	63 Inch Bridge/Back Panel/Shelf	8944	Oak	63 Inch Bridge/Back Panel/Shelf

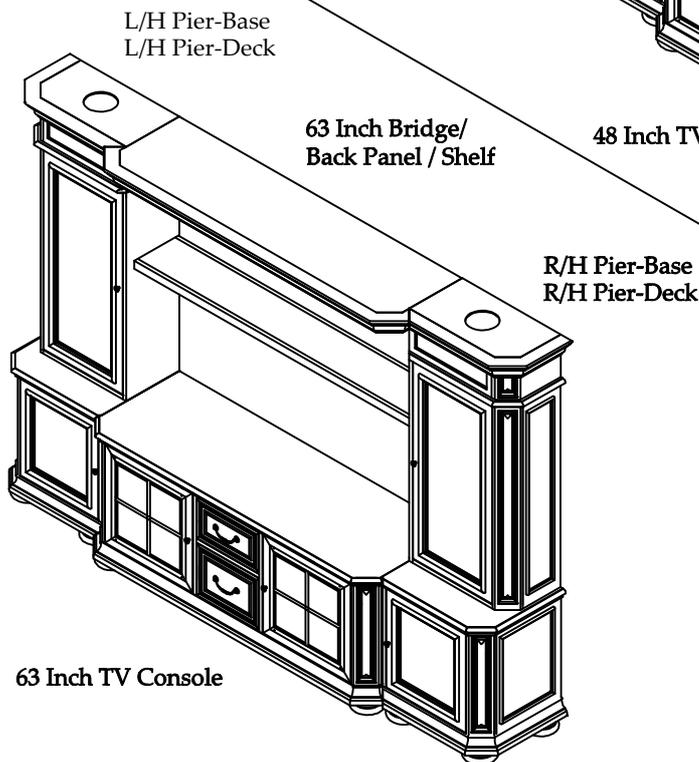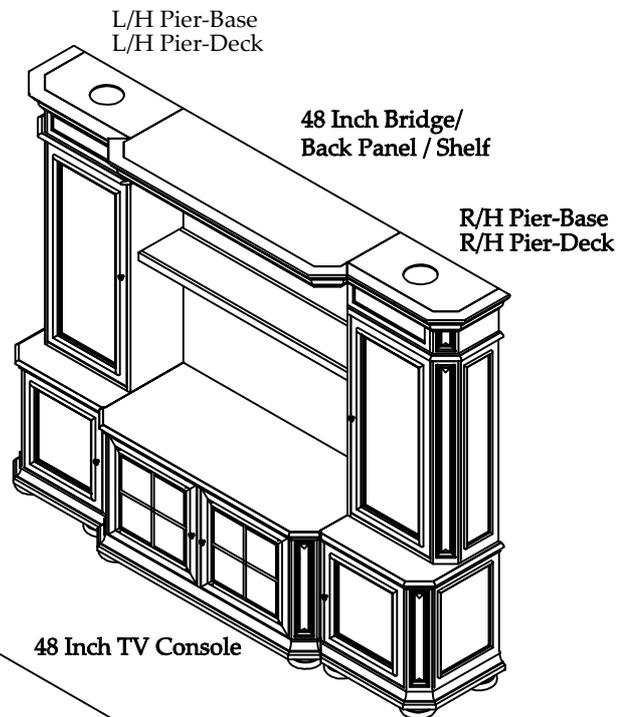

Please read all instructions for individual units for detailed instructions before beginning assembly.

In homes where small children may be present, the Consumer Product Safety Commission (CPSC) recommends that steps be taken for certain furniture items to prevent or minimize the risk of tipover. Certain pieces of Riverside furniture are equipped with Safety Bracket Hardware for use to minimize this risk.

**Caution:** These restraints are only a deterrent and do not constitute a guarantee against tip-over. This product is not to be a substitute for proper parental supervision. Please refer to the instructions printed on the furniture restraint package for proper installation instructions. Any damage to the furniture as a result of improper installation of these restraints will be the responsibility of the owner, not Riverside Furniture Corp. or its retailers. Such damage is not covered under the Riverside Furniture Corp.'s Warranty. Riverside Furniture assumes no liability for improper installation or excessive loads placed on screws, brackets or straps.

**To help prevent tip-over hazards, the United States Consumer Product Safety Commission offers the following safety tips:**

- Y* **Verify that furniture is stable on its own. For added security, anchor to the floor or attach to the wall all entertainment units, TV stands, bookcases, shelving and bureaus to the wall using appropriate hardware, such as brackets, screws, or toggles.**
- Y* **Place televisions on sturdy furniture appropriate for the size of the TV or on a low-rise base.**
- Y* **Push the TV as far back as possible from the front of its stand.**
- Y* **Place electrical cords out of a child's reach, and teach children not to play with the cords.**
- Y* **Remove items that might tempt kids to climb, such as toys and remote controls, from the top of the TV and furniture.**

### **General Assembly Instructions**

**Step A:** If anti-tipping hardware will be used, temporarily move Piers to near their final location in the room, allowing appropriate space between Piers for the Bridge. Determine the proper mounting location and install the anti-tip hardware to the top back of the units and onto the wall. Do not install the connecting strap until the last step.

**Step B:** Install hardware to the back of the Piers that is used to attach the back panels.

**Step C:** Position left and right Piers in approximate final location, allowing appropriate space between Piers for the TV Console and Bridge.

**Step D:** Install Bridge between top of Piers but do not fully tighten connecting bolts.

**Step E:** Install Back Panels.

**Step F:** Move TV Console into position between Piers, taking care not to bump or scratch units.

**Step G:** Gently move Piers against TV Console and install Connecting Bolts, if applicable. Tighten bolts connecting Bridge to the top of the Pier Cabinets.

**Step H:** Install the Shelf between the Piers.

**Step I:** Install the Connecting Strap for the Anti-Tipping Restraints.