 










 



### Components and Hardware List

<b>M5/16" x 3/4" Allen Head Bolt</b>  <b>(A)</b> 12 pcs.	<b>5/16" Spring Washer</b>  <b>(B)</b> 12 pcs.	<b>5/16" Flat Washer</b>  <b>(C)</b> 12 pcs.	<b>5mm Allen Wrench</b>  <b>(D)</b> 1 pc.
<b>Front Leg</b>  <b>(E)</b> 2 pcs.	<b>Back Leg</b>  <b>(F)</b> 2 pcs.	<b>Middle Leg</b>  <b>(G)</b> 1 pc.	<b>Console</b>  <b>(H)</b> 1 pc.
<b>Wire Hoops</b>  <b>(I)</b> 16 pcs.	<b>Anti-tipping Restraint</b>  <b>(J)</b> 2 pcs.	<b>Wood screw</b>  <b>(K)</b> 4 pcs.	



45058  
64 Inch TV Console

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

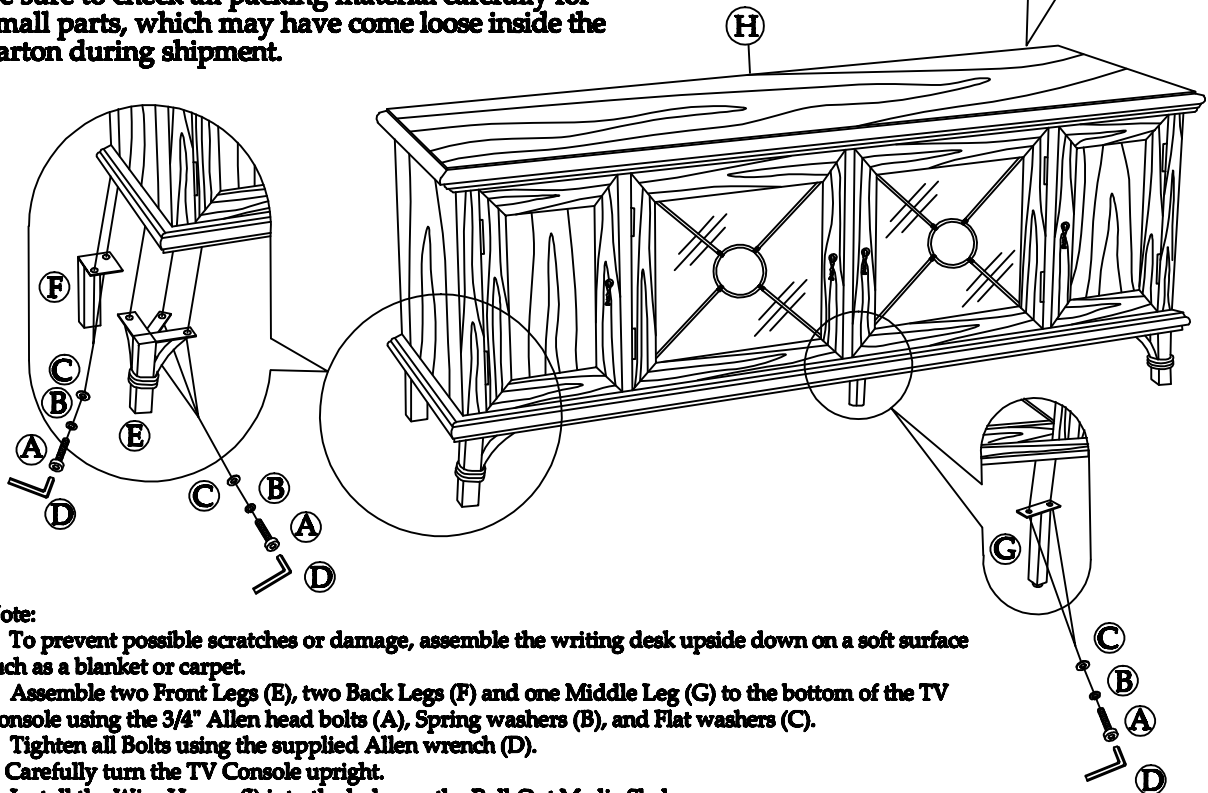

**Note:**

- To prevent possible scratches or damage, assemble the writing desk upside down on a soft surface such as a blanket or carpet.
- Assemble two Front Legs (E), two Back Legs (F) and one Middle Leg (G) to the bottom of the TV Console using the 3/4" Allen head bolts (A), Spring washers (B), and Flat washers (C).
- Tighten all Bolts using the supplied Allen wrench (D).
- Carefully turn the TV Console upright.
- Install the Wire Hoops (I) into the holes on the Pull-Out Media Shelves.
- If required, the TV Console can be adjusted using the levelers screwed into the bottom of the legs to compensate for uneven floors.

In homes where small children may be present, the Consumer Product Safety Commission (CPSC) recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over restraints for use to minimize this risk. Please refer to the instructions printed on the furniture restraint package for proper installation instructions.