 
 


 
 




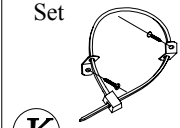

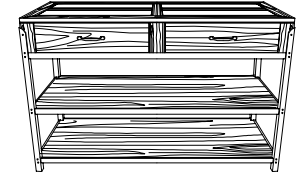
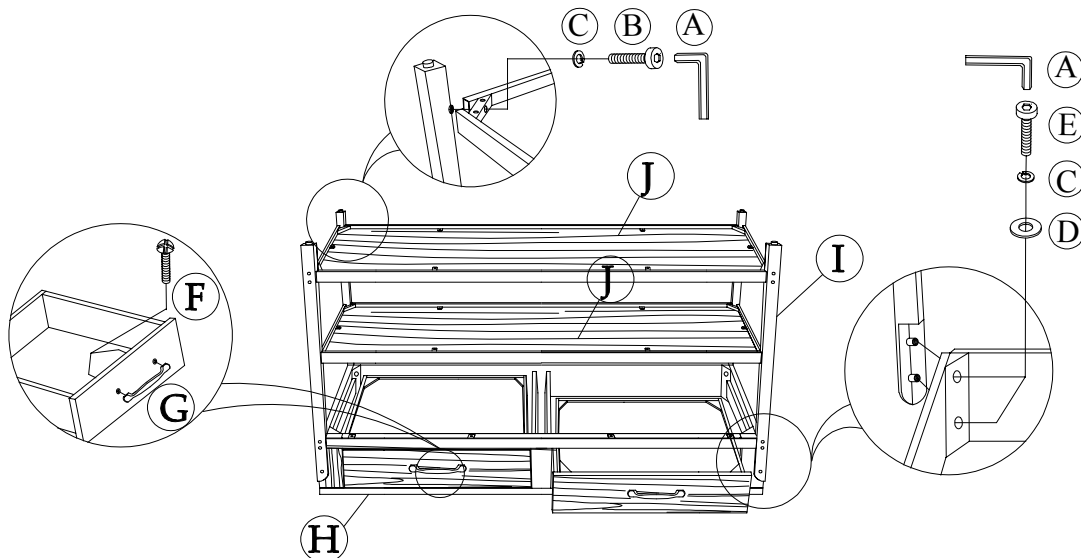


Components and Hardware List

<p>5mm Allen Wrench</p>  <p>A 1 pc.</p>	<p>M5/16" x 1 - 1/4" Allen Head Bolt</p>  <p>B 8 pcs.</p>	<p>5/16" Spring Washer</p>  <p>C 16 pcs.</p>	<p>5/16" x 22mm Flat Washer</p>  <p>D 8 pcs.</p>
<p>M5/16" x 2" Allen Head Bolt</p>  <p>E 8 pcs.</p>	<p>M5 x 3/4" Cross Head Bolt</p>  <p>F 4 pcs.</p>	<p>Drawer Pull</p>  <p>G 2 pcs.</p>	<p>Top With Apron</p>  <p>H 1 pc.</p>
<p>Leg</p>  <p>I 4 pcs.</p>	<p>Middle / Bottom Shelf</p>  <p>J 2 pcs.</p>	<p>Anti-Tip Restraint Set</p>  <p>K 1 pc.</p>	<p>Plastic hole cover</p>  <p>L 6 pcs.</p>




Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

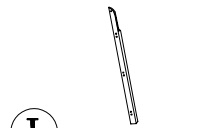

Note:

1. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded. To prevent possible scratches or damages, assemble the table upside down on a soft surface such as a blanket or carpet, or it's own packaging materials.
2. Remove the drawers, attach three Legs (I) to the the Top (H) using Flat washer (D), Spring washer (C) and Allen Head Bolts (E). Do not fully tighten bolts until after Step 4.
3. Attach the Middle & Bottom Shelf (J) to the Legs using Spring washer (C) and Allen Head Bolts (B). Do not fully tighten bolts until after next step.
4. Attach the fourth leg (I) to the Top With Apron (H), Middle & Bottom Shelf (J), using the same Washers and Bolts as in the previous steps.
5. Tighten all the Bolts using the Allen Wrench(A).
7. Carefully turn the Table upright.
8. Attach the Drawer Pulls (G) to the drawer using the Cross head bolts (F) and your screwdriver, then reinstall the drawers.
9. Levelers are installed into the bottom of the legs and can be used to compensate for uneven flooring if necessary. Note: There are six (6) extra plastic 'rivets', or hole covers included and are fastened underneath the table top. If, in the rare occurrence that one does come off of the legs, simply press a replacement back into the hole and carefully tap with a hammer to firmly set into the hole. Please keep for future use.

Notice: In homes where small children may be present, Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

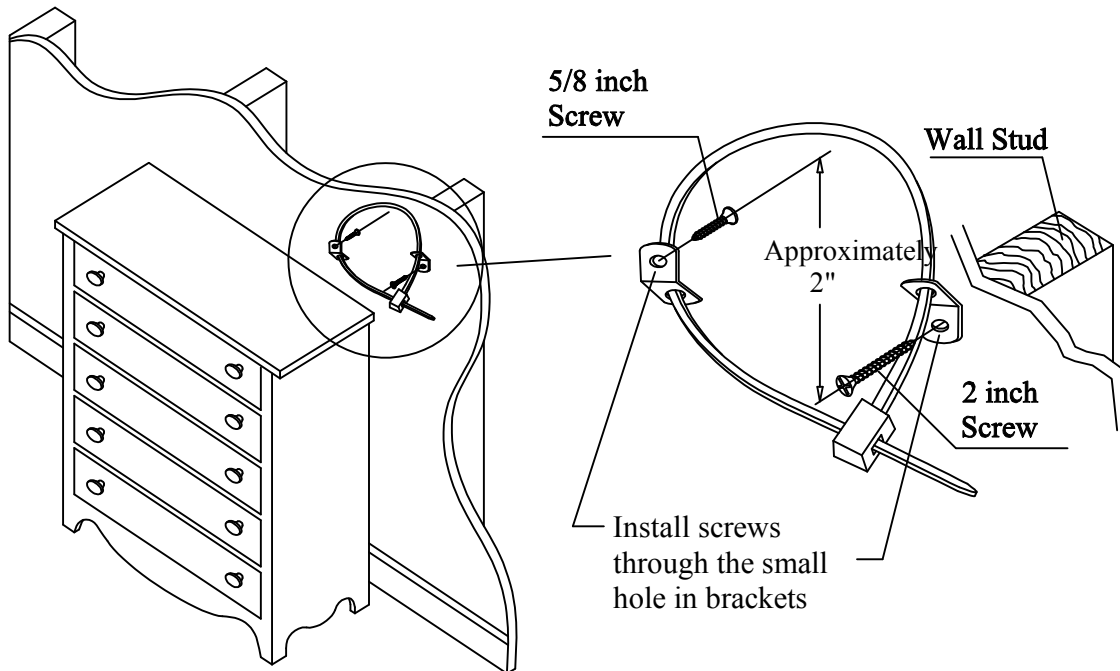

1. Temporarily locate the furniture to near its final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.