



Parts List


Shelf Pins

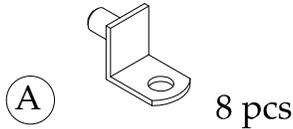


1/2" Long Wood Screw

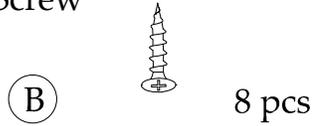



Wood Shelf

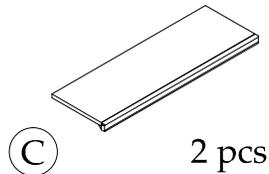

Bun Feet

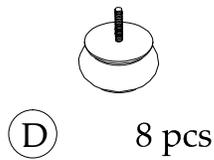


Anti-Tipping Restraint

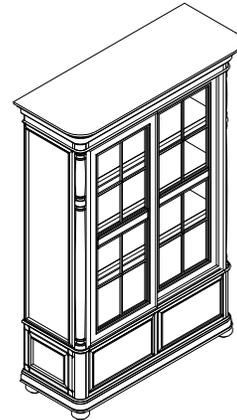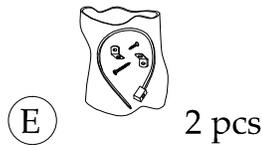


#24537
Sliding Door Bookcase

Doors

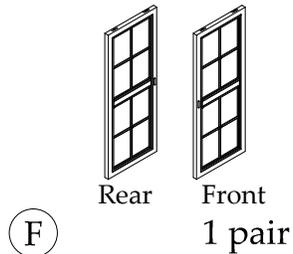

Position the Bookcase on it's back, on a soft surface such as a blanket or carpet. Install the Bun Feet with the levelers underneath the front corners of the Bookcase, and the Bun Feet without levelers underneath the back corners. Carefully set the Bookcase upright.

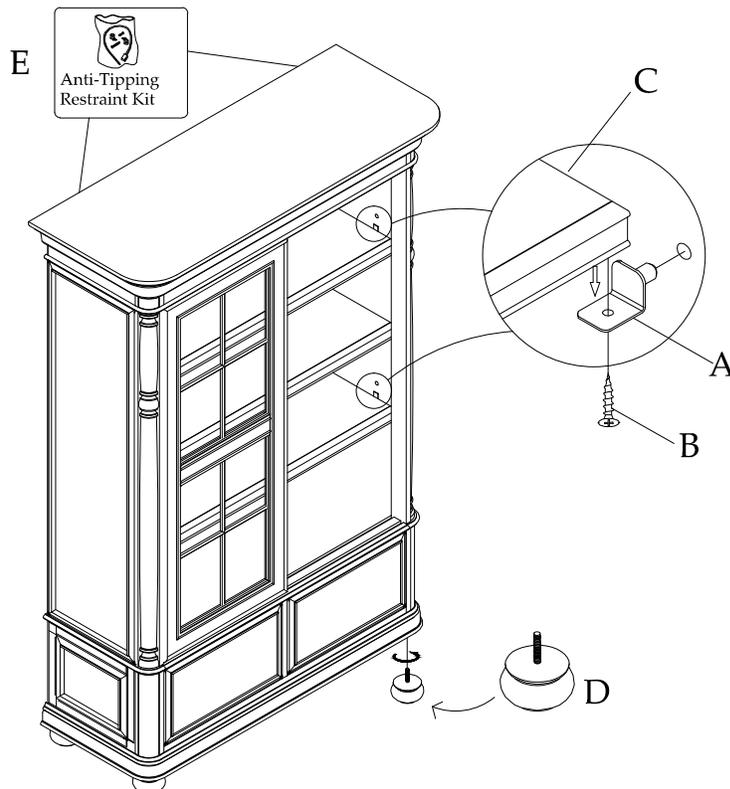


After moving the Bookcase to near it's final location in the room, install the Shelf Pins (A) into the selected level of holes. Place the Adjustable Shelves (C) on the pins.

Refer to next page for instructions to install sliding doors.

If required, the levelers underneath the front corners can be adjusted to compensate for uneven flooring. Using two people, have one person tilt the top of the Bookcase towards the wall while another person carefully reaches underneath and adjusts the levelers.

To install the Front and Rear Sliding Doors:

- A: The guide pins on the Upper Guides must be retracted by pressing down on the tip of the guide pin until it clicks and is locked in a retracted position.
 - B: Install Rear sliding door by placing the bottom guide rollers of the door onto the track installed in the shelf below.
 - C: Fix the top end by pressing in on the upper guide pin and pushing the pin upward, with the pin going into the groove above.
 - D: Repeat for the other door guide pin and repeat the previous steps to install the Front Door.
- Check both doors for smooth operation and fit. If required, door "fit" can be modified by adjusting the rollers at the bottom of the doors. Refer to the diagram below.

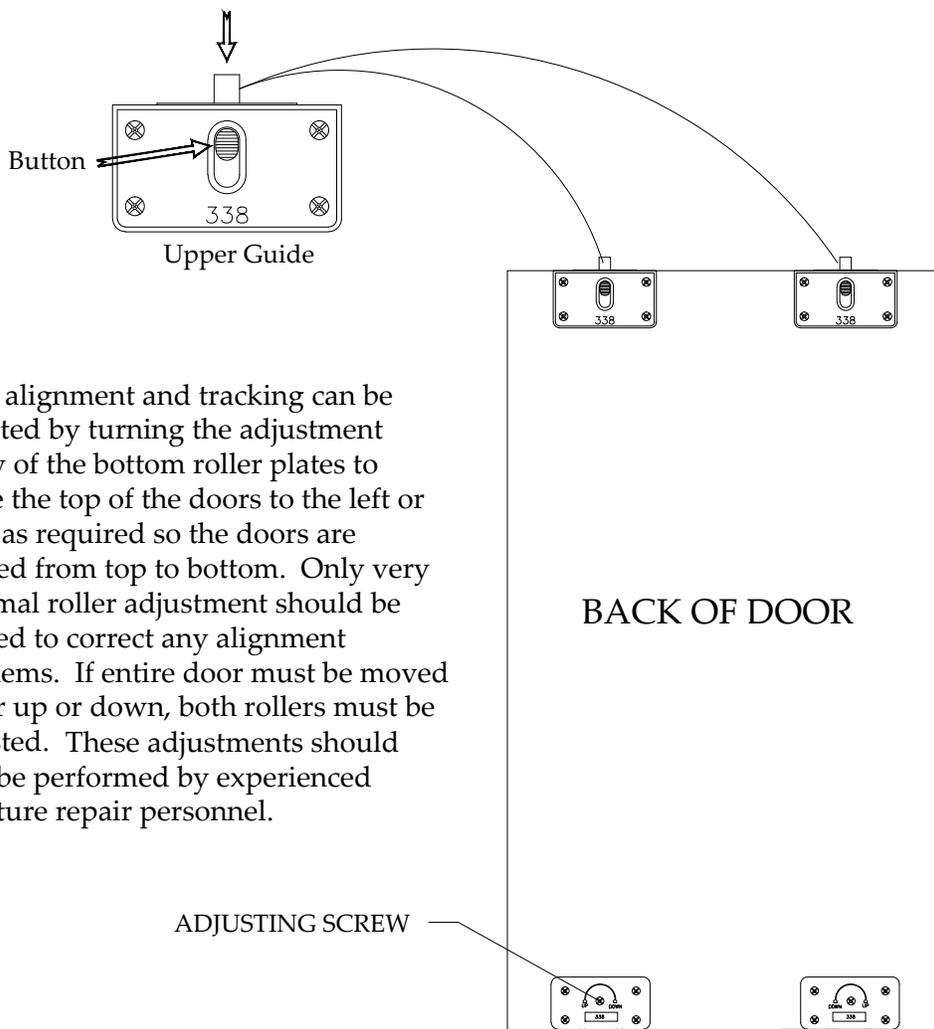


Door alignment and tracking can be adjusted by turning the adjustment screw of the bottom roller plates to move the top of the doors to the left or right as required so the doors are aligned from top to bottom. Only very minimal roller adjustment should be needed to correct any alignment problems. If entire door must be moved either up or down, both rollers must be adjusted. These adjustments should only be performed by experienced furniture repair personnel.

Adjusting this roller down will move the top of the door to the right. Adjusting roller up will move the top of the door to the left.

Adjusting this roller down will move the top of the door to the left. Adjusting roller up will move the top of the door to the right.

Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

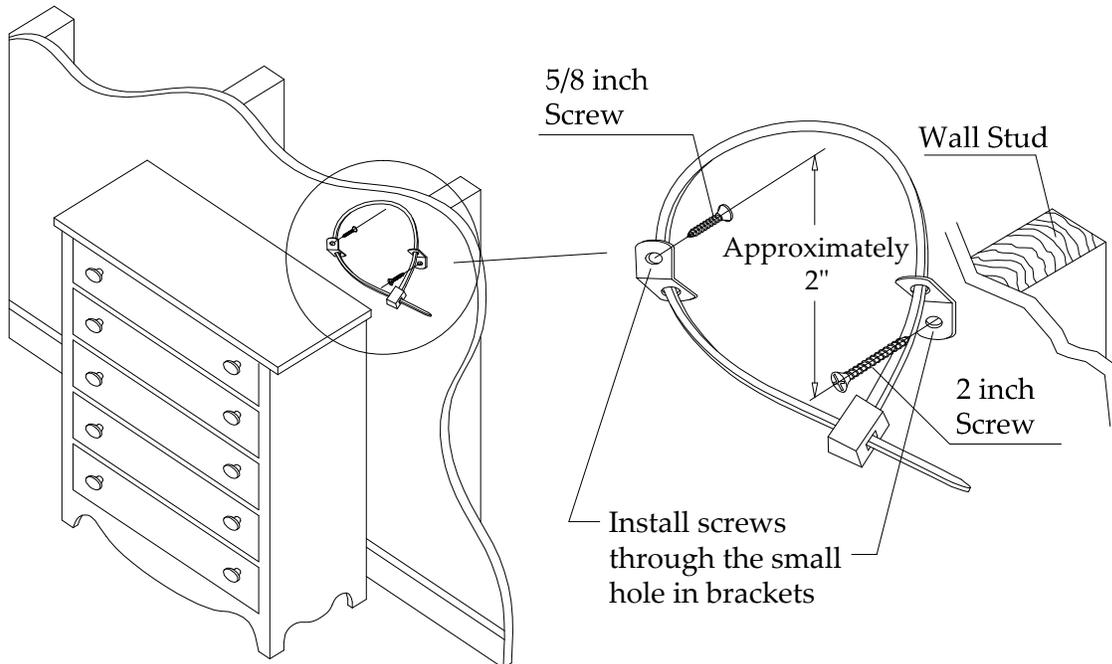

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.