



Skyline Electric Stove

CSA LISTED MODEL#FX3

ITEM#61237/61449

Owner's Manual



FOR CUSTOMER SERVICE INQUIRIES, PLEASE CALL 1-866-985-7877.

- Plugs into standard electrical outlet
- CSA certified
- Operates with or without heat
- Full metal construction
- Realistic flame effects
- Completely portable
- 1500 Watt heater



* Save this manual for future reference.

Warning: Do not move stove while operating

QUICK REFERENCE GUIDE

- 1/ Prior to plugging your heater into an electrical outlet, verify that the house circuit breakers for the outlet are on.
- 2/ The heater may emit a slight smoke, harmless odor when first used. This odor is normal and it is caused by the initial heating of internal heater elements and will not occur again.
- 3/ If your heater does not emit heat, consult the operation section of this manual for further information.
- 4/ Use with a CSA or UL certified surge protector.



SA1965

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
NO USER-SERVICEABLE PARTS INSIDE
HIGH TEMPERATURE
KEEP ELECTRICAL CORDS



SA1965

**KEEP DRAPERY AND OTHER FURNISHINGS AT
LEAST 3 FEET (0.9m) FROM THE FRONT AND
SIDES OF THE HEATER.**

⚠ CAUTION: High temperature, risk of fire. Keep electrical cords, drapery, furnishings, and other combustibles at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

⚠ WARNING: Servicing should be done only while the heater is disconnected from the power supply circuit.

Contents

Important Safety Instructions.....	3
Specifications.....	5
Grounding Instructions.....	6
Operating Instruction.....	7
Cleaning	8
Warranty.....	10

Important Safety Instructions



WARNING: Any other use not recommended or described in your Owner's Manual may cause fire, burns, electric shock and/or other serious injuries or death.

IMPORTANT INSTRUCTIONS

When using electric appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1/ Read all instructions before using this heater.
- 2/ This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- 3/ Extreme caution is necessary when this heater is used by or near children and whenever the heater is left operating and unattended.
- 4/ Always unplug heater when not in use.
- 5/ Do not operate this heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 6/ Do not use outdoors.

Important Safety Instructions

- 7/ This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8/ Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- 9/ To disconnect heater, turn controls to off, then remove plug from outlet.
- 10/ Connect to properly grounded outlets only.
- 11/ Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 12/ To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 13/ A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 14/ Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 15/ Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.14 AWG minimum size and rated not less than 1875 watts.

SAVE THESE INSTRUCTIONS!

Specifications

Specifications:

- ◆ Model #:FX3 ITEM#61237/61449
- ◆ Power Supply: 120V AC
- ◆ Frequency: 60Hz
- ◆ Heater Power: Max1500W
- ◆ Unit Dimensions: 12.60" W x 7.09" D x 14.80" H
- ◆ Carton Dimensions: 15.55" W x 1 0.04" D x 18.70" H
- ◆ Net Weight: 15.42 lbs / 7 kg
- ◆ Gross Weight: 17.62 lbs/ 8 kg


Grounding Instructions

This stove is for use on 120 Volts. The cord has a plug as shown in (A) of Figure 1 given below. An adapter as shown in (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

To disconnect heater, turn controls to off, then remove plug from outlet.

Figure 1

Grounding methods

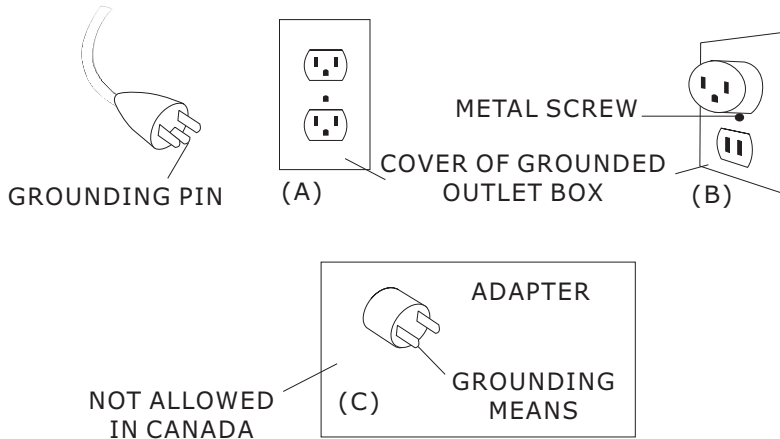

Operating Instruction

Once the unit has been properly connected to a ground electrical outlet, it is ready to operate.

Note: ensure the house circuit breakers for the power supply are turned on.

Operation from the Control Panel


The controls are located on the back of the unit near the top. Figure 2 illustrates the location of the controls.

1/ “ Power/Flame” Turn on this switch on and the fireplace will be ready to work and the flame will display. Turn off the switch, the heater is turned off and the flame will disappear (before plugging and unplugging at the outlet, turn off the Flame/Power switch).

2/ “ Heat I On/Off” Switches the heater I . for 750W with Heating and flame effect.

3/ “ Heat II On/Off ” Switches the heater II 1500W with heating and flame effect.

Figure 2
Control Panel

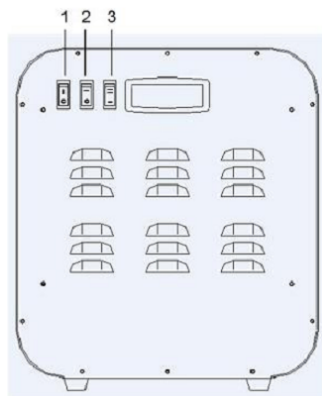

1. Power+Flame
2. HEATER I ON/OFF
3. HEATER II ON/OFF

Note: Heat II will not work if heating I is in its off position.

Cleaning front panel glass

⚠ WARNING: When cleaning the unit, the power supply to the unit should be disconnected and the unit must be cool.

Cleaning: Over time the front glass panel may become dirty or dusty. Dust can be removed by lightly rubbing the glass surface with a clean, lint free cloth or paper towel. To remove fingerprints or other marks, use a damp cloth with a good quality household glass cleaner. The front glass panel should be completely dried with a clean, lint free cloth or paper towel.

Caution: Do not use abrasive cleaners on the glass panel. Do not spray liquids directly onto any surface of the unit.

Storage: When not in use, unplug the unit from the power supply and store in DRY, DUST FREE location.

Troubleshooting



WARNING: Turn off the fireplace completely and let it cool down before servicing. Only a qualified service person should service and repair this electric fireplace.

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Flame is not moving	1. Flame motor defective	Contact Customer Service to replace flame motor
Heater turns off and will not turn on	Heater has overheated and safety device has caused thermal switch to disconnect or home circuit breaker has opened.	Reset switch by turning main power switch off and waiting 30 minutes for heater to cool down, then turning it back on. Check building' s fuse box

Distributed By:
Well Traveled Living
716 S 8th Street
Amelia Island, FL 32034
Toll Free: 866-WTL-SUPP



Web: www.wtliving.com
Email: cservice@welltraveled.net

1 YEAR LIMITED WARRANTY – Customers in the Continental US

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. Light bulbs are not covered by this limited warranty and are the sole responsibility of the owner/purchaser. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

*****THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE*****

*****PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT*****

*****FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY*****

IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

*****IMPORTANT NOTICE*****

-Do **NOT** return to place of purchase-
For customer service and warranty issues
contact our Customer Service Center at:
(866)-985-7877 OR

Email: cservice@welltraveled.net

Customer Service Hours: Mon. – Fri. 9:00 a.m. – 6:00 p.m. (EST)

Fire Sense®, Mojave Sun™, and Well Traveled Living® are registered trademarks of Well Traveled Imports, Inc®. All assembly instruction presentations are the property of Well Traveled Imports, Inc.® and are protected by U.S. copyrights and trademarks. All rights reserved.

IMPORTANT

Do not return this product to the store. Please call our customer service department for any questions or concerns:

1-866-985-7877

Monday to Friday

9:00AM to 6:00PM E.S.T.

DATED PROOF OF PURCHASE
REQUIRED FOR WARRANTY
SERVICE.



C US

**Approved for use in
Canada and the United States**