

## RM1730W / RM1731B / RM1732PS Explosion view and Parts list

NO		Part name	Qty
1	BC48.2/B	Foamed Door /white	1
		Foamed Door /black	1
		Foamed Door /PS	1
2	BC48.2-1	Gasket	1
3	BC48.1	Cabinet	1
4	BC48.0-4	Upper Hinge cover	1
5		Self Tapping Screw	2
6	BC48.0.2	Upper Hinge	1
7	BC48.4-1	Paper mat	1
8	BC48.0.6.1	Thermostat	1
9	BC48.0-11	Thermostat Box	1
10	BC48.0-7	Thermostat Knob	1
11	BC48.0-2	Small Evaporator	1
12	BC48.0-12	Small Chiller door	1
13	BC48.0-9	Drip tray	1
14	BC48.0-9b	Small Shelf	1
15	BC48.0.3	Bottom Hinge	1
16		Self Tapping Screw	3
17	BC48.0-18	Adjustable Leg	1
18	BC48.0-10	Fixed Leg	1
19	BC48.0.5	Power Supply Cord	1
20	BC48.0-13	Terminal Box	1
21		Self Tapping Screw	2
22	BC48.0.5	Drier	1
23		Self Topping Screw	4
24	BC48.0.1	Compressor Base	1
25	BC48.0-25	Compressor	1
26	BC48.0-25/1	Overload Protecior	1
27	BC48.0-25/2	PTC Starter	1
28	BC48.0-25/3	Relay Cover	1
29	BC48.0-25/4	Relay Band	1
30		Self Topping Screw	1
31	BC48.0-19	Wire Clip	1
32		Bolt	4
33		Rivet	2
34	BC48.0-24	Big Bottle Bar	1
35	BC48.0-24	Small Bottle Bar	1

