

ASSEMBLY INSTRUCTIONS FOR YOUR

PORTER  
FLOOR LAMP

**ASSEMBLY INSTRUCTIONS:**

NOTE: Do not connect the electricity until lamp is fully assembled.

Unpack and place all parts on a soft surface.

1. Thread column (F) into the threaded opening of column (E). Pull cord tight when threading parts together to avoid damaging the cord.
2. Threaded column (F) into the threaded opening of base (G). Pull cord tight when threading parts together to avoid damaging the cord.
3. Stand lamp upright and place on level surface.
4. Squeeze harp (C) inward and place into the openings of harp saddle (D). Remove finial (A) from harp (C).
5. Slide center ring of shade spider (located inside shade (B)) down threaded nipple of harp (C).
6. To secure shade (B) thread finial (A) onto the threaded nipple of harp (C).
7. Install one (1) Type A, 150 watt maximum bulb into socket.
8. Remove plug cover (I) from polarized plug (H). Plug lamp into wall outlet.

Caution: To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

Note: Turn the power off (unplug from the wall outlet) before replacing the bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of lamp may result.

**IMPORTANT SAFETY INSTRUCTIONS**

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

DO NOT ALTER THE PLUG.

