

 



 




 
 





Assembly Instructions

TQ154
55" MEDIA BASE

PARTS LIST

PART NO	FIGURE	DESCRIPTION	QTY
TQ154-02		Back Panel	1 pce
TQ154-16		Top Panel	1 pce
TQ154-04		Large Door	1 pce
TQ154-041		Small Door	2 pcs
TQ154-05		Drawer	2 pcs
TQ154-08		Hinges	6 pcs
TQ154-21		Magnet Catch	6 pcs
TQ154-22		Leveler	2 pcs
TQ154-10		Wood Knob	5 pcs
TQ154-18		Large Wood Shelf	1 pce
TQ154-181		Small Wood Shelf	2 pcs
TQ154-06		Door Glass	1 pce
TQ154-26		Large Door Panel	1 pce
TQ154-261		Small Door Panel	2 pcs
TQ154-27		Speaker Grill	2 pcs

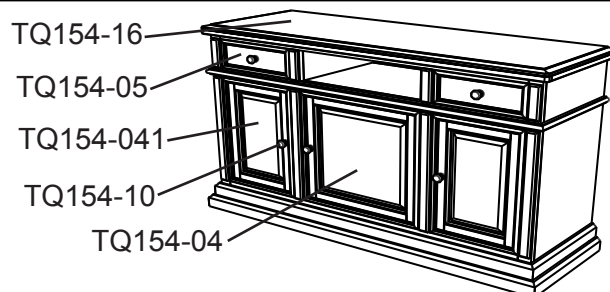

Assembly Instructions

TQ154
55" MEDIA BASE

Door Panel

Door Glass

Adjustable Wood Shelf

Side Door Panel is exchange to Speaker Grill

Center Door Glass is exchange to Door Panel

Turn the door clip for replace the Door Panel to Door Glass

Front Only

Leveler

Adjust the levelers to level the unit.



COMPLETE VIEW

CARE INSTRUCTION

~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.

~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.

EXTRA PARTS LIST :

NO	DESCRIPTION	FIGURE	QTY
1.	Door Panel		1 pce
2.	Speaker Grill		2 pcs