

 







Heritage™ A-Frame Easel

Assembly Instructions

For HWE136

Parts List:

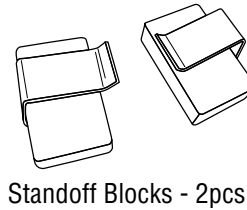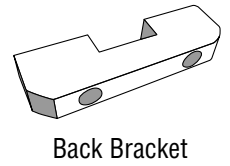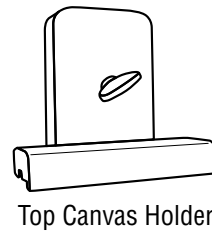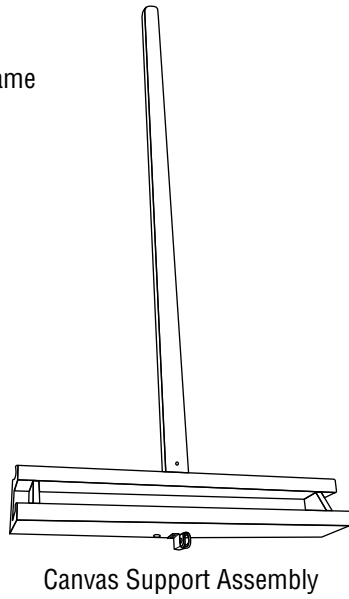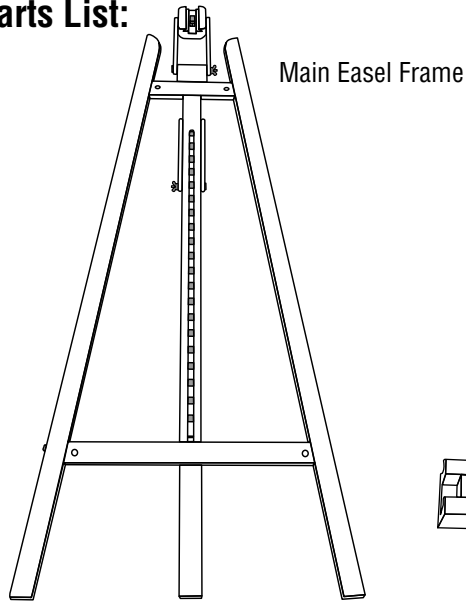

To Assemble

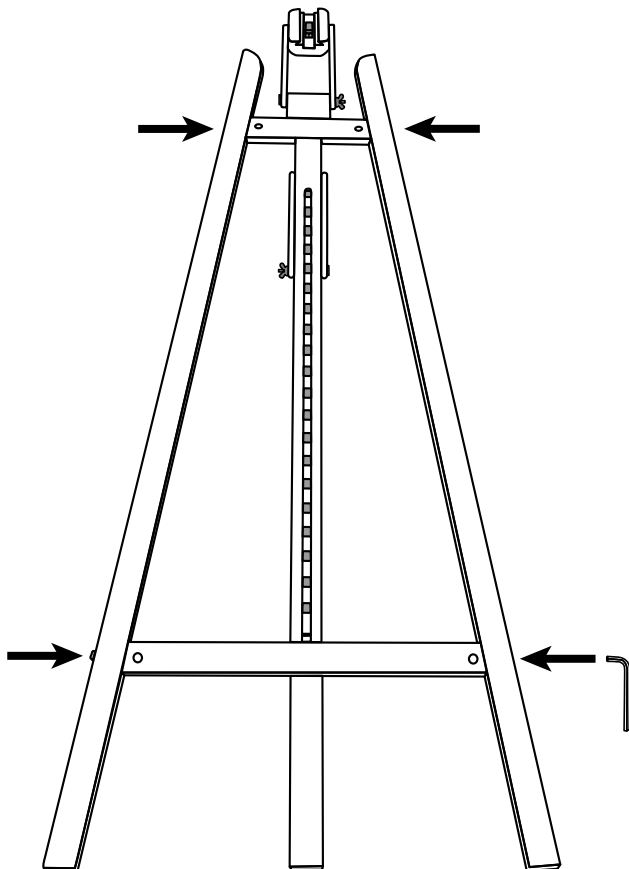


Figure 1

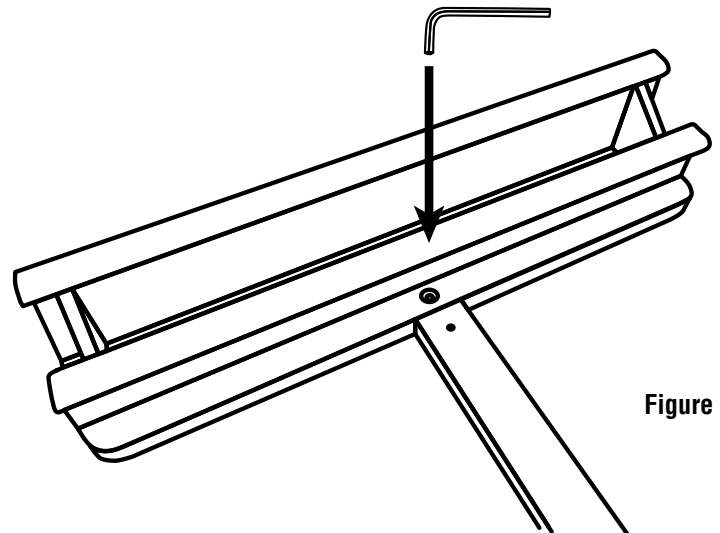


Figure 2

- 1** Unwrap and lay out all parts.
- 2** Some hardware may have loosened during transportation. For best results, we suggest that you tighten four Allen bolts in sides of main easel frame, as shown in Figure 1, and tighten the Allen bolt in the back of canvas support assembly, as shown in Figure 2.

- 3** Lay main easel frame flat on floor with brass height adjustment track facing up.
- 4** Carefully slide canvas support assembly from below into slot at top of main easel frame, as shown in Figure 3. Slide far enough up to expose three or four steps in the brass track, as shown in Figure 4.
- 5** Grip main easel and canvas support assembly together with two hands and carefully turn upside down so that the brass track is now facing the floor, as shown in Figure 5. Lift back leg out of the way for the time being and secure in position by tightening the wing nut.

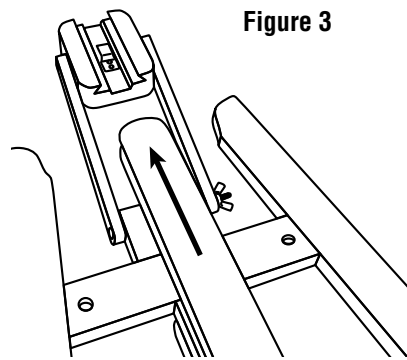


Figure 3

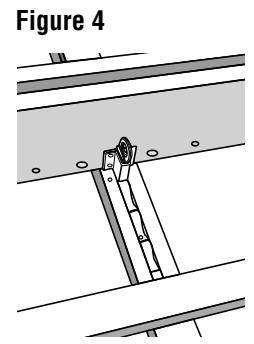


Figure 4

- 6** Insert barrel nuts into bottom of canvas support tray with slots oriented vertically and place back bracket in position as shown in Figure 6. Bracket holes should align with holes in canvas support tray.
- 7** Attach back bracket using 2" Allen bolts and springs, as shown in Figure 6. Slots in barrel nuts must remain vertically oriented. Tighten only until spring can be felt gripping wood pieces together. Do not over-tighten.

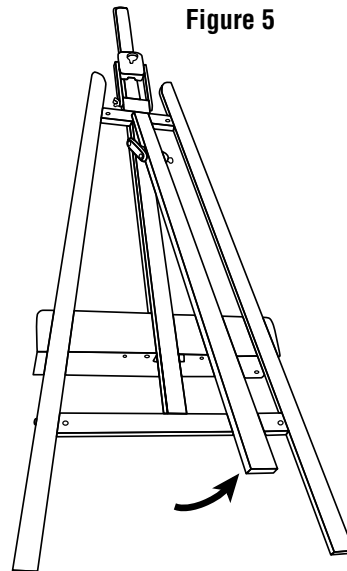


Figure 5

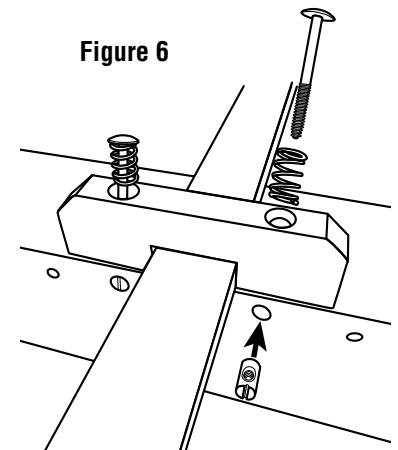


Figure 6

- 8** Lift easel into upright position.
- 9** Slide top canvas holder down over main vertical track and secure with brass thumbscrew at desired height, as shown in Figure 7.

- 10** Slide standoff blocks onto each leg as shown. Standoff blocks help to stabilize the top edge of your canvas. Reposition as necessary.

- 11** Your easel is now ready to use. Enjoy!


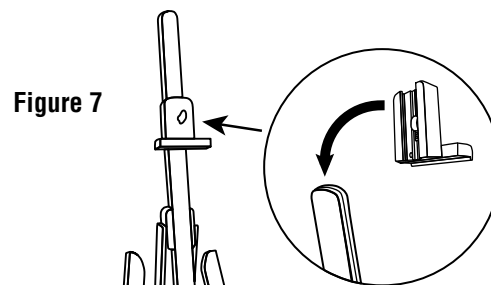


Figure 7

To Adjust Height

- 1** Loosen brass thumbscrew at top of easel frame, on back.
- 2** Pull spring-loaded height-adjustment ring to release locking mechanism from brass track. Slide canvas support assembly up or down until desired height is reached.
- 3** Re-tighten brass thumbscrew.

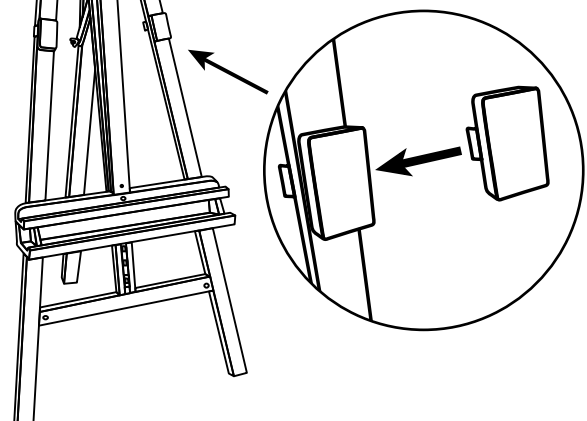

Please save these instructions for future use.