



Multi-Shaper II

Creates Unlimited Shapes & Sizes



INSTRUCTIONS

FIRST CUT

1. Remove magnetized upper punch from base and place the paper on the base.
2. Lightly place the upper punch on paper allowing magnets to lock in place and firmly press on the center of the lever with heel of hand.
3. Create UNLIMITED sizes and shapes by changing the number of punches and paper turns.

BORDERS

1. After first cut, lift the upper punch and move the paper to the LEFT or RIGHT on the base until the punched design fits precisely over the green shape and printed design labeled BORDER.
2. Replace upper punch, ensure paper alignment is still correct, and press on the center of the lever with heel of hand.

TRIANGLES

1. After first cut, lift the upper punch and turn the paper to the RIGHT on the base until the punched design fits precisely over the light blue shape and printed design labeled TRIANGLE.
2. Replace upper punch, ensure paper alignment is still correct, and press on the center of the lever with heel of hand.
3. Repeat one more time to complete TRIANGLE. (Three punches in all).

SQUARES OR RECTANGLES

1. After first cut, lift the upper punch and move the paper to the LEFT on the base until the punched design fits precisely over the magenta shape and printed design labeled SQUARE.
2. Replace upper punch, ensure paper alignment is still correct, and press on the center of the lever with heel of hand.
3. Repeat two more times to complete SQUARE. (Four punches in all). Repeat four more times to complete RECTANGLE. (Six punches in all).

PENTAGONS

1. After first cut, lift the upper punch and turn the paper to the RIGHT on the base until the punched design fits precisely over the orange shape and printed design labeled PENTAGON.
2. Replace upper punch, ensure paper alignment is still correct, and press on the center of the lever with heel of hand.
3. Repeat three more times to complete PENTAGON. (Five punches in all).

HEXAGONS

1. After first cut, lift the upper punch and turn the paper to the LEFT on the base until the punched design fits precisely over the blue shape and printed design labeled HEXAGON.
2. Replace upper punch, ensure paper alignment is still correct, and press on the center of the lever with heel of hand.
3. Repeat five more times to complete HEXAGON. (Six punches in all).

CORNERS

1. Place corner of paper over punch diagonally to create large or small corners.
2. Replace upper punch and press on the center of the lever with heel of hand.

TIPS & TRICKS

1. **IMPORTANT!** Apply pressure, as vertically as possible, in the center of the lever to avoid rocking punch head away from magnetic base. Heel of hand should be on the center of the punch lever. Make sure the edges of the upper punch do not lift up during your punch.
2. It may help to stand to apply additional pressure while punching.
3. Do not use heavyweight cardstock or fibrous papers.
4. If the paper gets caught in the punch, tap the punch lightly on your work surface. This will help release any paper scraps that may be caught.

Multi-Shaper II Punches are available in four patterns:



Isabella BHS617



Lauretta BHS618



Marta BHS619



Jemma BHS620

©2010 BLUE HILLS STUDIO by
ALVIN & COMPANY, INC., Bloomfield, CT 06002
www.bluehillsstudio.com
Made in Korea



CHOKING HAZARD Tool contains small magnets.

CAUTION Touching the sharp blade may result in injury. Handle with care and keep out of reach of children.

Not for children 8 years and under.

BHS617



0 88354 93506 3