


L E U C O S[®]

INSTRUCTIONS FOR INSTALLATION - LEUCOS USA

TIKAL

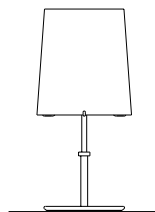

A1 Enclosed



One installer



Save instructions


Revised
28 July 2006

WARNING:

- DISCONNECT POWER BEFORE INSTALLATION.
 - FIXTURE TO BE INSTALLED BY A CERTIFIED ELECTRICIAN.
- INSTALL IN ACCORDANCE WITH THE NATIONAL AND LOCAL ELECTRICAL CODES.
- TAKE GREAT CARE TO AVOID SCRATCHING OR CHIPPING THE GLASS WHEN, CARRYING OUT THE OPERATIONS BELOW

ATTENTION IN CASE OF DAMAGE OF THE FLEXIBLE SUPPLY CABLE, SUBSTITUTION SHOULD BE CARRIED OUT BY THE CONSTRUCTOR, CLIENT SERVICE OR QUALIFIED

1. Position the fixture base in an upward position.
2. Install the light bulb (provided only USA)
3. Loosen the "plastic nut" "A" and remove metal arm "B".
4. Position the glass diffuser over the 2 fixed arms. Install the arm "B". Make sure that the glass diffuser rests completely on the metal arms.
5. Secure the arm "B" with the plastic nut "A" by tightening it with the allen wrench provided.
6. Plug fixture to outlet.

TIKAL : max 1x100 W 120V E26 Type A 

For additional information please contact your local dealer
or **LEUCOS U.S.A.** at: Tel. (732) 225-0010 Fax. (732) 225-0250

