 


LEUCOS®

INSTALLATION INSTRUCTIONS for LEUCOS USA

KUBE S



A1 Enclosed



One installer



Save instructions


Revised
23 April 2003

**DISCONNECT POWER BEFORE BEGINNING INSTALLATION.
FOLLOW INSTRUCTIONS CAREFULLY TO AVOID SCRATCHING THE GLASS DIFFUSER.**


- ILL.1** - Before securing the mounting plate to the ceiling, remove the cover "B" from ceiling plate "A".
- ILL.2** - Secure plate "A" to the junction box.
- ILL.2** - Guide the fixture's electrical wires through the large opening "X" and the steel Cable through the small opening "Y" in the center of the plate "B".
- Fig.2** - Unscrew the adjustable pin "S" and guide the steel cable through it. Pin "S" has a self locking system. Push up pin "S" to unlock the steel cable. Having determined the correct height of the fixture, secure the steel cable screwing pin "S". To make shure that the fixture is well secured, place the fitting "J" at the end of the stell cable as shown.
- ILL.2** - Guide the electrical wire through the plastic clamp "H" then lock it with the side Plastic screw.
- ILL.2** - Connect the fixture's electrical wires to the supply wires.
- Replace cover "B" into plate "A" pushing up on the three pins "W". During this operation take care that pin "S" be well guide through the hole "Y" of the cover.
- ATTENTION: TAKE CARE THAT THE CENTRAL BRACKET STAND CORRECTLY INSIDE THE TWO SIDE PINS "K", AS SHOW ILL.3. THIS DEVICE HAS BEEN TORSION.**
- Install the light bulb.
- Loosen the screw "E" and install the glass diffuser. Secure the glass diffuser with the three screws "E" . **ILL.4** and **ILL.5**.
- Each piece of glass is mounth lown therefore each piece may differ. The thickness of the glass may vary slightly. In order to balance the glass diffuser follow the simple steps indicated by the arrow in **ILL.5**.
Side the barrel "F" along the slotted opening and if necessary rotate the glass diffuser untill reaching the proper balance.
- Restore power.

KUBE S max 1x100W 120V - E26 - TYPE A19


ILL. 1

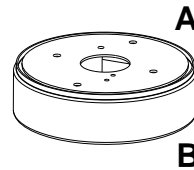


ILL. 2

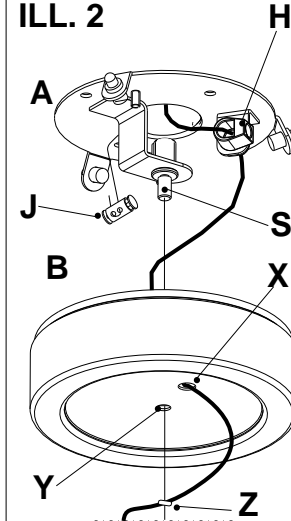


ILL. 3

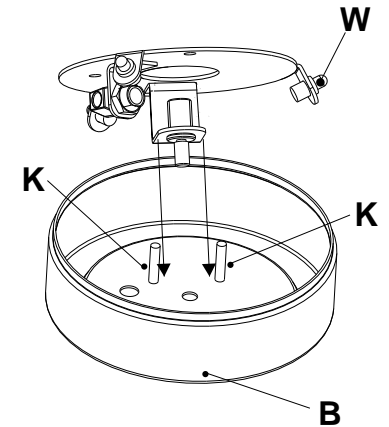


ILL. 4

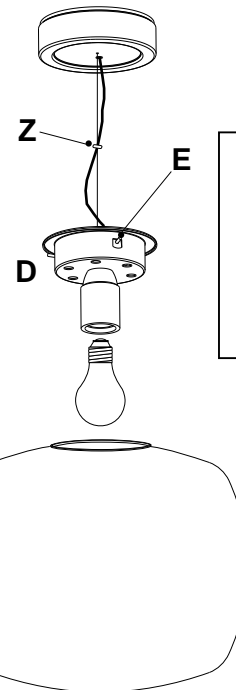

ILL. 5

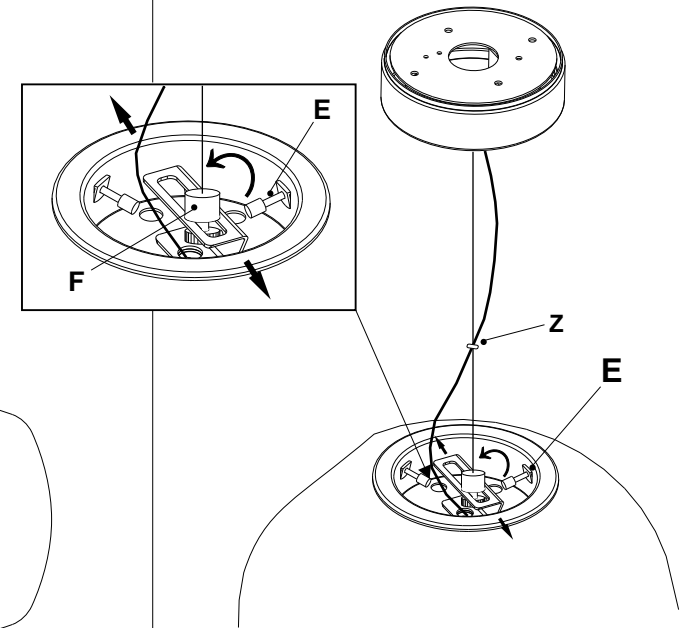

 For additional informational please contact
your local dealer or **LEUCOS U.S.A.**
At: Tel. (732)225-0010 - Fax (732) 225-0250



CIRCUIT DIAGRAM:
WHITE NEUTRAL
BLACK PHASE
GREEN-YELLOW BARE COPPER WIRE Ground

MOUNTS TO STANDARD IUNCTION BOX