

Pegasus is a fully adjustable indoor banner stand that is easy to set up and fits a variety of sizes of graphics.



## features & benefits

- Single or double-sided graphics
- Allows for custom sized graphics
- Easy to store
- Telescopic pole for adjustable graphic width and height
- Steel foot for stability
- Nylon bag for easy transportation

Max Height: 2540mm / 100"

 


Max Width: 2415.6mm / 99"

hardware specifications	graphic specifications	additional info
<p>Min unit dimension: 56.25" x 39.375" x 17.375" 1428.8mm x 1000.1mm x 441.3mm</p> <p>Max unit dimension: 100" x 99" x 17.375" 2540mm x 2514.6mm x 441.3mm</p>	<p>Visual Graphic Area:</p> <p>Maximum 2413mm / 95"(w) x 2438.4mm / 96"</p> <p>Minimum 1320.8mm / 52"(w) x 927.1mm / 36.5"</p> <p>Pole pocket: 25.4mm / 1" diameter</p> <p>Recommended Substrate: Solid or Mesh type outdoor Vinyl substrates or dye sublimated fabrics</p>	<p>Shipping Weight: 6.8kg / 15lbs approx</p> <p>Shipping Dimensions: 44" x 8.25" x 4.25" 1117.6mm x 209.5mm x 107.95mm</p> <p>Comes with nylon carry bag</p>

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.

# Assembly Instructions

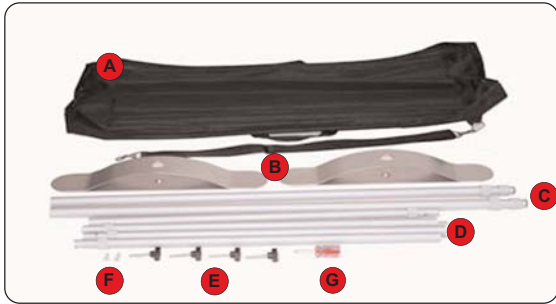


Kit includes: (A) Case (B) 2 x Feet (C) 2 x Telescopic upright poles (D) 4 x Top and bottom graphic poles (E) 4 x Thumb screws (F) 2 x Screws (G) 1 x Screwdriver



1 Assemble the telescopic uprights and feet using the supplied screws and driver



 2 Align mounting holes to face the flat sides of the feet.

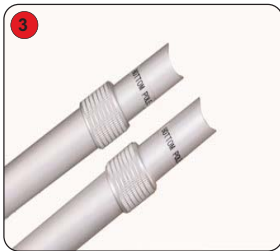

3 Locate and match the top and bottom graphic poles. They are identified by stickers near the shaped ends.



4 Screw each the top and bottom poles to their partner.



5 Attach the bottom pole to one of the upright assemblies, and adjust to the width needed.




6 Attach the top pole to the same upright assembly, and adjust to the width needed.



7 Slid the graphic over the unattached end of the top and bottom poles using the pole pocket.



 8 Attach the loose end of the top and bottom graphic poles to the other upright pole.

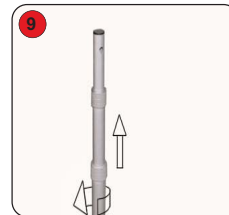

9 Adjust each of the poles as needed by twisting the locking ring to the left to loosen and right to tighten.