

Wind Dancer Conversion

The Wind Dancer Conversion kit allows you to attach a custom flag onto a Wind Dancer outdoor banner stand converting it into a flag pole.



features & benefits

- Weather resistant
- Able to withstand inclement weather
- Quick conversion for the Wind Dancer
- Converts without the use of tools
- Easy to use
- Telescopic pole for adjustable graphic height
- Lightweight components

Max height 4876.8mm / 16'



Wind Dancer shown is fully extended.



Length: 1566mm / 61.6"

Width: 939.8mm / 37"

 


Close view of the Wind Dancer conversion.

hardware specifications	graphic specifications	additional info
Footprint 838.2mm / 33" x 838.2mm / 33" Adjustable heights of extended pole: 4876.8mm / 16' 4216.4mm / 13' 10" 2984.5mm / 9' 2.5" 1790.7mm / 5' 10.5"	Maximum recommended graphic: standard 939.8mm / 37" (w) x 1566mm / 61.6" Pole pocket size: 25mm / 1" diameter Recommended Substrate: Lightweight outdoor banner material (solid or mesh type substrates) and or dye sublimated fabrics. Graphic does require a pole pocket.	Shipping Information: Weight: .91kg / 2lbs approx shipping weight Dimensions: 5" x 7" x 45" / 127mm x 177.8mm x 1143mm

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.

Assembly Instructions

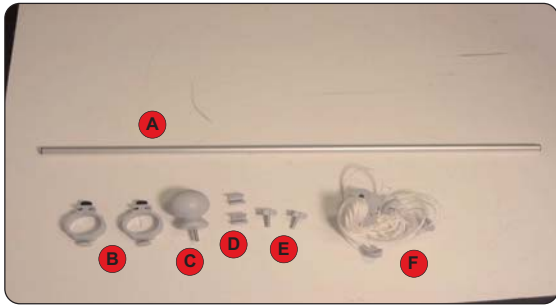

Kit includes: (A), Graphic pole (B), 2 x Clamps (C), Finials (D), 2 x Graphic clip (E) 2 x Thumb screws (F) 1 x Rope/halyard/graphic connector system



1 Place graphic pole connector on one end of the graphic pole.



2 Turn the thumb screw to lock the graphic pole connector into place.



3 Slide the graphic over the other end of the pole.



4 Place the other graphic connector on the pole.



 
5 Secure the graphic and connector with the second thumb screw.



6 Place one graphic clip on each end of the graphic to keep it from sliding.




7 Slide each of the clamps over the bottom section of the main pole of the Wind Dancer unit.

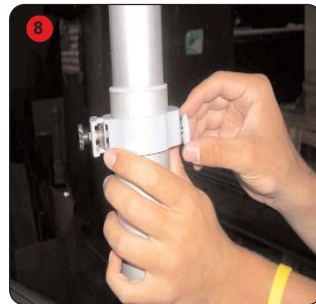

8 Tighten both of the clamps to the pole using the grey knob. Make sure that they are aligned



 9 Place the halyard on the top of the main flag pole.

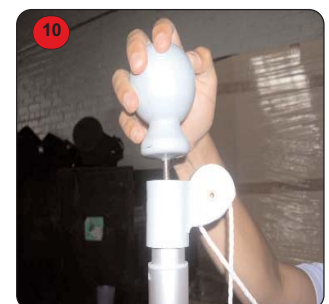

10 Screw the finials through the pulley and into the top of the main pole.



11 Finally raise the graphic and secure the rope through each one of the clamps as shown above. Tighten using the black knob.