 


Scandi - 2 Door Wardrobe

Assembly Instructions - Please keep for future reference

1022201

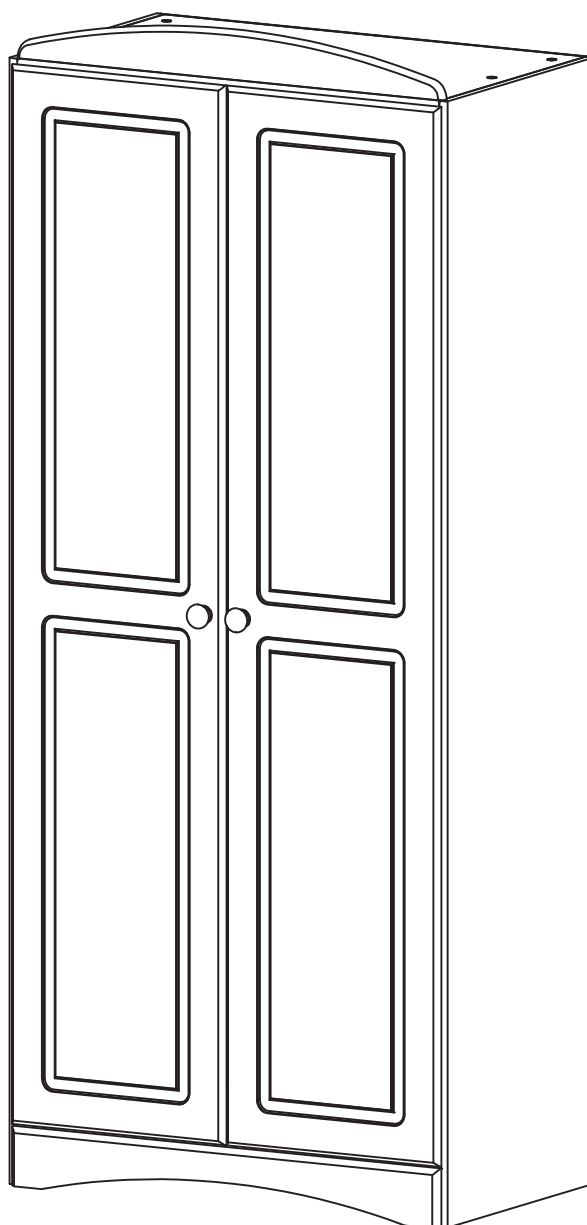

Dimensions

Width : 81.1 cm

Depth : 49.0 cm

Height: 191.3 cm

Assembly Instructions - Please keep for future reference



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

 
 
 
 
 
 
 
 
 
Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels



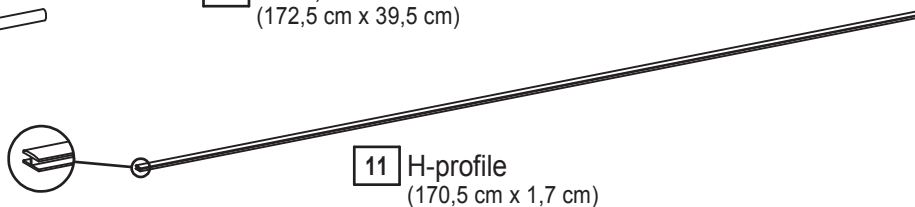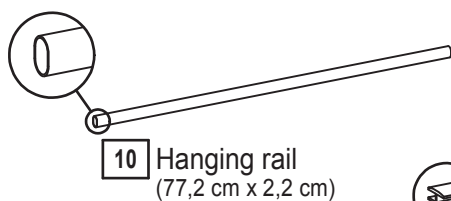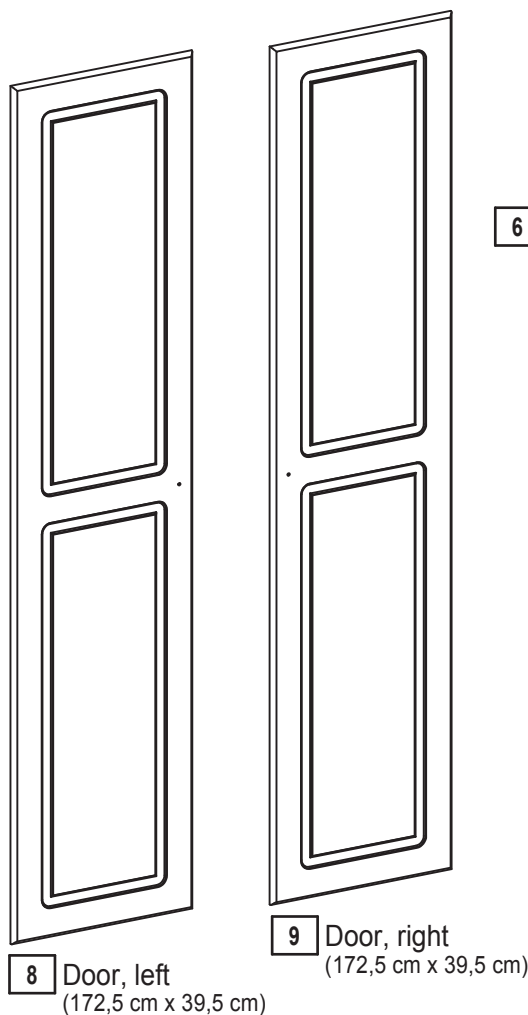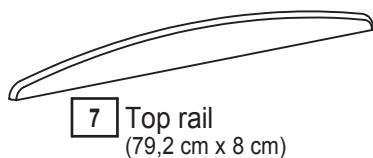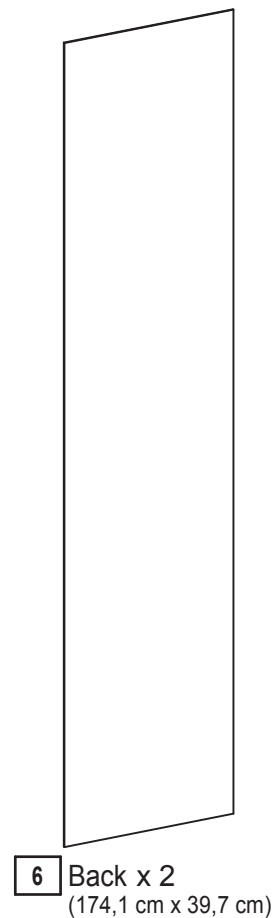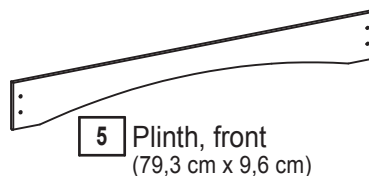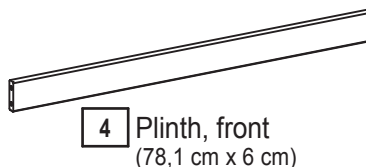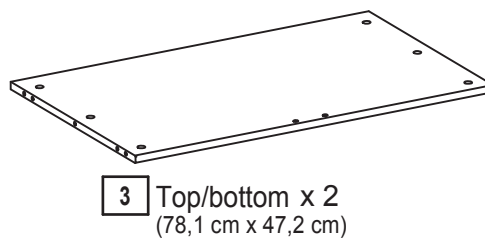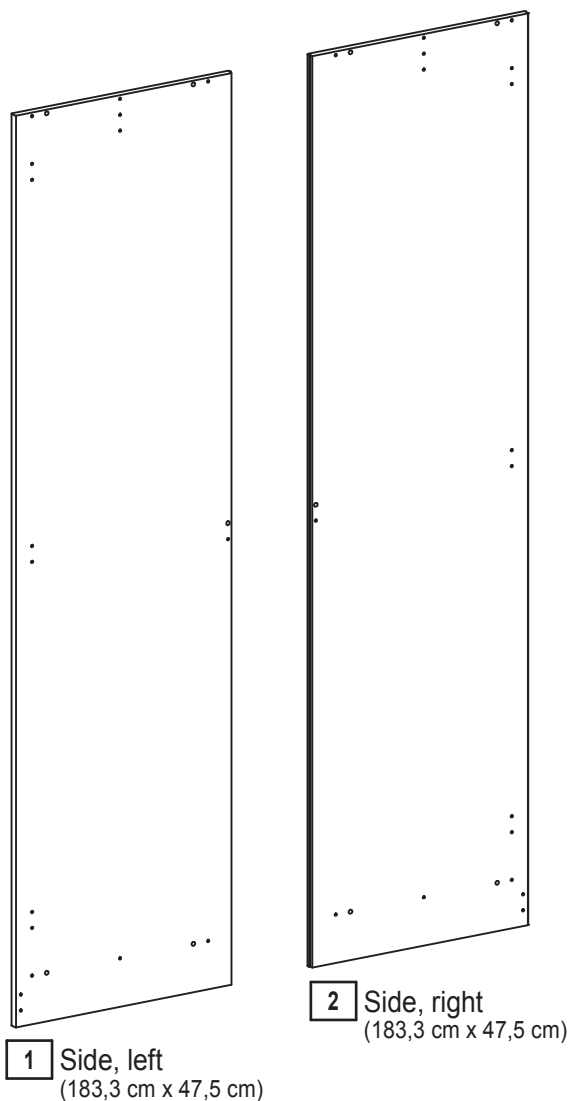





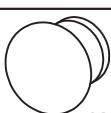








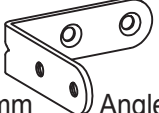
Please check you have all the panels listed below

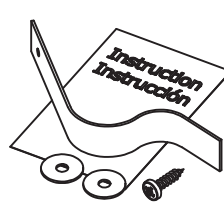

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

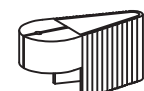Aa  ø7.8 x 40mm Wooden dowel x 10	Bc  ø3.5 x 15mm Screw x 22	Bo  ø3 x 12mm Screw x 4
Ca  ø15 x 10.5mm Cam x 14	Cb  ø5 x 11, cc34mm Bolt x 14	Da  1.2 x 20mm Nail x 50
Fh  Wall strap and instruction x 1	Fl  Support for hanger rail - 15mm x 2	Gc  ø40 x 35mm Wooden Knob x 2
Mc  0mm Crossplate x 6	Jc  ø4 x 35mm Screw x 2	Ke  ø6,1 x 11,5mm Screw x 8
Pd  35 x 12 x 1mm Magnet catch x 4	Me  ø26mm Cup hinge x 6	Pc  Magnet, adjustable x 4
Yd  Nail holder x 1	Va  Angle 20 x 20 x 16mm x 4	Vg  50 x 50 x 15mm Angle x 2

Tools required



 Phillips screwdriver
(Medium & large)



Hammer



Flatblade screwdriver
(Medium)

Ruler - Use this ruler to help correctly identify the screws

 


Assembly Instructions

Step 1

Knock the dowels **Aa** into the holes indicated on the top/bottom **3** and the back plinth **4** using a small hammer.

Press the magnets **Pc** into the holes indicated on the top/bottom **3**.

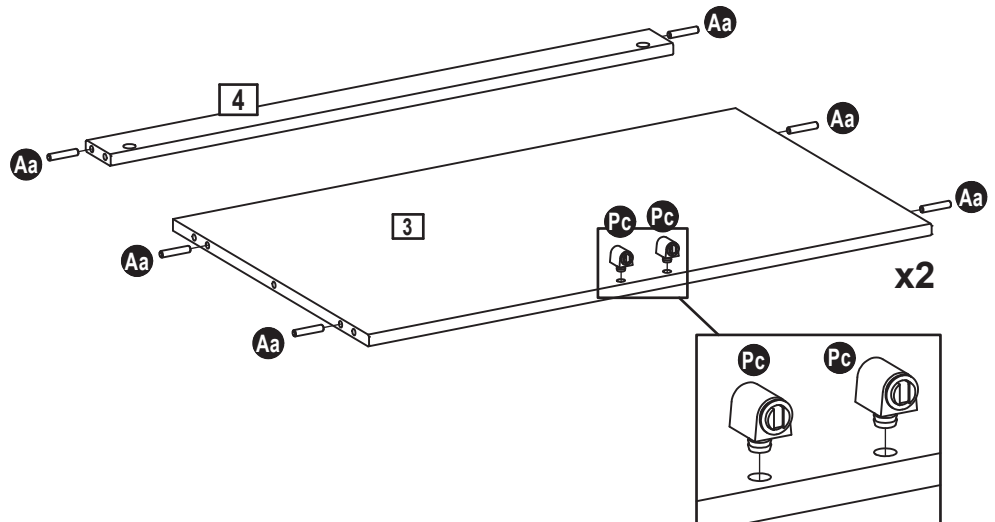

Step 2

 
Fix the support for hanger rail **Fl** to the sides **1** and **2** using screws **Bc**.

Fix the Crossplates **Mc** to the sides **1** and **2** using the pre-mounted screws. Note the details.

Position the Crossplates **Mc** exactly as shown.

Screw the bolts **Cb** into the holes indicated on the sides **1** and **2**.

Fix the angles **Va** to the sides **1** and **2** using screws **Ke**. Place the angles as shown. See details.

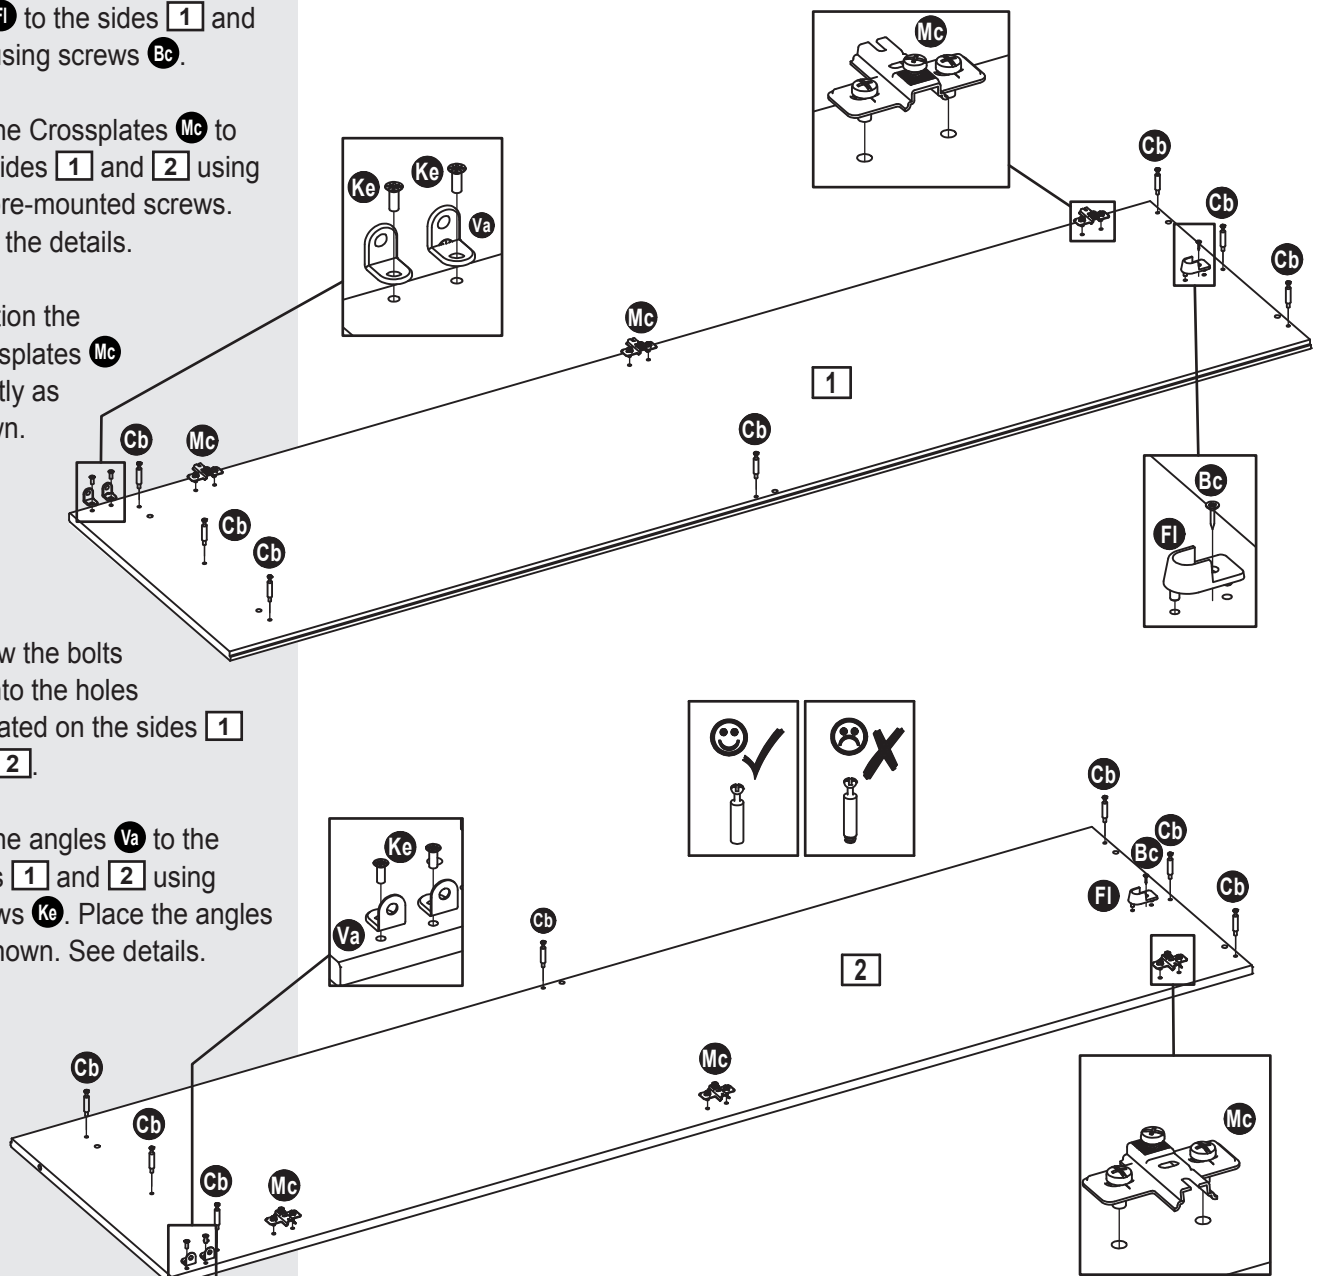



Assembly Instructions

Step 3

Place the sides **1** and **2** onto the top **3**, the bottom **3** and the back plinth **4**.


Push cams **Ca** into the holes indicated on the top **3**, the bottom **3** and the back plinth **4**. Arrows pointing towards the sides **1** and **2**.

  Turn the cams **Ca** to the right to fix the sides **1** and **2**.

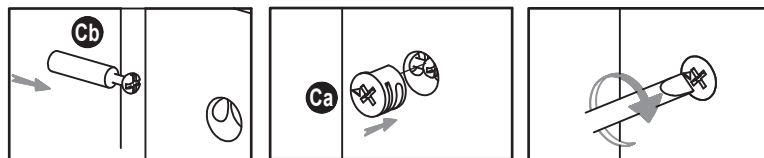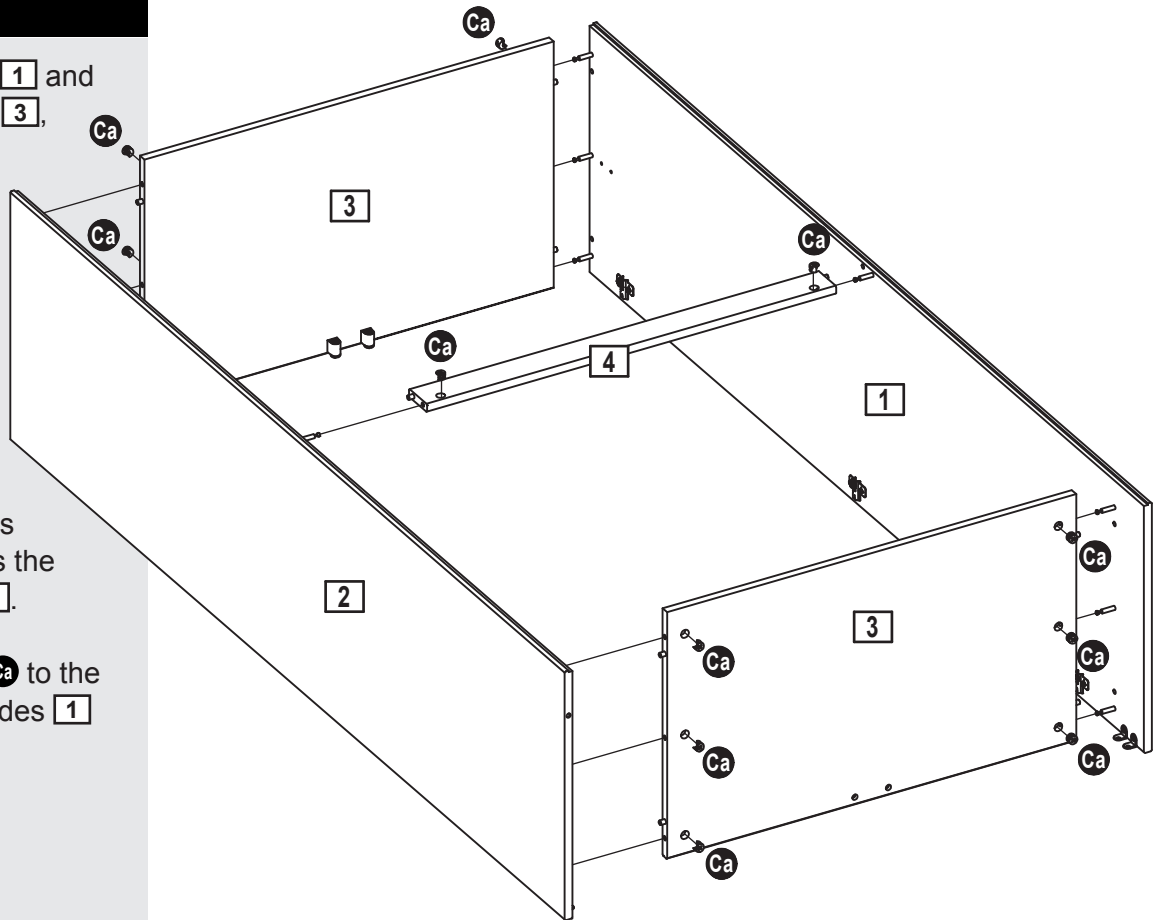

Step 4

 Fix the front plinth **5** onto the angles **Va** using screw **Ke**.

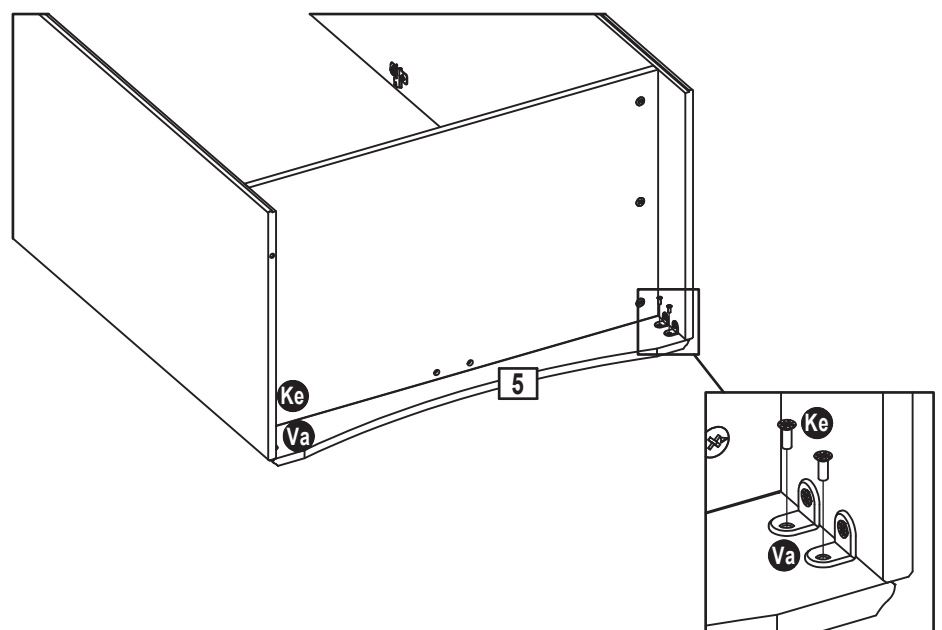

Assembly Instructions

Step 5

Place the backs **6** into the rabbets in the sides **1** and **2** and the H-profile **11**.

 
 
 


Important!

Make sure the angle between the top **3** and the sides **1** and **2** is 90° when the backs **6** is attached.

Fix the backs **6** to the sides **1** and **2**, the top **3** and the bottom **3** using nails **Da**.


Use the nail holder **Yd** and a small hammer.

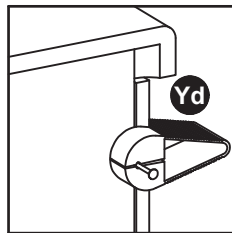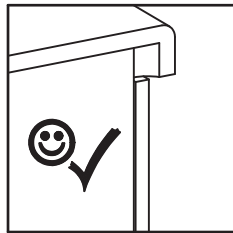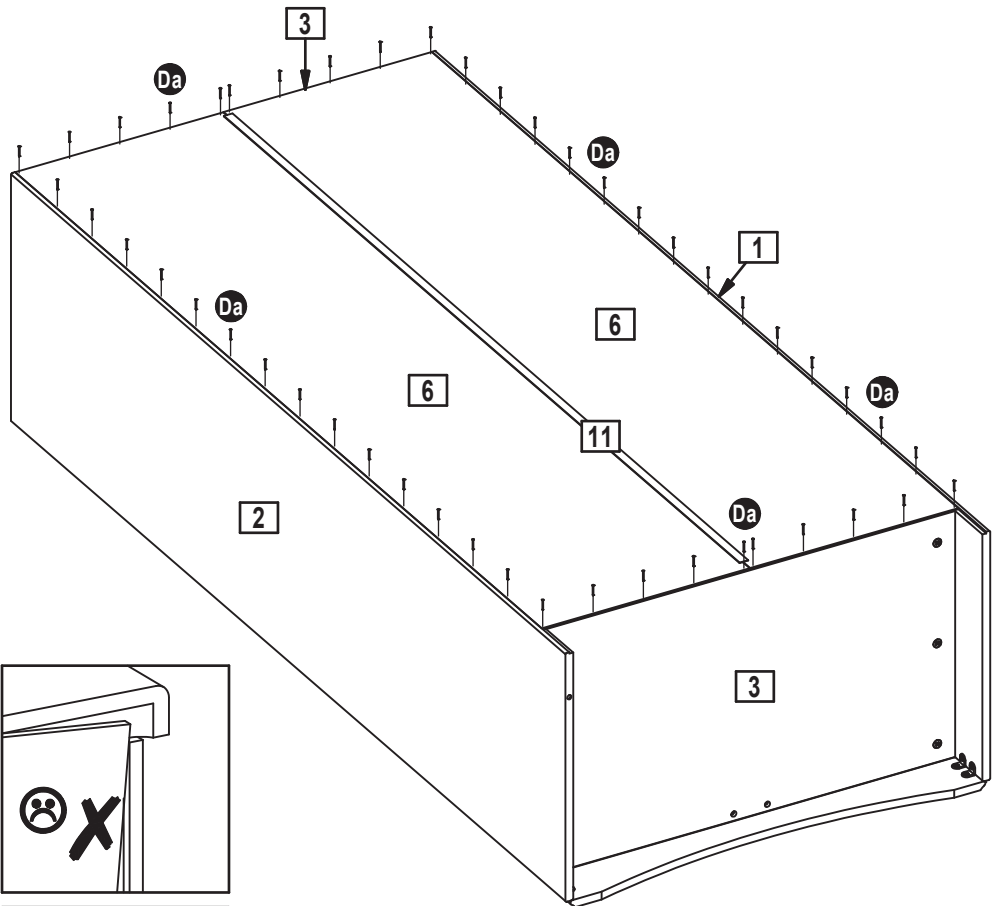

Step 6

Place the top rail **7** onto the top **3**.

 Fix the top rail **7** to the top **3** using angles **Vg** and screws **Bc**.

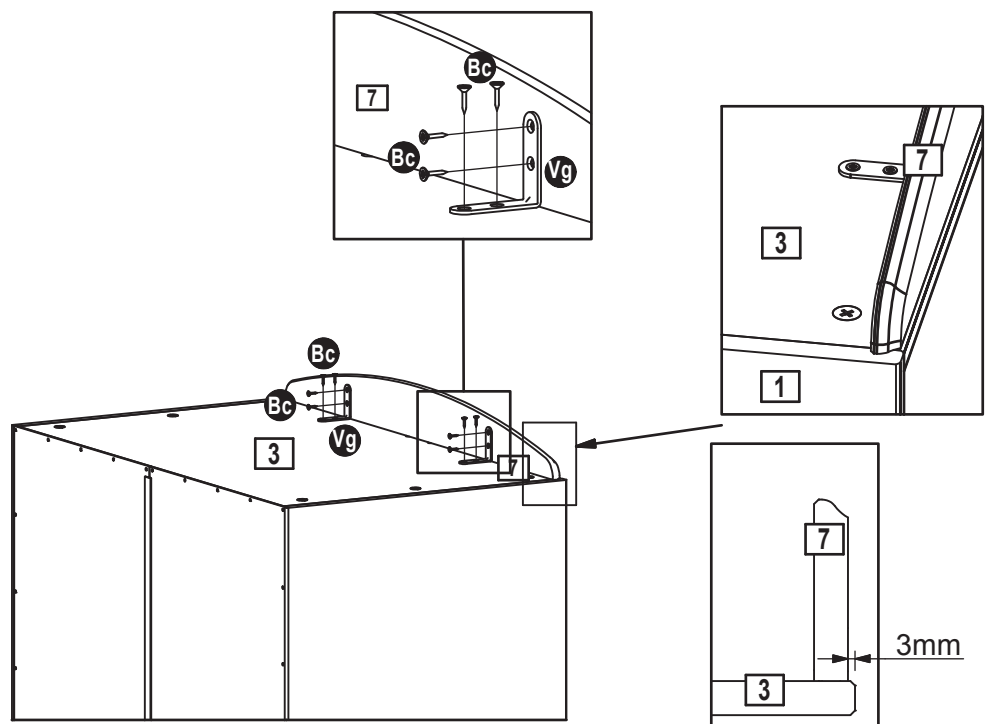


Assembly Instructions

Step 7

Place the cup hinges **Me** into the holes indicated on the doors **8** and **9**.

Fix the hinges using screws **Bc**.

 Fix the magnet catches **Pd** using screws **Bo** into the holes indicated.

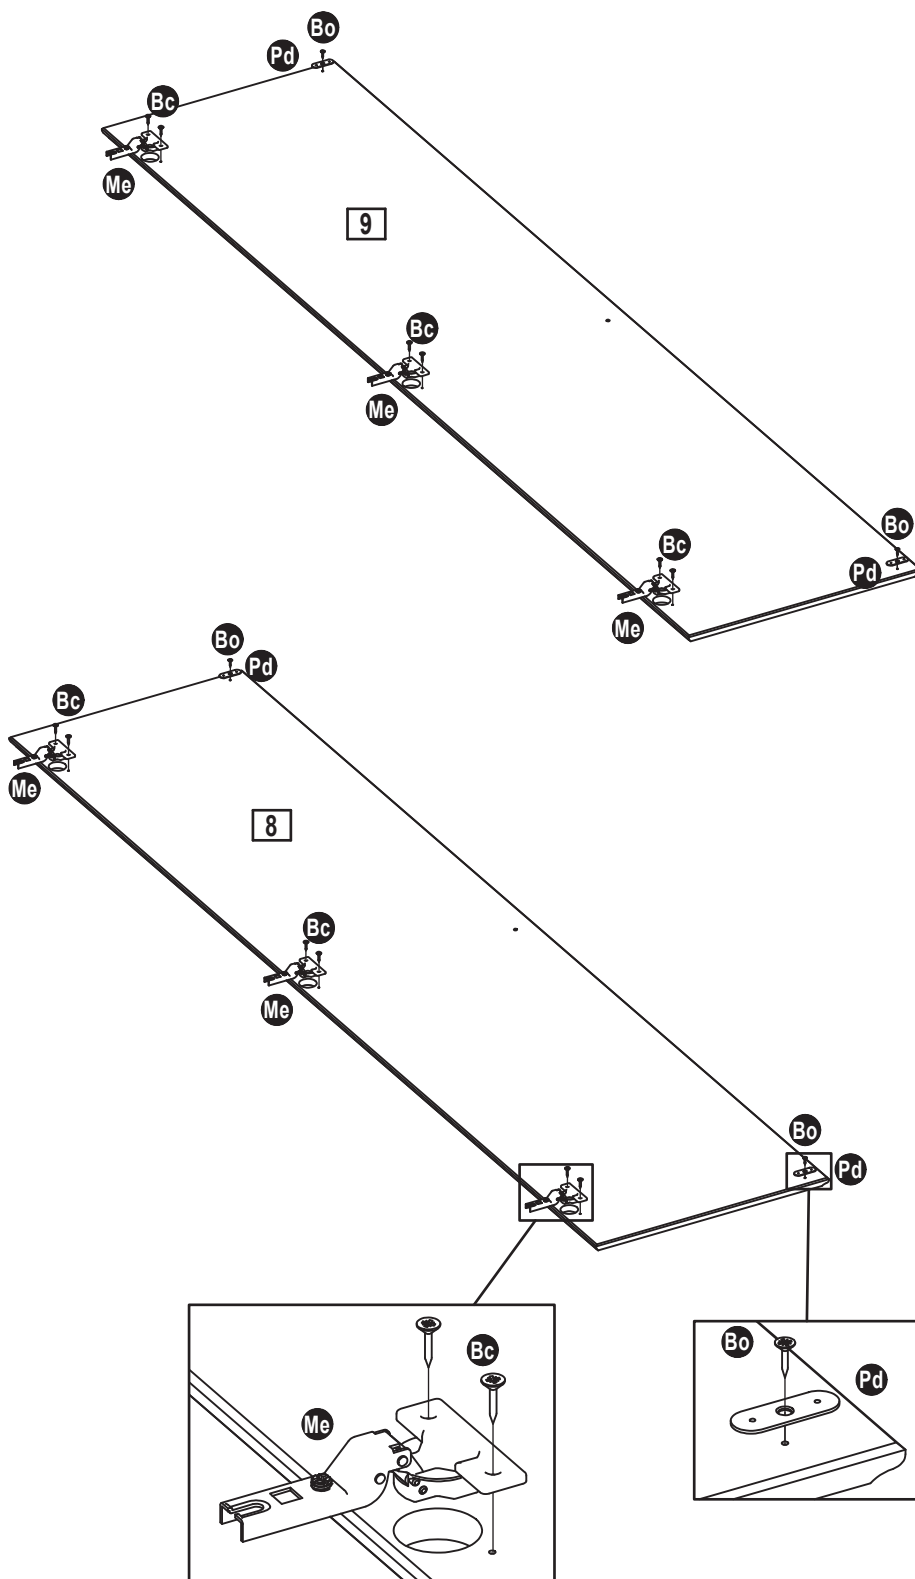

Assembly Instructions

Step 8

 
 


Warning!

The wardrobe is heavy.
Lift with care.

It's recommended that the wardrobe is fixed to the wall.

Use the fittings **Fh**. Follow the instructions included with the fittings.

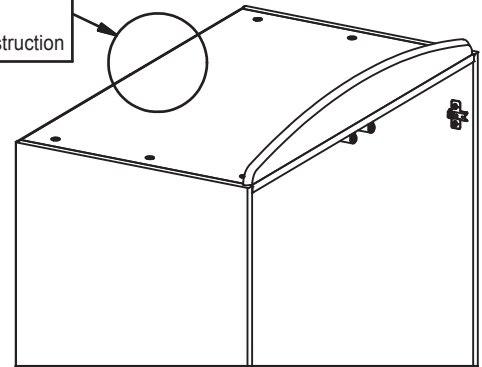
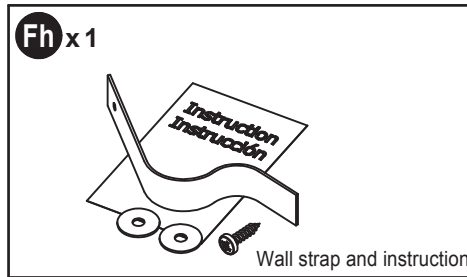


Step 9

Place the hanger rail **10** into the supports **Fi**.



Slide the cup hinges **Me** onto the crossplates **Mc**.
Fix the hinges using the premounted screw in the crossplates.

  See details above on how to fit the cup hinge **Me** onto the cross plate **Mc**.

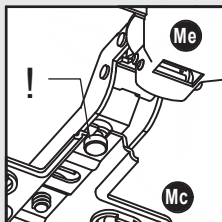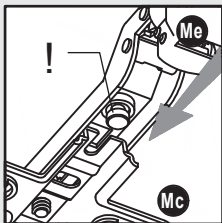

Fix the wooden knobs **Gc** to the doors **8** and **9** using screws **Jc**.

  Adjust the magnets **Pc**.

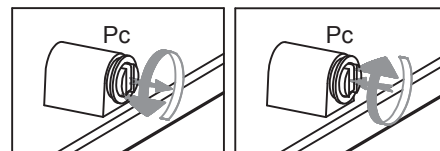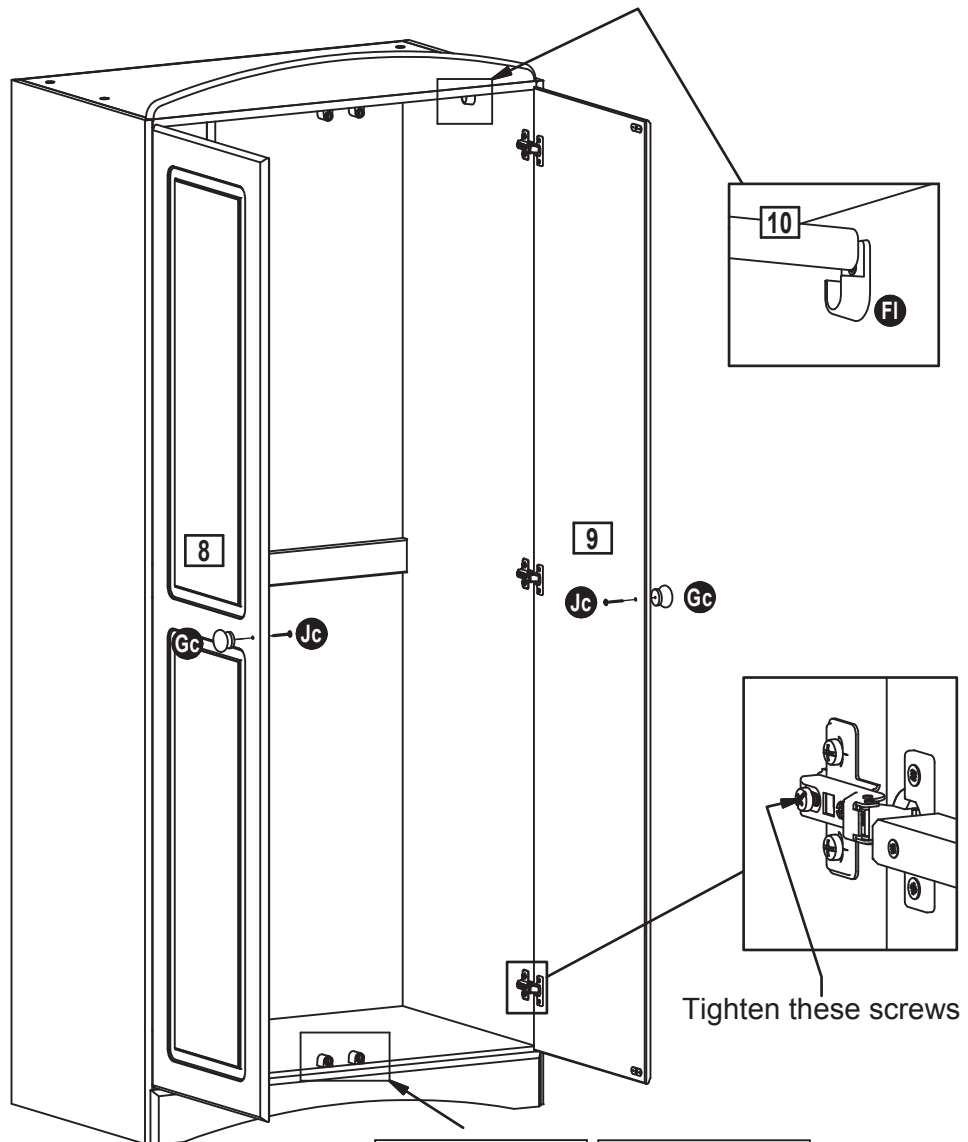


Assembly Instructions

Step 10


Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

 
b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

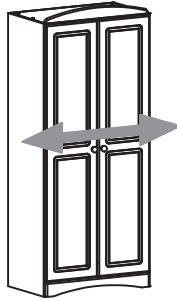

a:

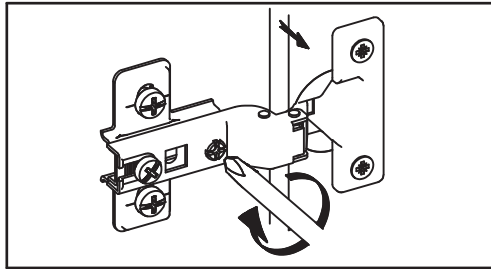 

b:

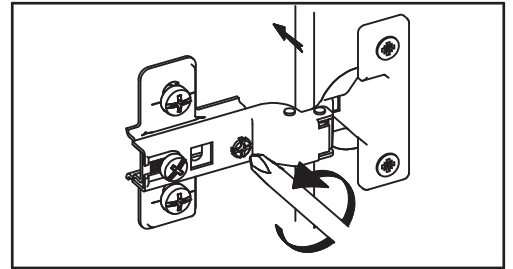 


Adjusting the doors forwards/backwards.


a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.

 
c:
Tighten the fixing screws of ALL the crossplates.

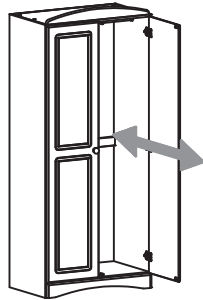


a:

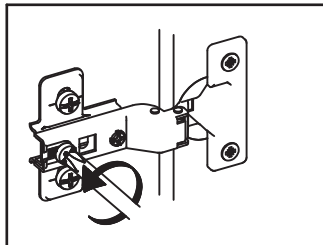 

b:

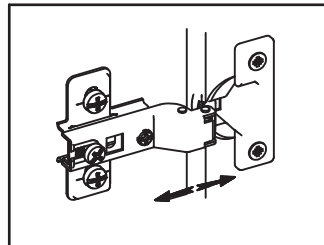 

c:

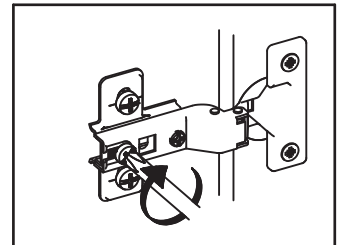 


Adjusting the doors up/down.


a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.

 
c:
Tighten the pre-mounted screws of ALL the crossplates.

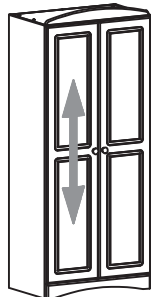

a:

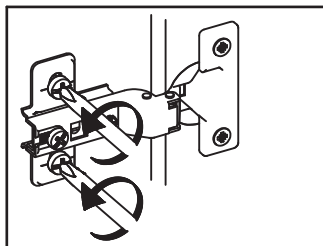 

b:

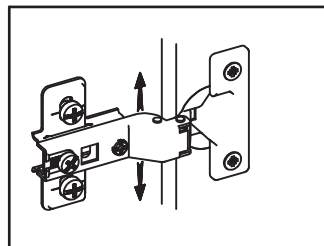 

c:

