Illustration 1


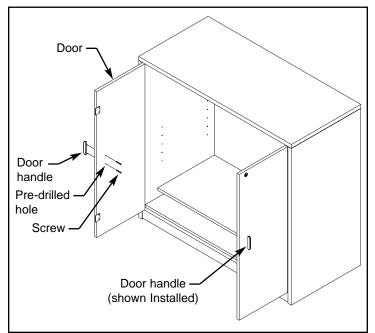


Illustration 2

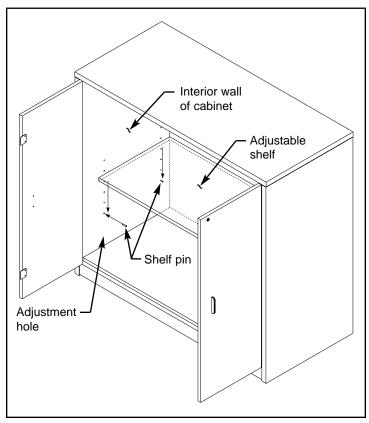

Read all instructions and review illustrations before installing.

Tools required for assembly: Phillips screwdriver

Hardware pack includes: (2) Door handle

(4) Screw

Door Handle Installation (refer to Illustration 1):

- 1. Fully open cabinet doors.
- 2. Locate pre-drilled holes along inside edge of each door.
- 3. On the outside of one door, align holes in rear of door handle with pre-drilled holes in door.
- 4. Use the Phillips screwdriver to install two screws (from hardware pack) through predrilled holes in door and into holes in rear of door handle.
- 5. Repeat Steps 3 and 4 for remaining door.

Shelf Adjustment (refer to Illustration 2):

- 1. Fully open cabinet doors.
- 2. Locate shelf adjustment holes on interior walls of cabinet.
- 3. Insert shelf pins, at desired location, into shelf adjustment holes. Insert four pins and ensure pins are installed at the same height.
- 4. With notches down, position adjustable shelf onto shelf pins. Ensure shelf pins are seated into notches in bottom of adjustable shelf.

Illustration 3

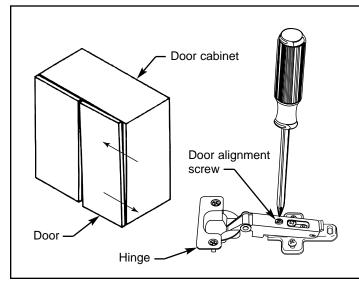


Illustration 4


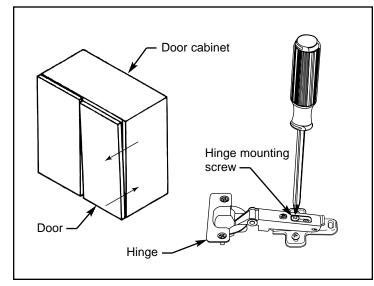


Illustration 5

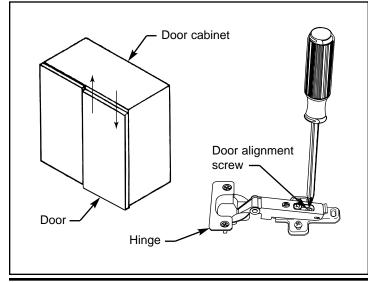

Side-To-Side Door Hinge Adjustment Instructions (refer to Illustration 3):

- 1. Fully open cabinet doors.
- 2. Locate door alignment screw on door hinge assembly.
- 3. Use the Phillips screwdriver to adjust door alignment screw.
- 4. Turn door alignment screw clockwise to adjust door out or counterclockwise to adjust door in.

Front-To-Back Door Hinge Adjustment Instructions (refer to Illustration 4):

- 1. Fully open cabinet doors.
- 2. Locate hinge mounting screw on door hinge assembly.
- 3. Use the Phillips screwdriver to loosen (but do not remove) the hinge mounting screw.
- 4. Adjust alignment of door and retighten hinge mounting screw.

Up-Or-Down Door Hinge Adjustment Instructions (refer to Illustration 5):

- 1. Fully open cabinet doors.
- 2. Locate door alignment screw on door hinge assembly.
- 3. Use the Phillips screwdriver to adjust door alignment screw.
- 4. Turn door alignment screw clockwise to adjust door down or counterclockwise to adjust door up.

242-7128A SIDE 2 OF 2 (10/00)