88 5004 941 Kitchen Island Combo (Oak Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Part List



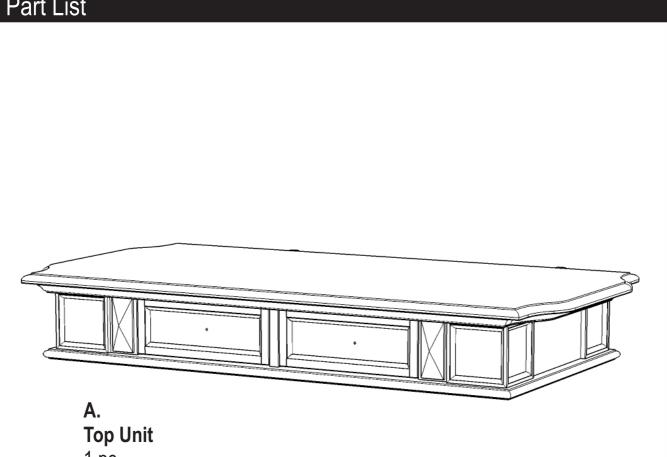

1 pc.

For assembly see instructions in carton 88 5004 943

Tools required for assembly : Phillips screwdriver Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com


88 5004 942 Kitchen Island Combo (Oak Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



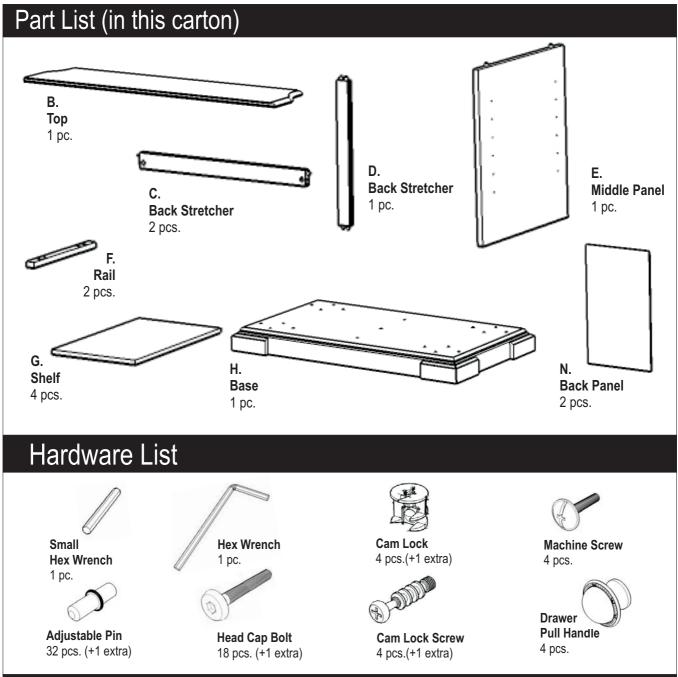

For assembly see instructions in carton 88 5004 943

Tools required for assembly : <u>Phillips</u> screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5004 943 Kitchen Island Combo (Oak Finish)


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

put hes

Part List (in this carton)

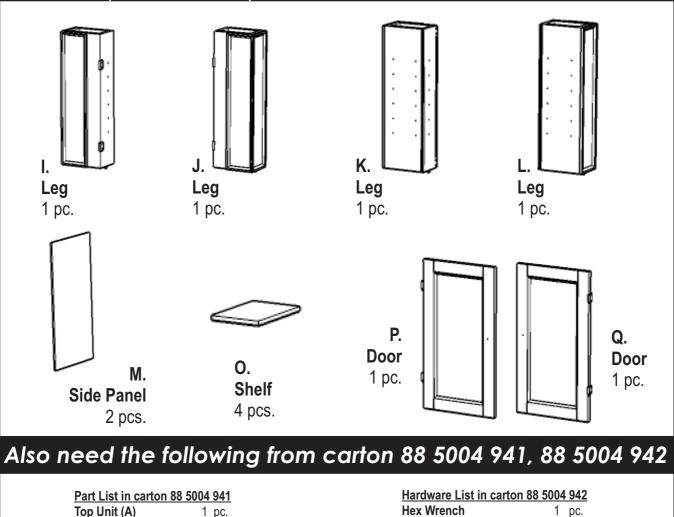


Top Unit (A) 1 pc. Part List in carton 88 5004 942 Top (B) 1 pc. 2 pcs. Back Stretcher (C) **Back Stretcher (D)** 1 pc. Middle Panel (E) 1 pc. 2 pcs. Rail (F) 4 pcs. Shelf (G) 1 pc. Base (H) 2 pcs. **Back Panel (N)**

Next Wrench1pc.Small Hex Wrench1pc.Cam Lock5pcs.Cam Lock Screw5pcs.Head Cap Bolt19pcs.Adjustable Pin33pcs.Machine Screw4pcs.Drawer Pull Handle4pcs.


Tools Required For Assembly : <u>Phillips</u> screwdriver Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

IMPORTANT

Do not tighten up all the screws until each part is properly assembled. You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

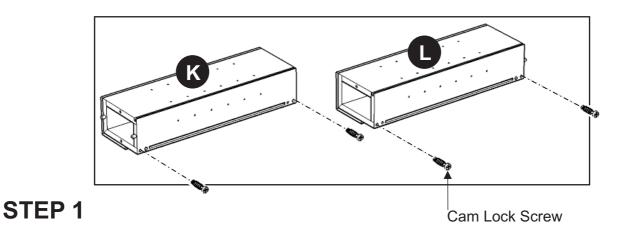


Put Cam Lock Screws into the pre-drilled holes of Leg (K),(L) and tighten.

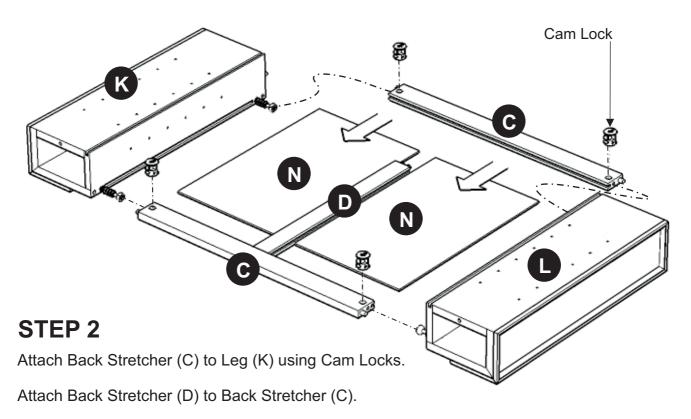

Slide Back Panel (N) to unit, then attach Back Stretcher (C) to unit using Cam Locks.


Attach Leg (L) to the unit using Cam Locks.

Assembly Instructions 3/4

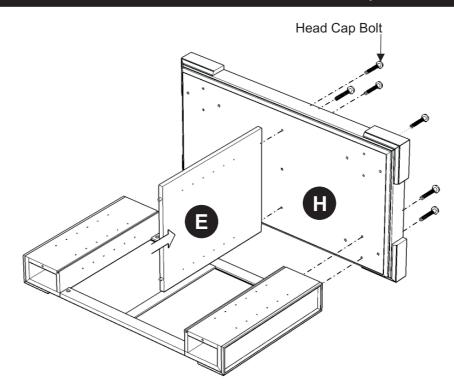

STEP 3

Attach unit from Step 2 and Middle Panel (E) to Base (H) with Head Cap Bolts.

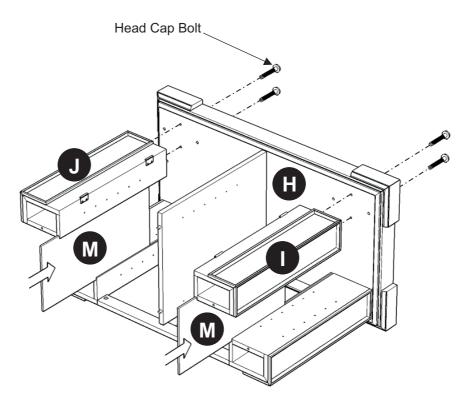

STEP 4

Attach Leg (I) and (J) to Base (H) with Head Cap Bolts.

Slide Side Panels (M) into position.

Assembly Instructions 4/4

