


88 5530 07

Naples Corner Entertainment

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

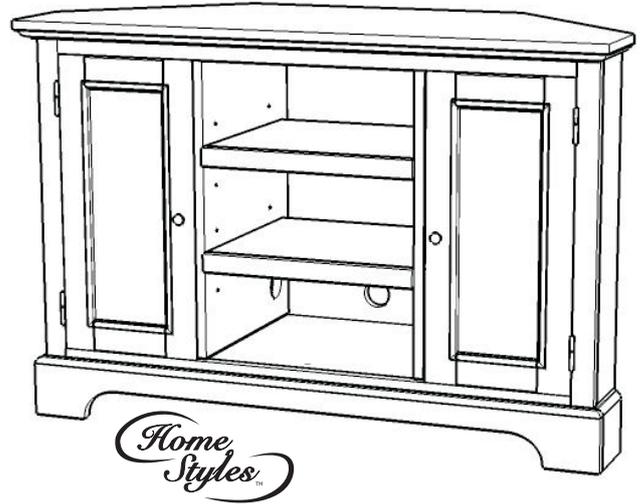


Home Styles
Casual Attire For Today's Home

Part List




 A.
Top
1 pc.




B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

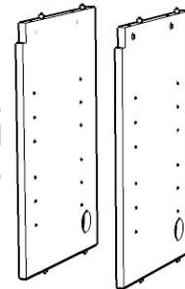

D1.
Middle Panel
1 pc.

 
D2.
Middle Panel
1 pc.




E.
Front Rail
1 pc.



 F.
Base
1 pc.




K.
Plinth
1 pc.

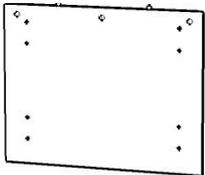

G.
Back Panel
1 pc.

I.
Back Panel
1 pc.

 J.
Back Panel
1 pc.



H.
Back Panel
1 pc.




L.
Shelf
2 pcs.



M.
Shelf
4 pcs.

N.
Door
1 pc.

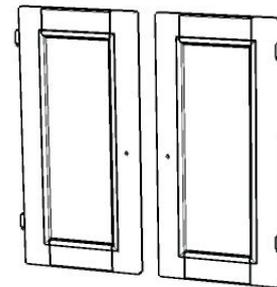

O.
Door
1 pc.

Hardware List



Hex Wrench
1 pc.



Cam Lock Screw
31 pcs.(+2 extra)



Wood Screw
for Base and
Back Panel
13 pcs.(+1 extra)



Machine Screw
2 pcs.




Cam Lock
31 pcs.(+2 extra)



Flat Washer
for Wood Screw
13 pcs.(+1 extra)



Adjustable Pin
24 pcs.(+1 extra)

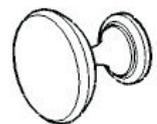


Pull Handle
2 pcs.

Tools required for assembly : **Phillips** screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com


IMPORTANT

Do not tighten screws until each part is properly assembled.

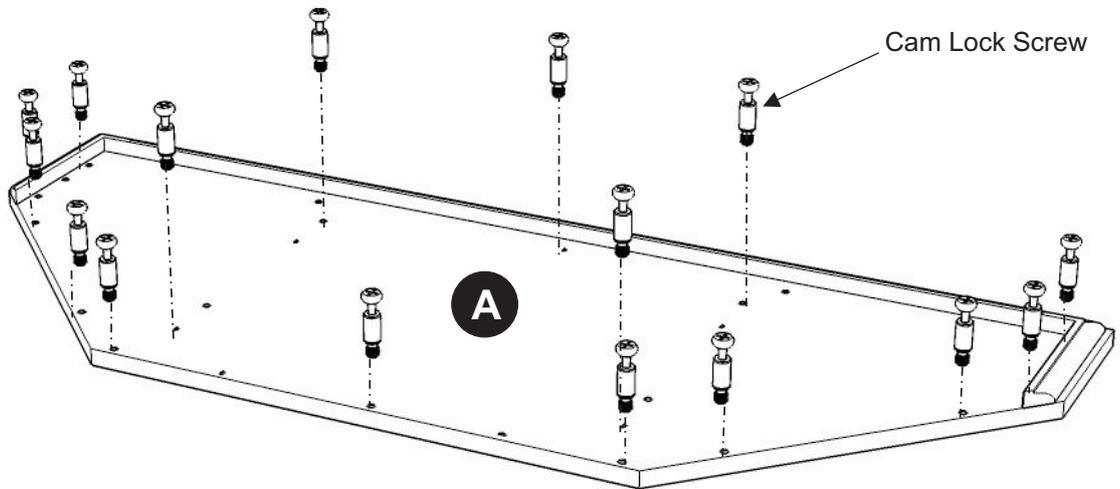

STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panel (B) and (C), Back Panel (I) and (J), Plinth (K), then tighten.

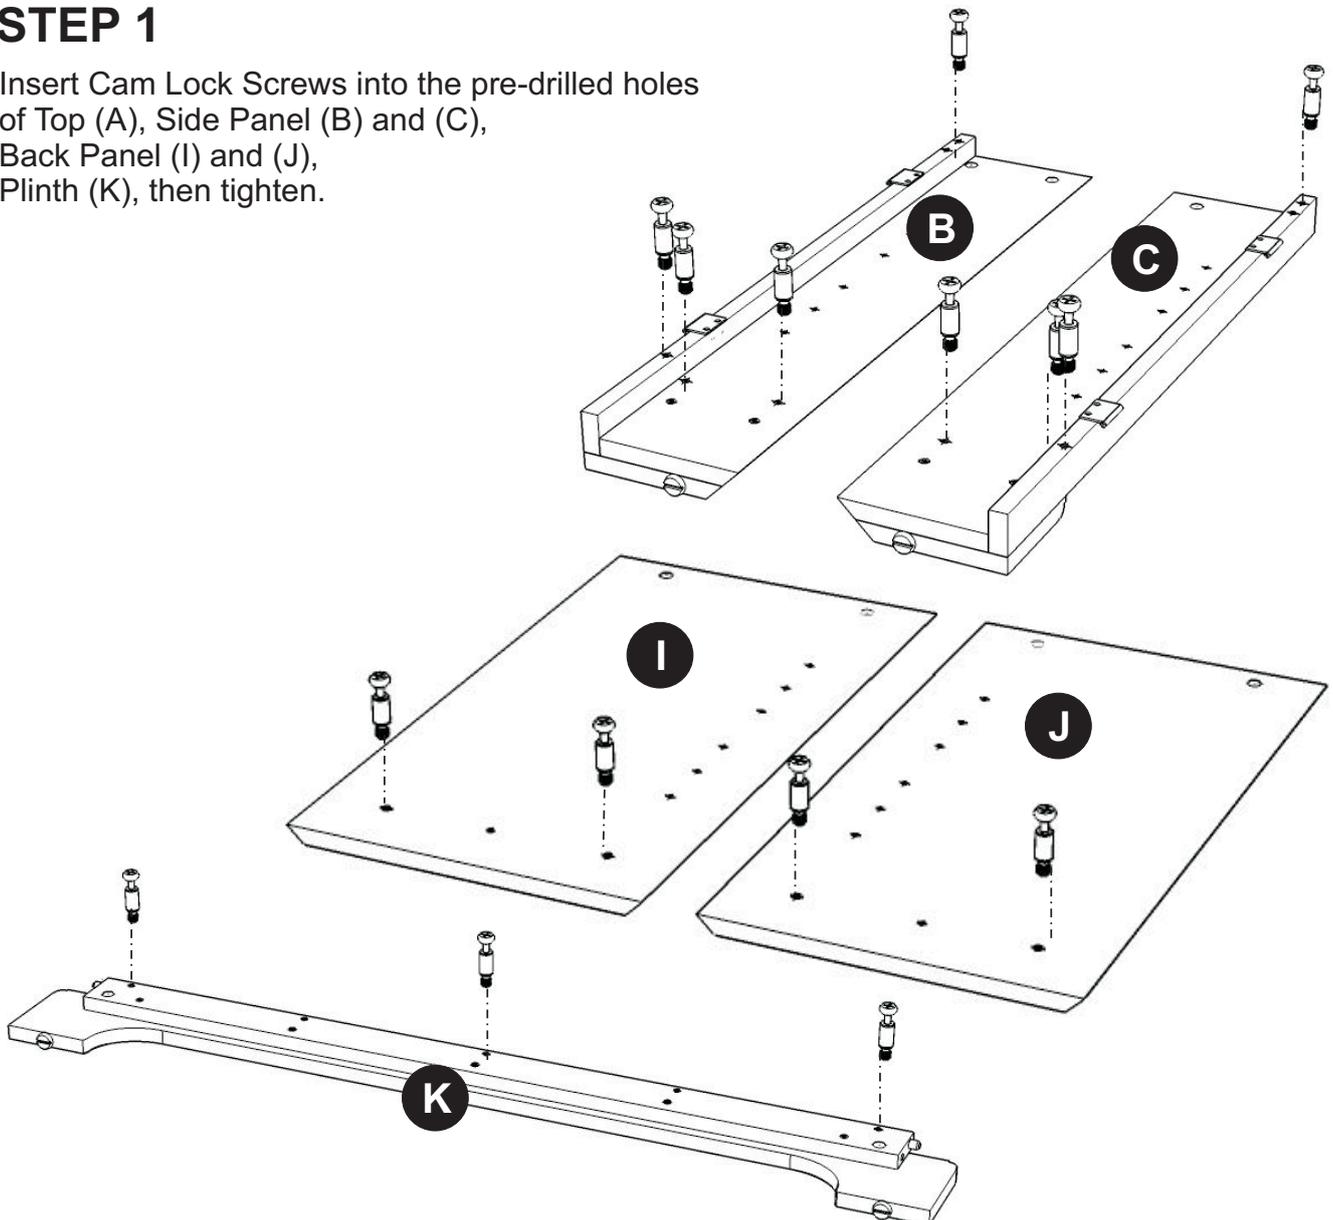

STEP 2

Attach Middle Panels (D1) and (D2) to Base (F) using Flat Washers and Wood Screws.


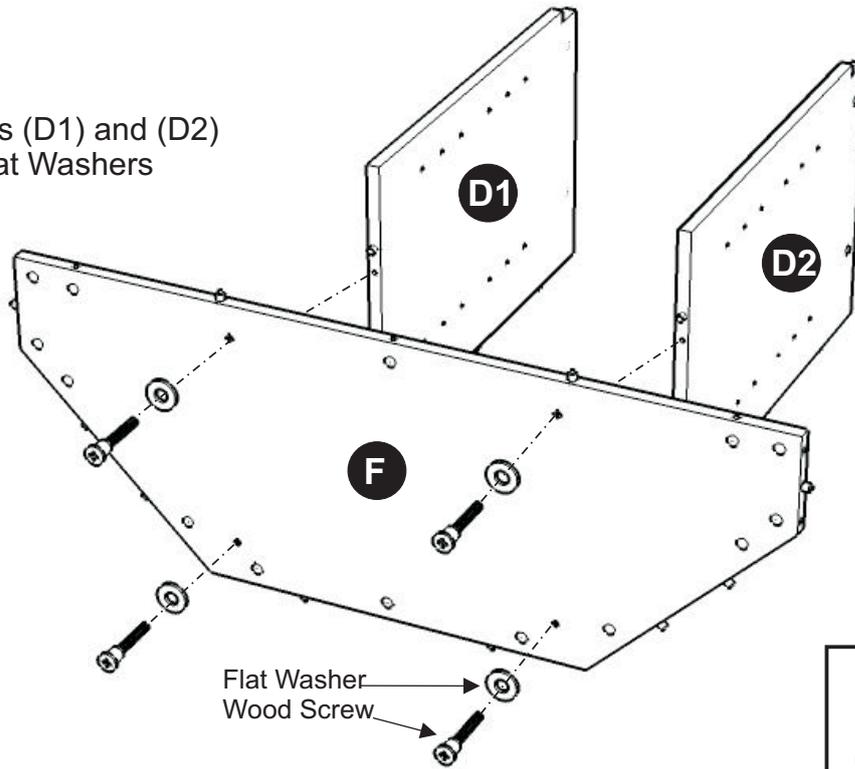


Figure 1

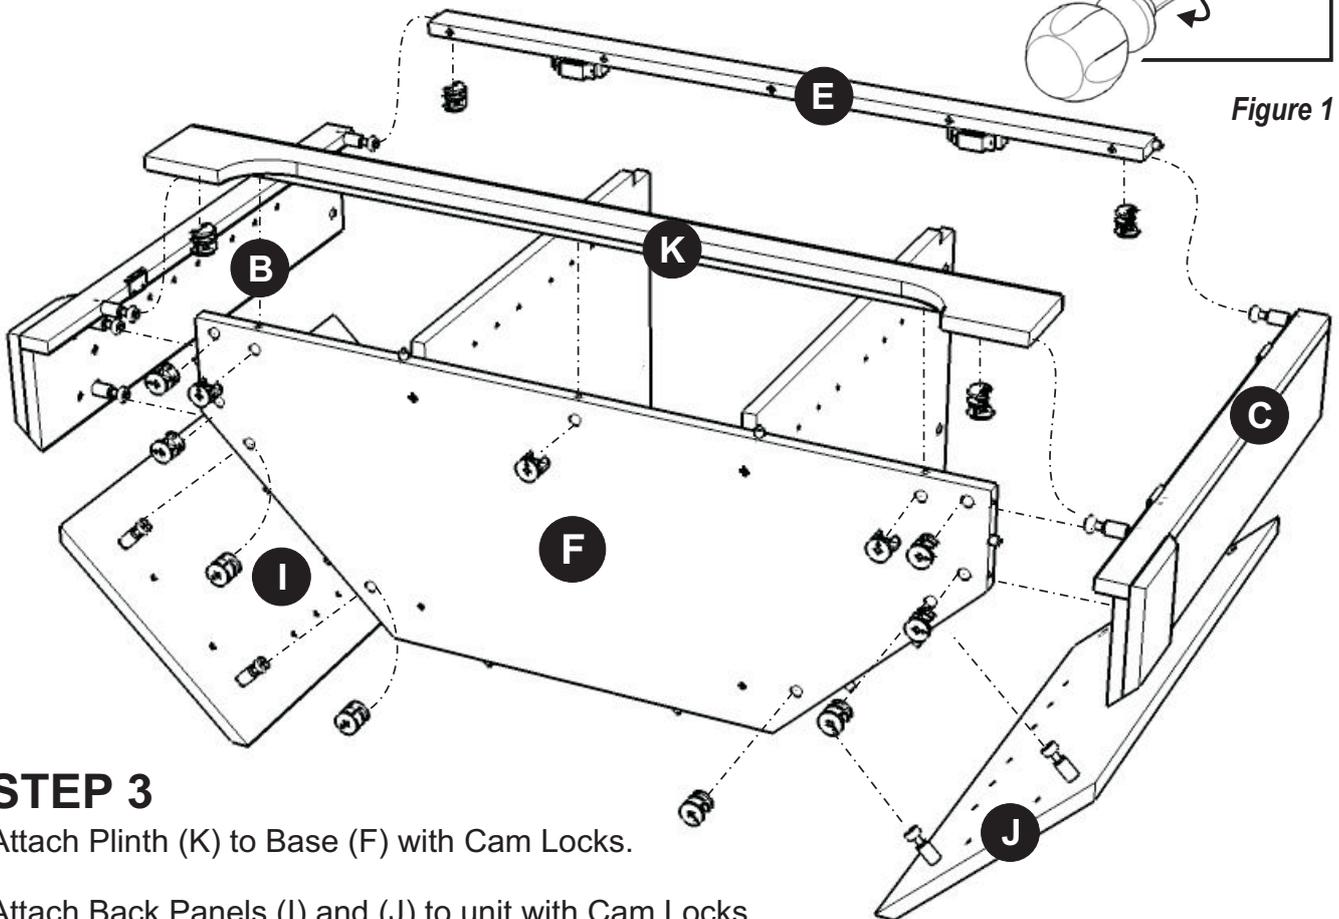

STEP 3

Attach Plinth (K) to Base (F) with Cam Locks.

Attach Back Panels (I) and (J) to unit with Cam Locks.

Attach Side Panels (B), Front Rail (E) and Side Panel (C) to unit with Cam Locks. (see Figure 1)

STEP 4

Attach Back Panel (G) and (H) to the unit with Flat Washers and Wood Screws.

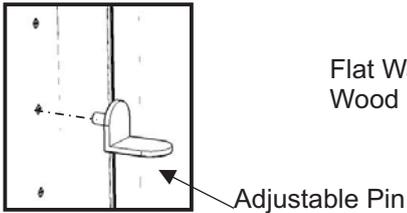


Figure 2

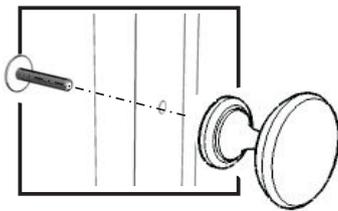


Figure 3


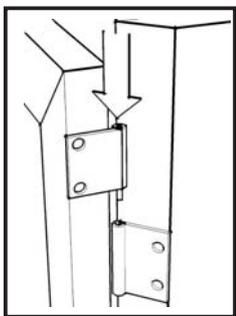


Figure 4

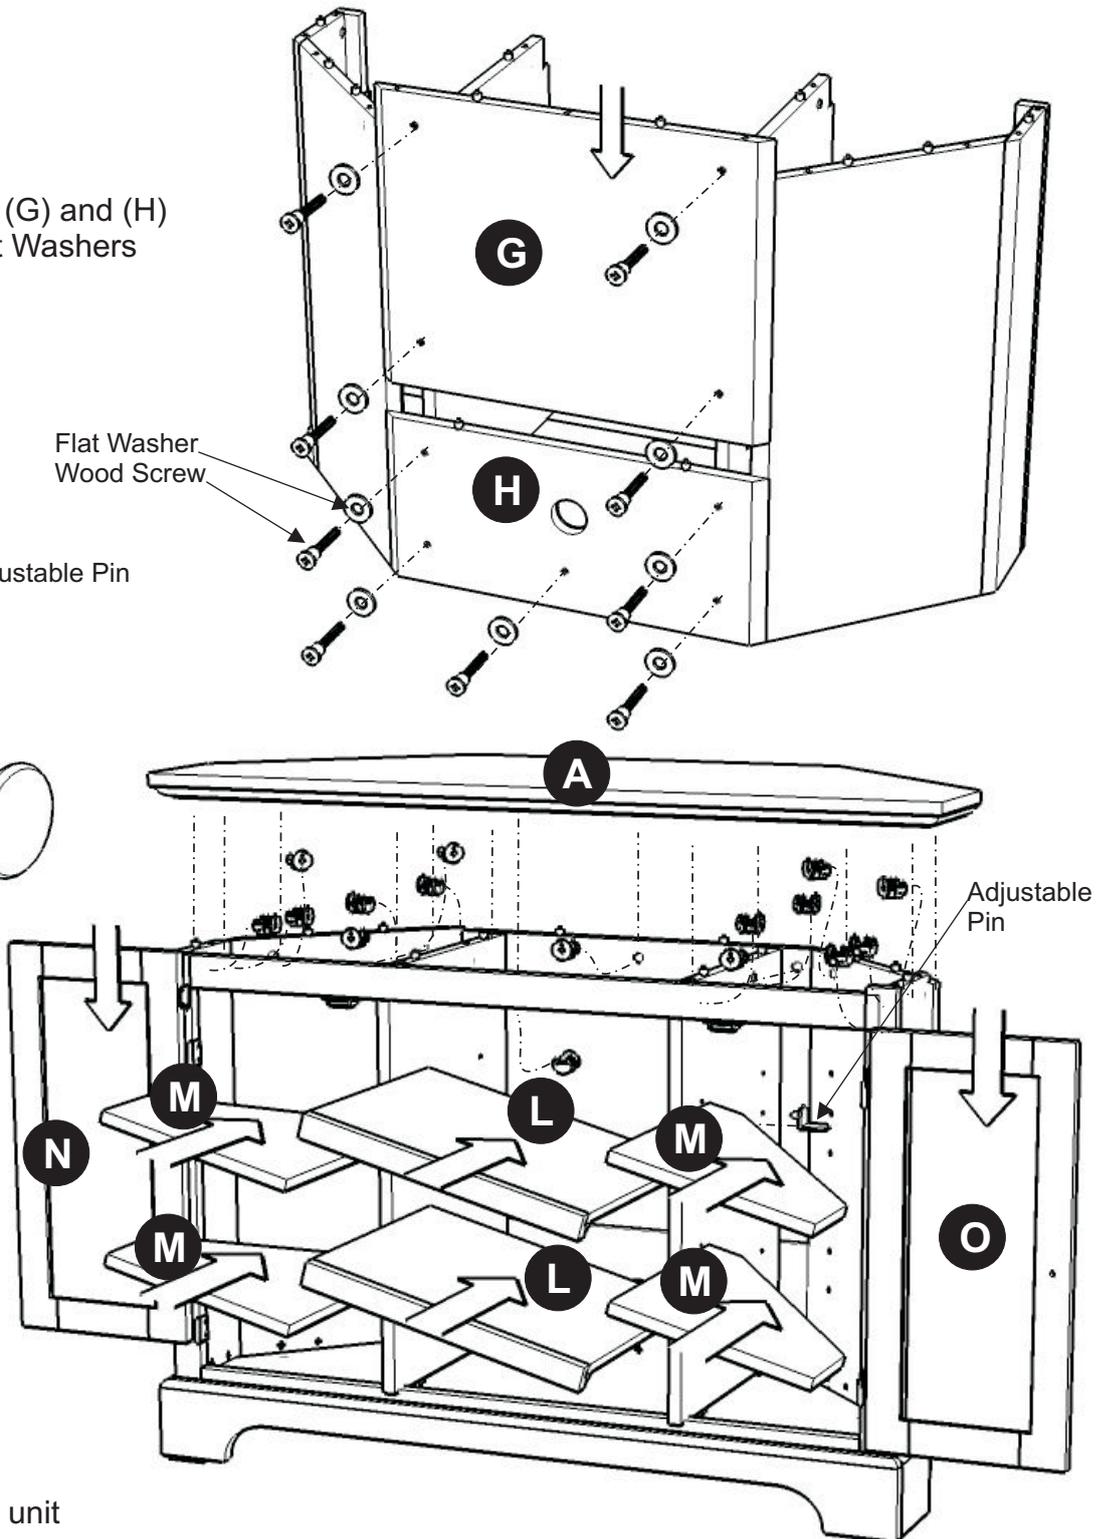

STEP 5

Place Top (A) onto unit with Cam Locks.

Insert Adjustable Pins into side panels and middle panels at the desired level (see Figure 2), then place Shelves (L) and (M) into position.

Assemble Pull Handles to Door (N) and (O) with Machine Screws. (see Figure 3)

Attach Door (N) and (O) to the side panels, by sliding the door lift hinges into the side panels lift hinges. (see Figure 4)