88 5539 100 Omni Compact TV Credenza


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

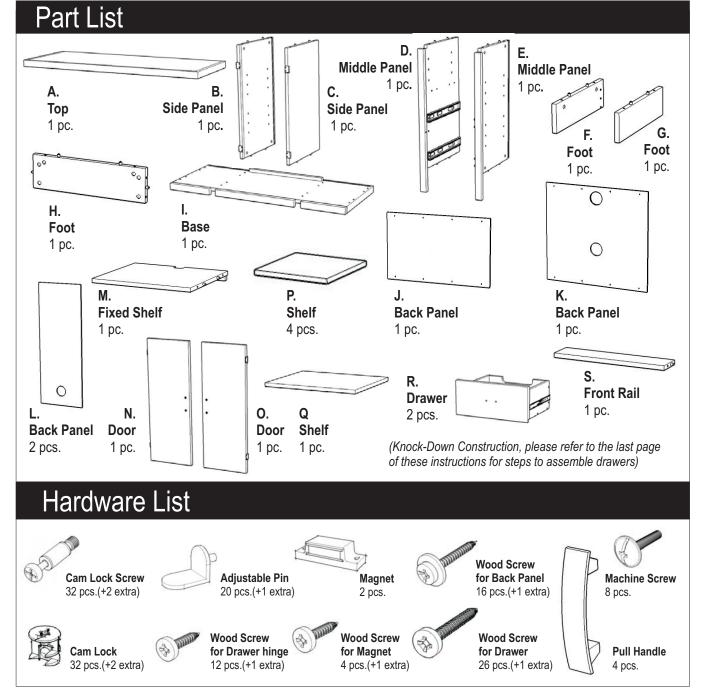


Tools required for assembly : Phillips screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com


Assembly Instructions 2/5

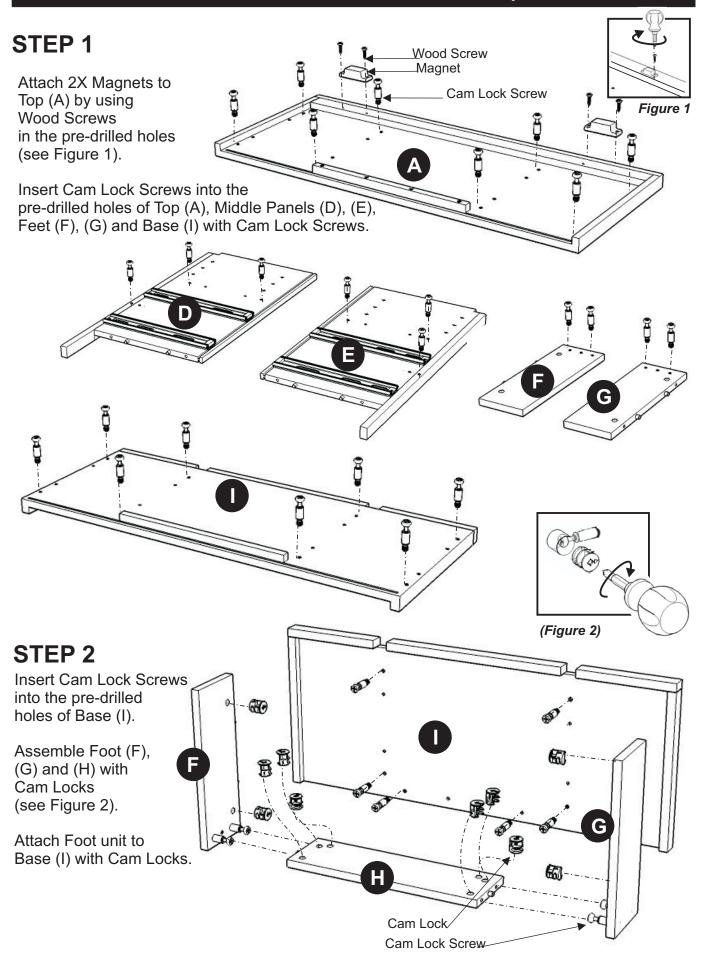

Assembly Instructions 3/5

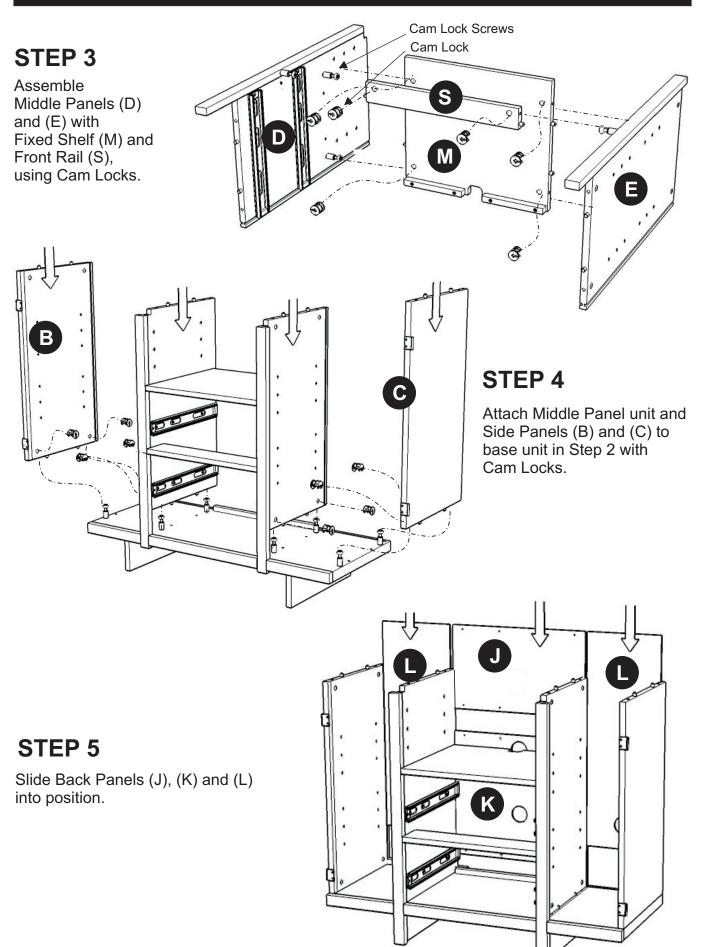

Assembly Instructions 4/5

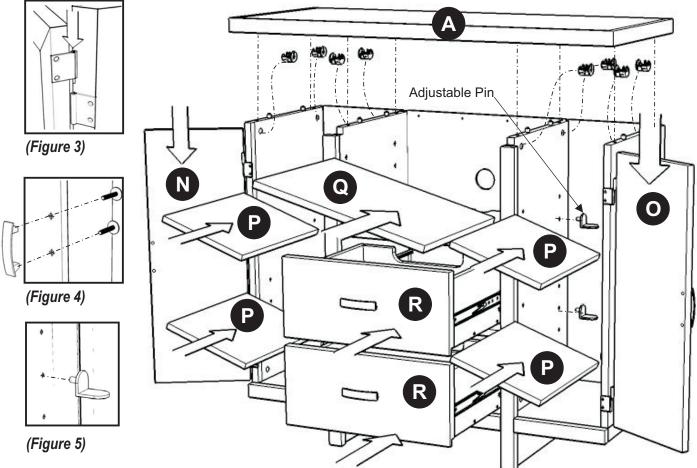


STEP 6

Attach Doors (N) and (O) by sliding the door lift hinges into the side panels lift hinges. (See figure 3)

Assemble Pull Handles to Doors with Machine Screws. (See figure 4)


Place Top (A) onto the unit with Cam Locks, then insert Adjustable Pins into side panels and middle panels at the desired level. (See figure 5)

Place Shelves (P), (Q) and Drawer (R) into position.

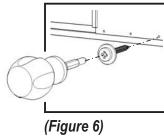

STEP 7


Insert 16X Wood Screws from the back of the unit, tighten up all the Wood Screws. (See figure 5)

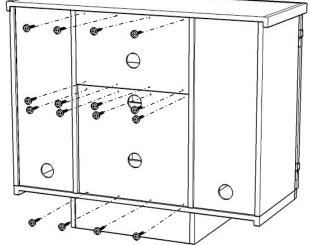

Note: Please make sure unit is level before tightening these screws.

Assembly Instructions 5/5

Drawer (R)

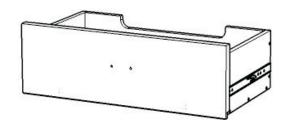


STEP 1

Attach R2 to R5, using a <u>Phillips</u> screwdriver and <u>long</u> wood screws (4X), tighten halfway. (see Figure 1)

STEP 2

2 pcs.

2 pcs.

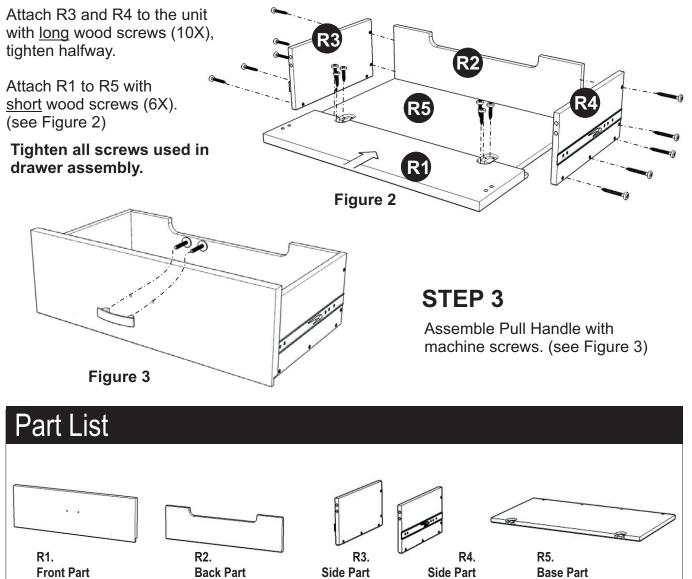

2 pcs.

2 pcs.

2 pcs.