


88 5554 80 Arm Chair (Black Finish)

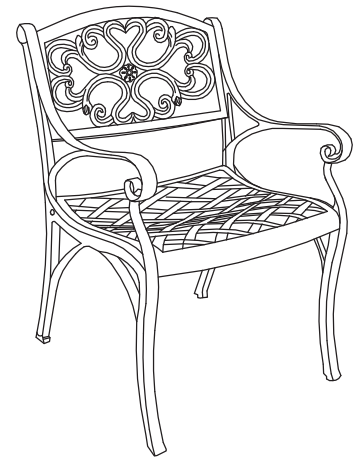

IMPORTANT NOTE

 
Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

Part List



 A. Back
1 pc.



B. Seat
1 pc.



C. Side Frame
1 pc.



D. Side Frame
1 pc.

Hardware List



 
Key Wrench
1 pc.



Bolt (small)
4 pcs.(+1 extra)




Spring Washer (small)
4 pcs.(+1 extra)



Flat Washer (small)
4 pcs.(+1 extra)



 Nut (small)
4 pcs.(+1 extra)



Nut Cap (small)
4 pcs.(+1 extra)



Bolt (large)
4 pcs.(+1 extra)



Spring Washer (large)
4 pcs.(+1 extra)




Flat Washer (large)
4 pcs.(+1 extra)



Nut (large)
4 pcs.(+1 extra)



Nut Cap (large)
4 pcs.(+1 extra)

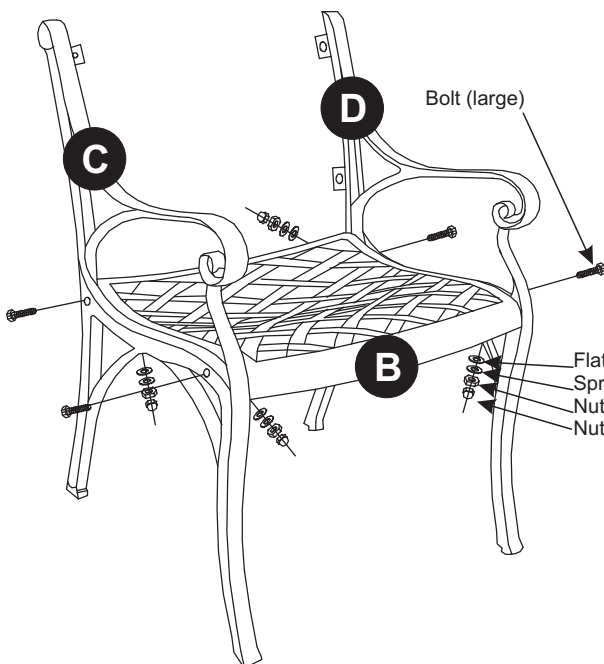

STEP 1


Attach Side Frame (C) and (D) to Seat (B) with Bolts, Spring Washers, Flat Washers and Nuts.

Tighten all Bolts with Key Wrench. Cover all Nuts with Nut Caps.

STEP 2

Attach Back (A) to unit with Bolts, Spring Washers, Flat Washers and Nuts.

Tighten all Bolts with Key Wrench. Cover all Nuts with Nut Caps.

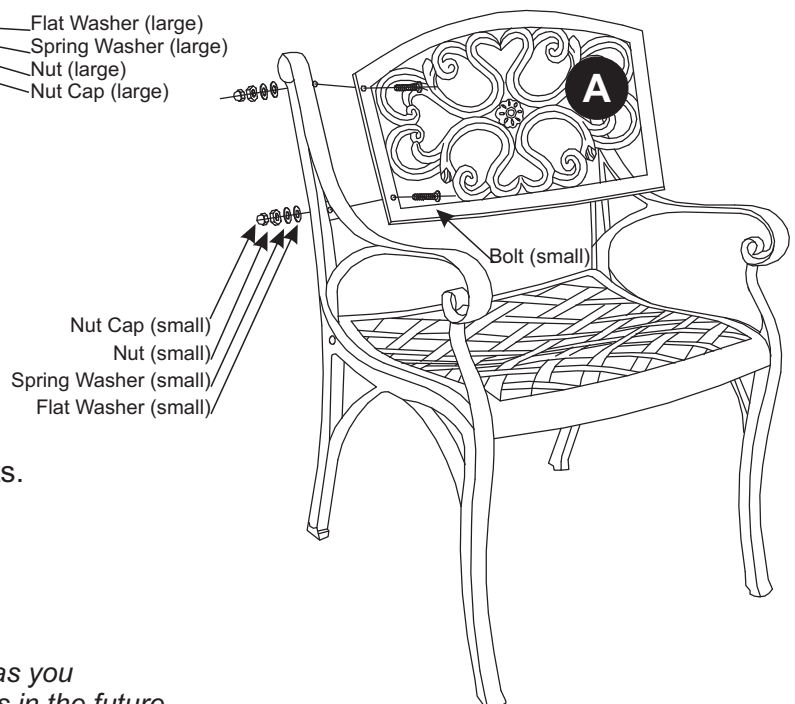

Please keep the Key Wrench as you may need to retighten the Bolts in the future.

Tools required for assembly : **Philips** screwdriver

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com