

88 5051 30

St. Ives


Metal & Wood Table

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


*Home
Styles*

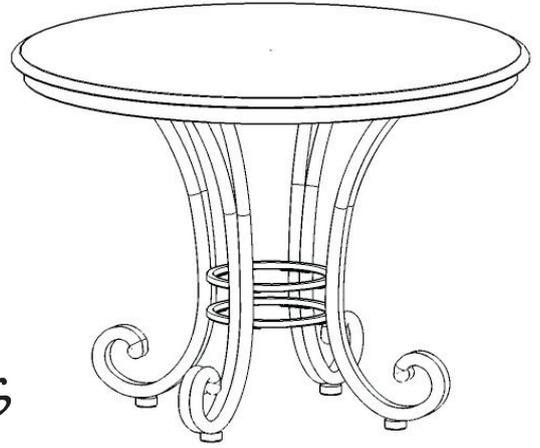

Part List

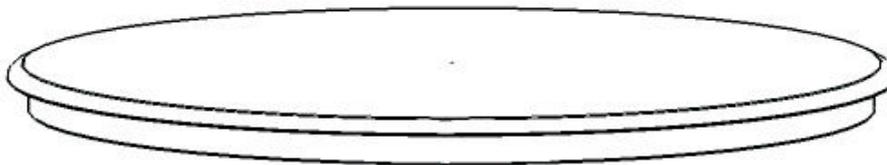

A.
Top
1 pc.

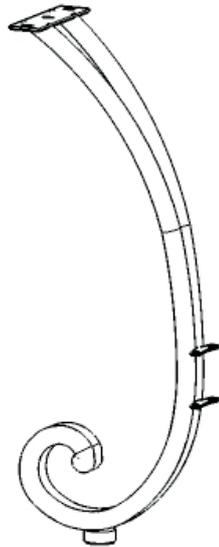

B.
Leg
4 pcs.



C.
Stretcher
2 pcs.

Hardware List



Hex Wrench
1 pc.



 
Small
Hex Wrench
1 pc.



Head Cap Bolt
28 pcs. (+1 extra)



Spring Washer
28 pcs. (+1 extra)



Flat Washer
28 pcs. (+1 extra)

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

Assembly Instructions

IMPORTANT


- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.
- * Use a soft cloth between these parts and the floor.

STEP 1

Place Top (A) upside down on a soft cloth.

Attach Legs (B) to Top (A) with Head Cap Bolts, Spring Washers and Flat Washers.

Head Cap Bolt
Spring Washer
Flat Washer

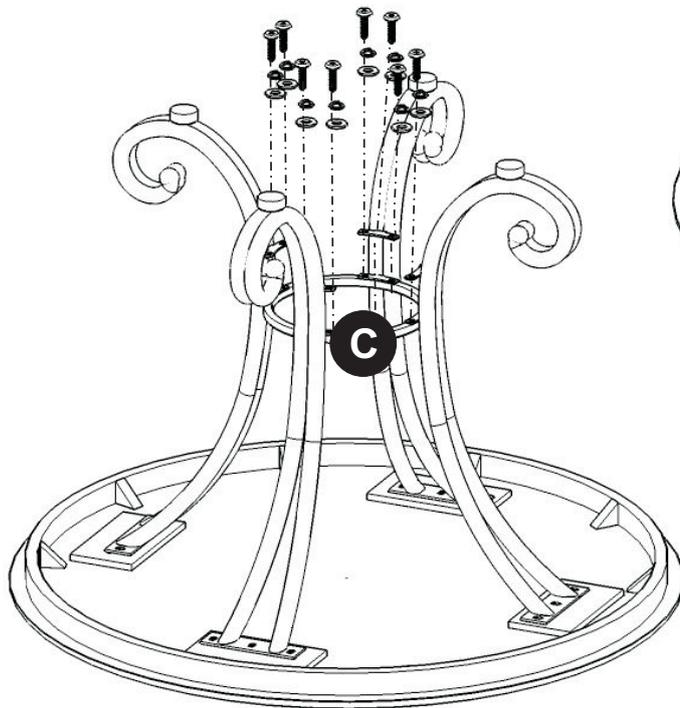

STEP 2

Attach Stretcher (C) to unit with Head Cap Bolts, Spring Washers and Flat Washers.

STEP 2

Attach the other Stretcher (C) to unit with Head Cap Bolts, Spring Washers and Flat Washers.

Turn the unit to its' upright position.

To level the unit, adjust the adjustable levelers on the bottom of unit.
(See figure 1)

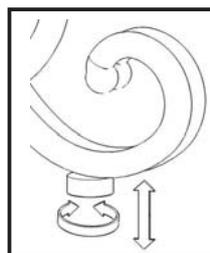


Figure 1

