# 88 5181 15 Arts & Crafts Executive Desk

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



## PART LIST



Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

### Assembly Instructions

#### IMPORTANT

- \* Use a soft cloth between these parts and the floor.
- \* Do not tighten up all the screws until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the Bolts in the future.
- \* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

