
88 5180 04


Arts & Crafts Computer Hutch (Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

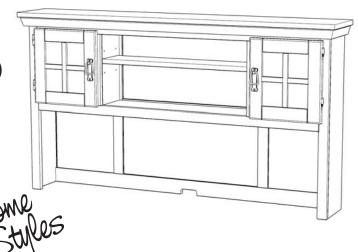

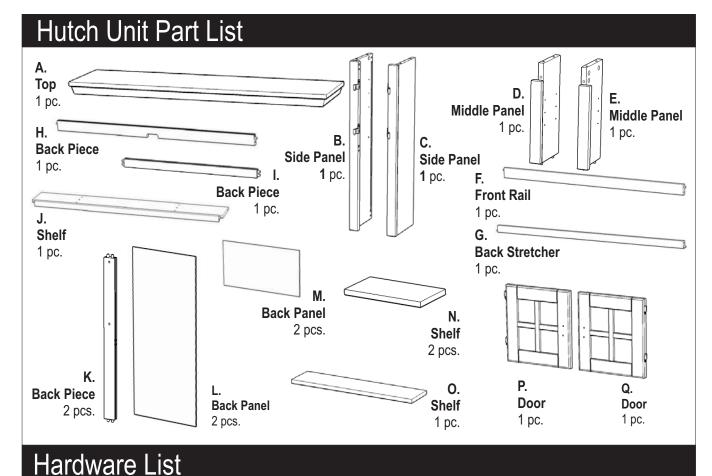



Tools required for assembly: Phillips screwdriver


2 pcs.

Assembly Instructions 2/3

IMPORTANT


Do not tighten up all the screws until each part is properly assembled.

You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

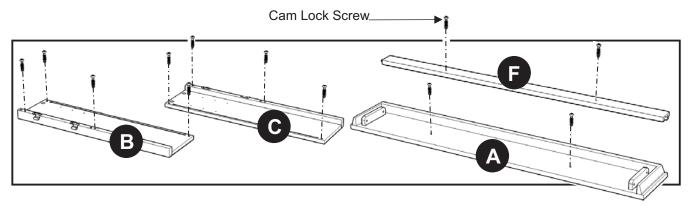

STEP 1

Put Cam Lock Screws into the pre-drilled holes of Top (A) Side Panel (B),(C) Front Rail (I) and tighten.

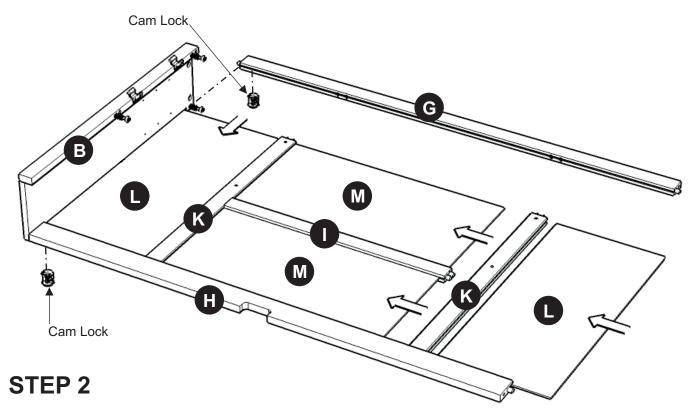

Attach Back Stretcher (H) to Side Panel (B) using Cam Lock.


Attach Back Piece (K) to Back Stretcher (H) and slide Back Panel (L) into place.

Attach Back Piece (I) to the unit and slide Back Panel (M) into place.

Attach Back Piece (K) to the unit and slide Back Panel (L) into Place.

Attach Back Stretcher (G) to the unit using Cam Locks.

Assembly Instructions 3/3

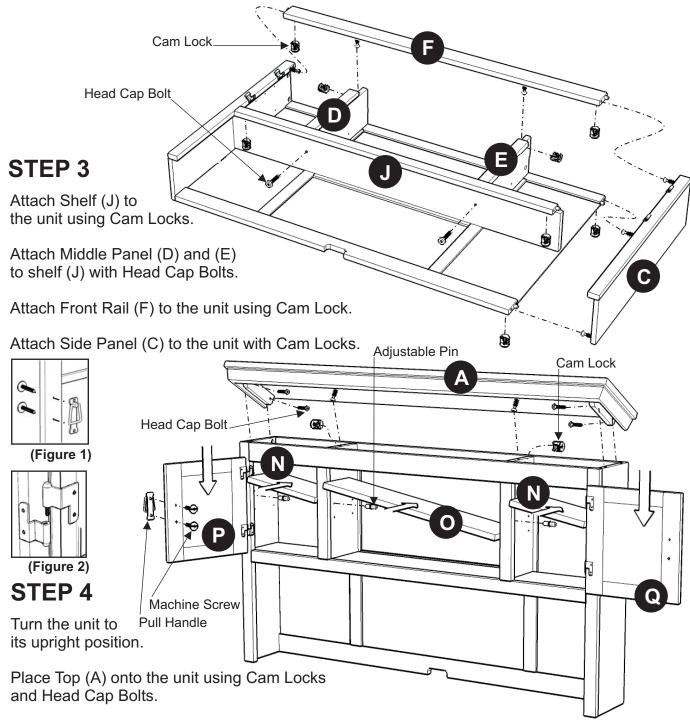


Insert Adjustable Pins into side panels and middle panels at the desired level

and Slide Shelf (N) and (O) into place.

Assemble Pull Handles to Door (P) and (Q) with Machine Screws. (see Figure 1)

Attach Door (P) and (Q) to the side panels by sliding the door lift hinges into the side panel lift hinges. (see Figure 2)


Place the Hutch unit onto the Buffet unit. (see Figure 3)

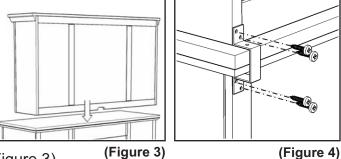

Attach Steel Plate Connectors on the back of the units by inserting Wood Screws and tighten. (see Figure 4)

Attention!

For safety reasons, please follow these additional instructions to prevent the unit from tipping over.

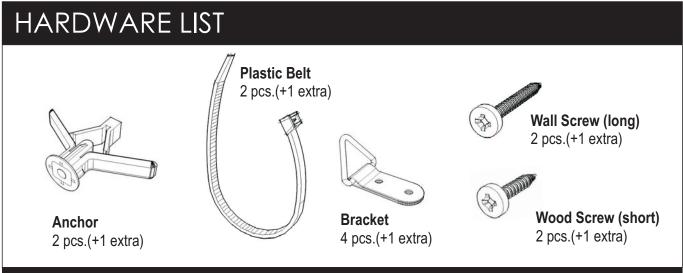

Assembly Instructions

of the belt and pull until tight.

