## **88 5050 06** Modern Craftsman Media Console

### **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



### Part List 0 0 Α. Β. Cabinet Stretcher 1 pc. 4 pcs. C. Stretcher 1 pc. D. Side Frame 2 pcs. Ε. Shelf 2 pcs. Hardware List **Spring Washer** 24 pcs. (+1 extra) Hex Wrench 1 pc. Small **Head Cap Bolt** Flat Washer Hex Wrench Wood Screw 24 pcs. (+1 extra) 24 pcs. (+1 extra ) 27 pcs.(+1 extra) 1 pc.

Tools required for assembly : Phillips screwdriver


Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

## Assembly Instructions 2/4


#### IMPORTANT

- \* Do not tighten up all the screws until each part is properly assembled.
- \* You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

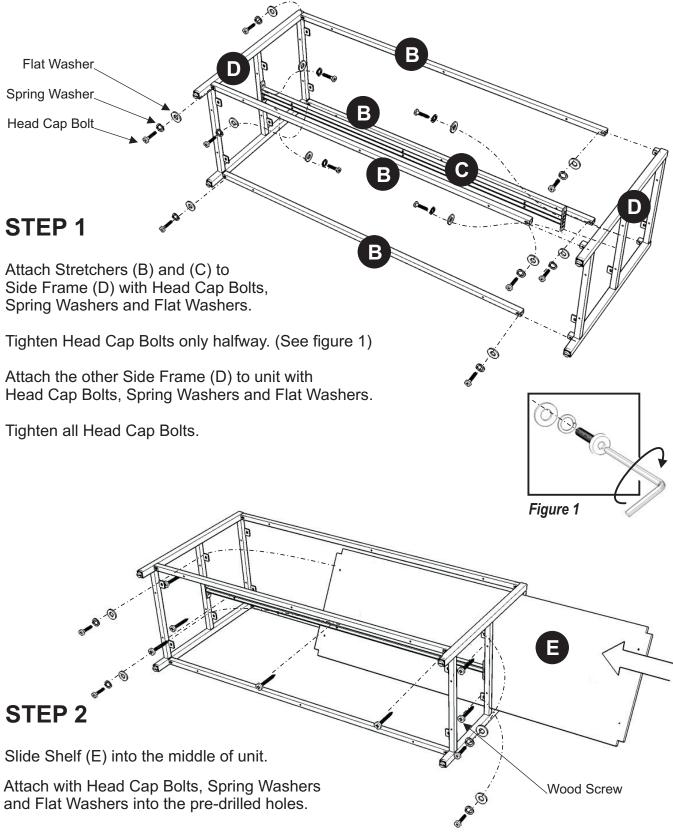


Attach with 7X Wood Screws.

### Assembly Instructions 3/4

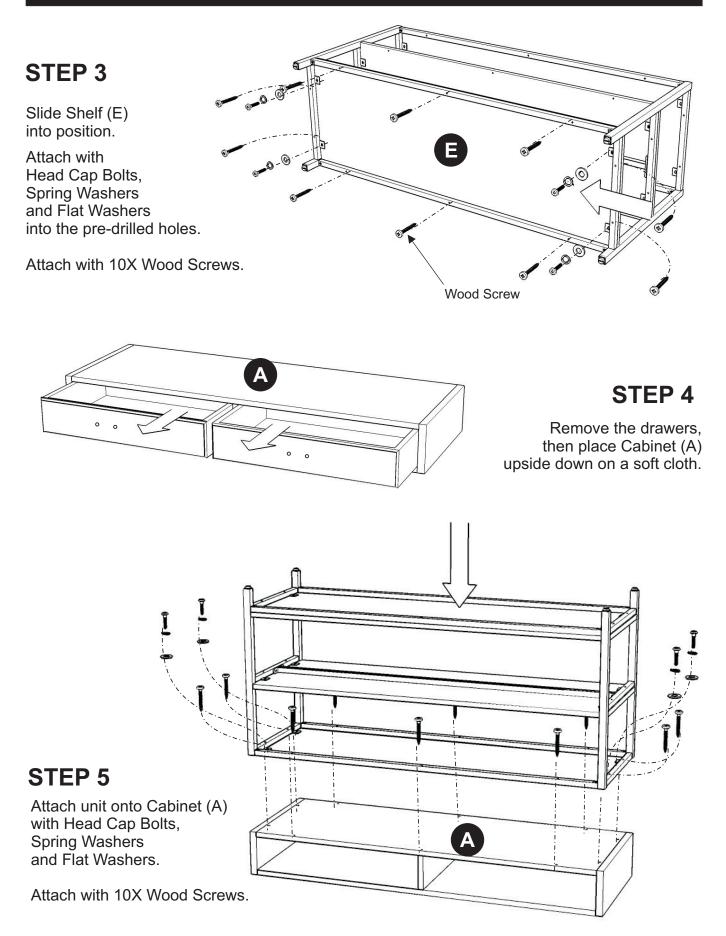

# Assembly Instructions 4/4

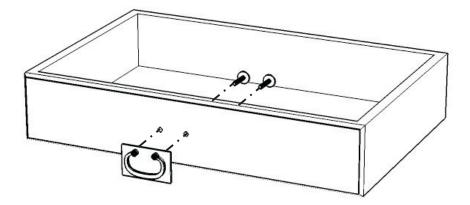

### **STEP 6**

Remove the Pull Handles that are installed on the inside of the drawers and re-install them on the outside of the drawer.

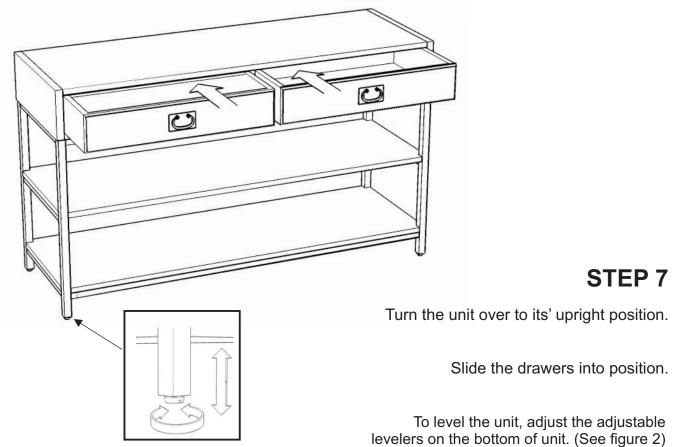


Figure 2