

88 5521 5011

 
The Aspen Queen Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home  
Styles

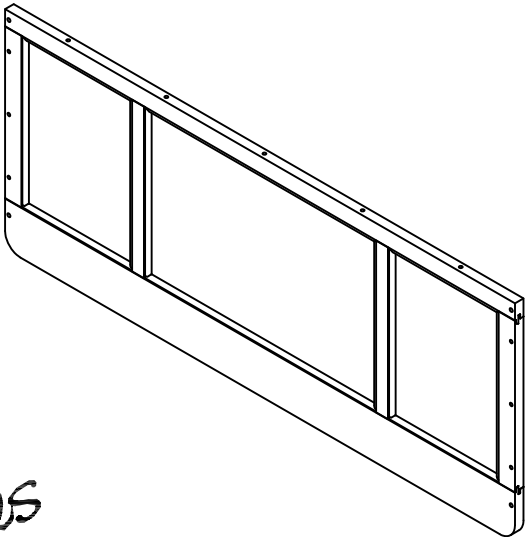

Part List

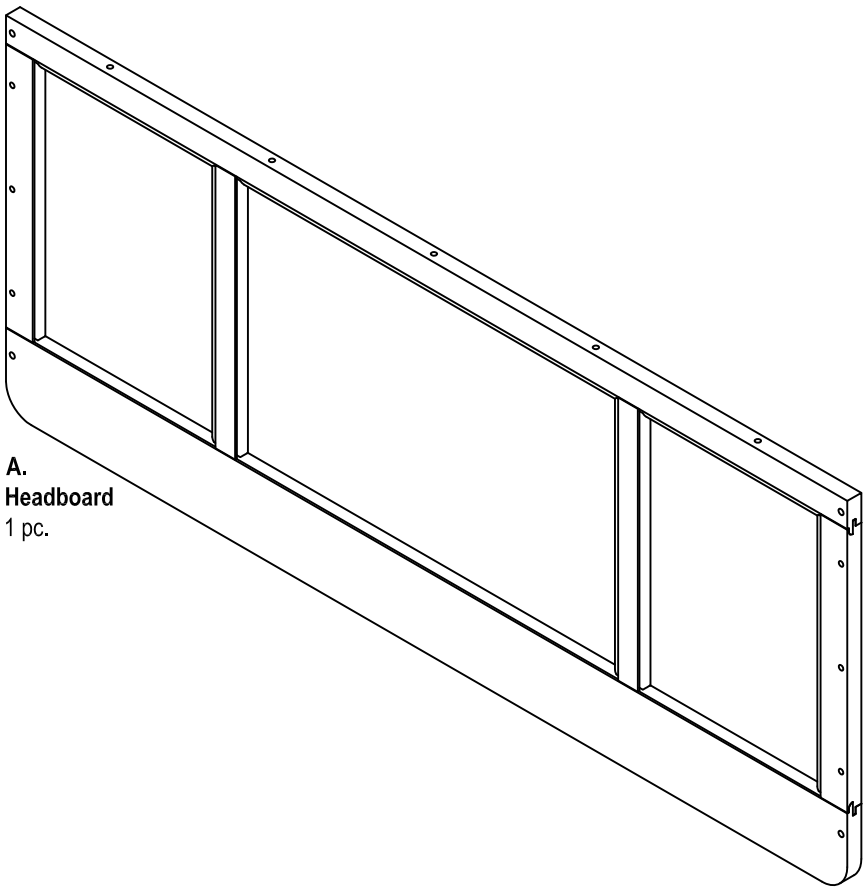 

A.  
Headboard  
1 pc.

For assembly see instructions in carton 88 5521 5012

Home Styles Consumer Assistance: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

88 5521 5012

 
The Aspen Queen Headboard

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

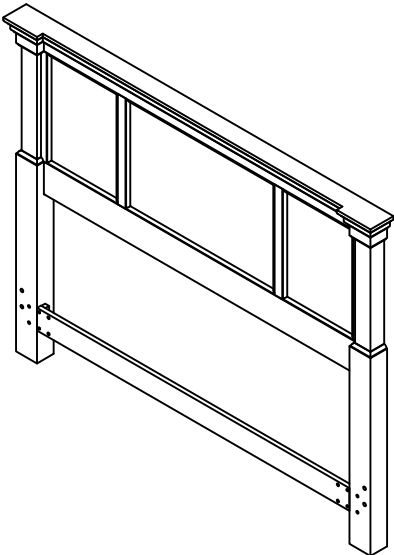

Part List

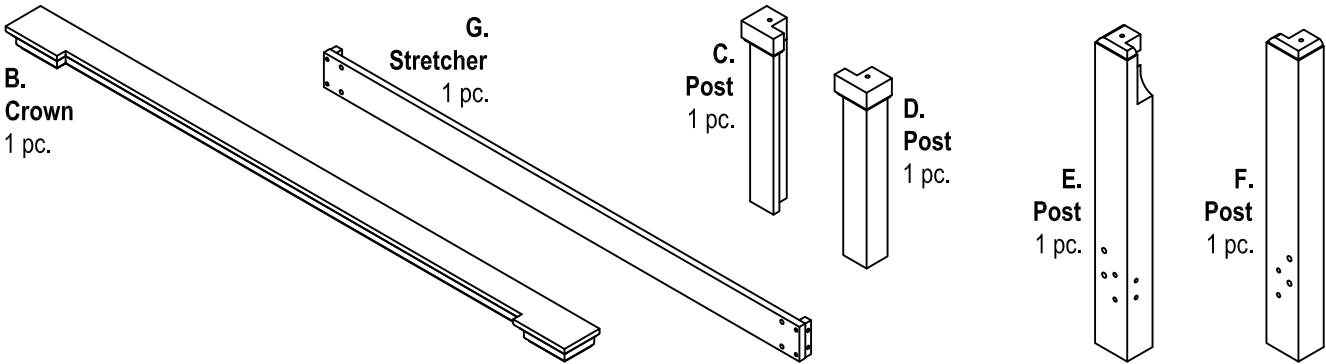 


Hardware List

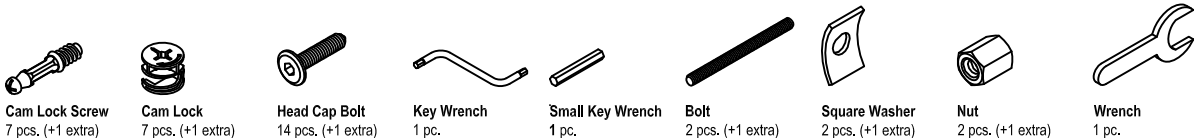 

For assembly also need the following :

88 5521 5011 The Aspen Queen Headboard Panel

 Carton quantity: 1

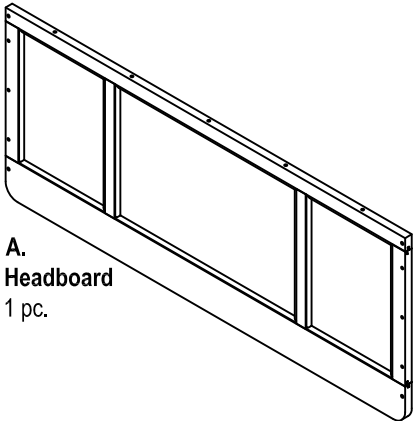

Tools Required For Assembly : Phillips screwdriver

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319


# Assembly Instructions 2/3

 **IMPORTANT**

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.



**STEP 1**

Insert Cam Lock Screws into the pre-drilled holes of Crown (B).

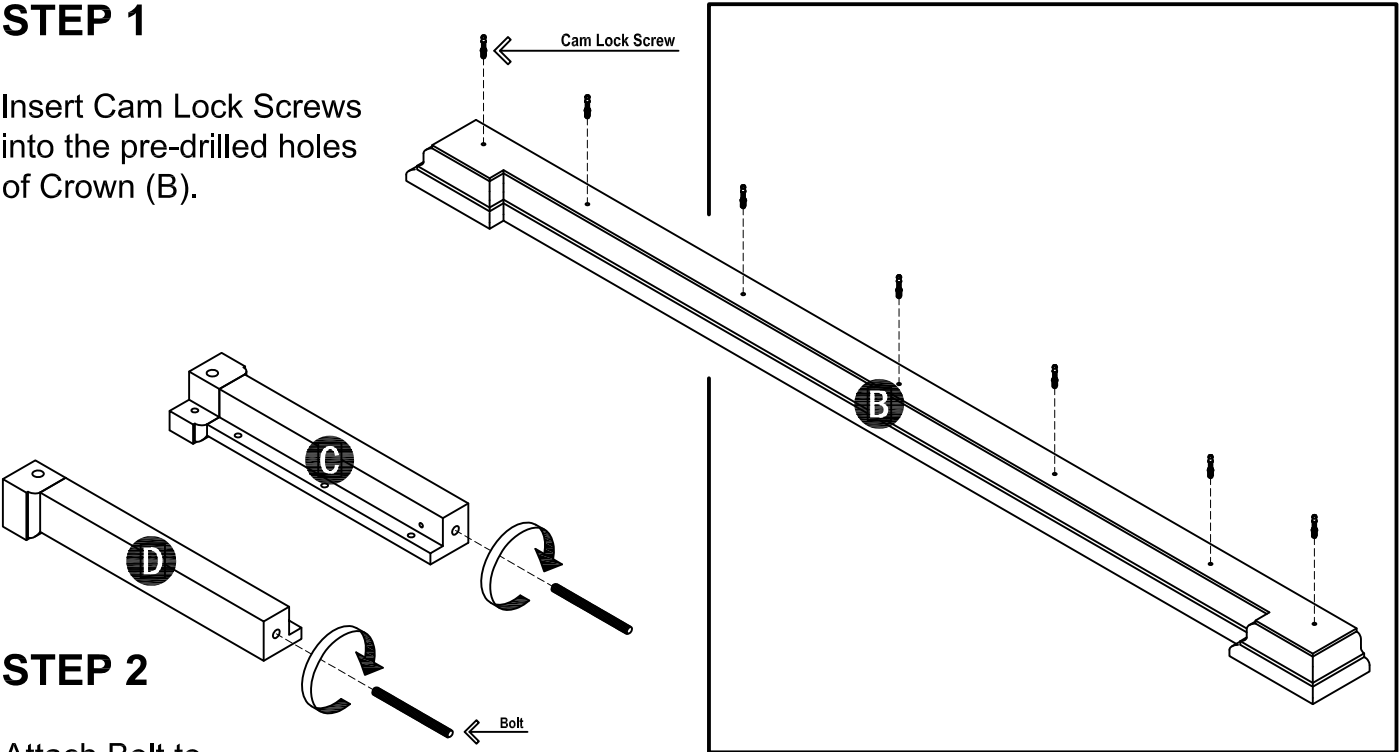

**STEP 2**

  Attach Bolt to Posts (C) and (D).

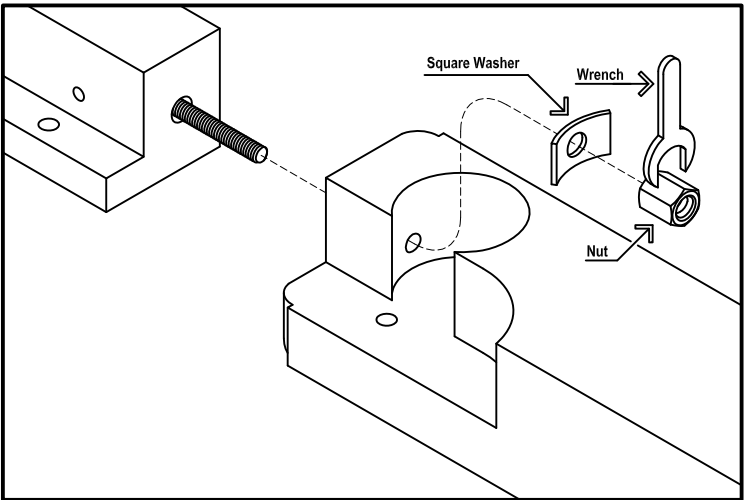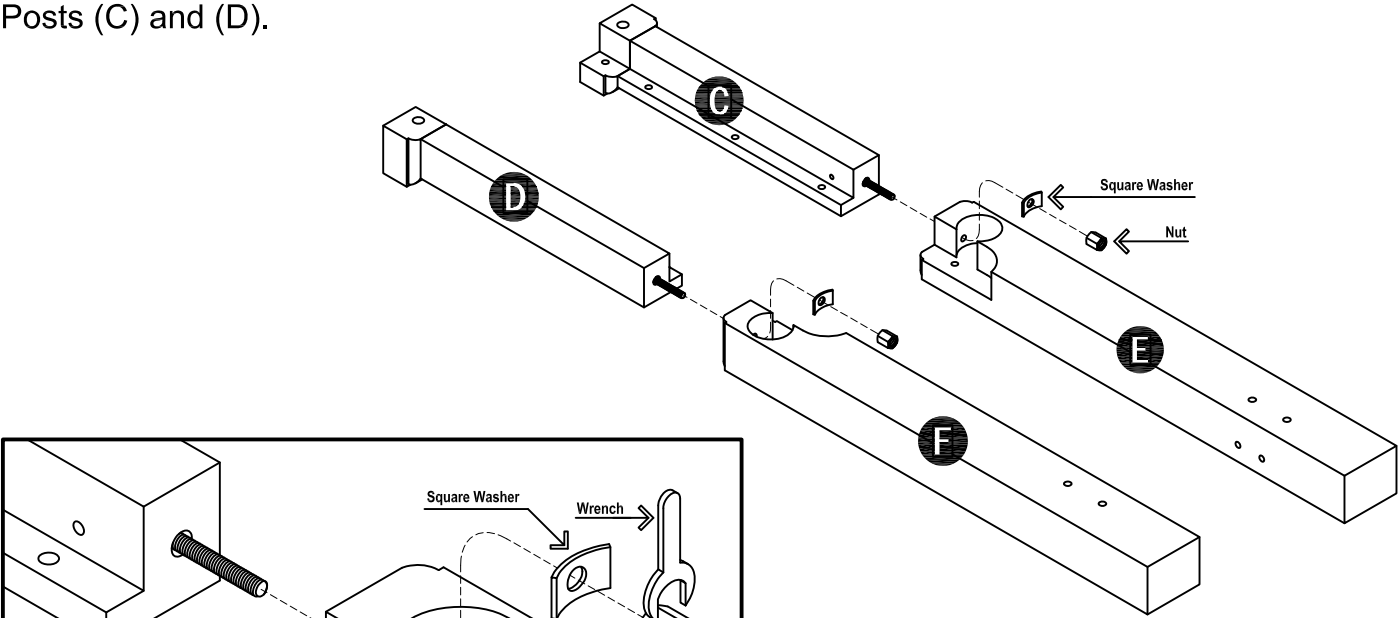


**STEP 3**

Attach Post (C) to Post (E) and Post (D) to Post (F) using Square Washers and Nuts. Tighten all the Bolts with Wrench. (See figure 1)


(Figure 1)

# Assembly Instructions 3/3
 
## STEP 4

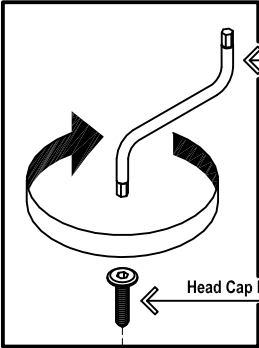


(Figure 2)

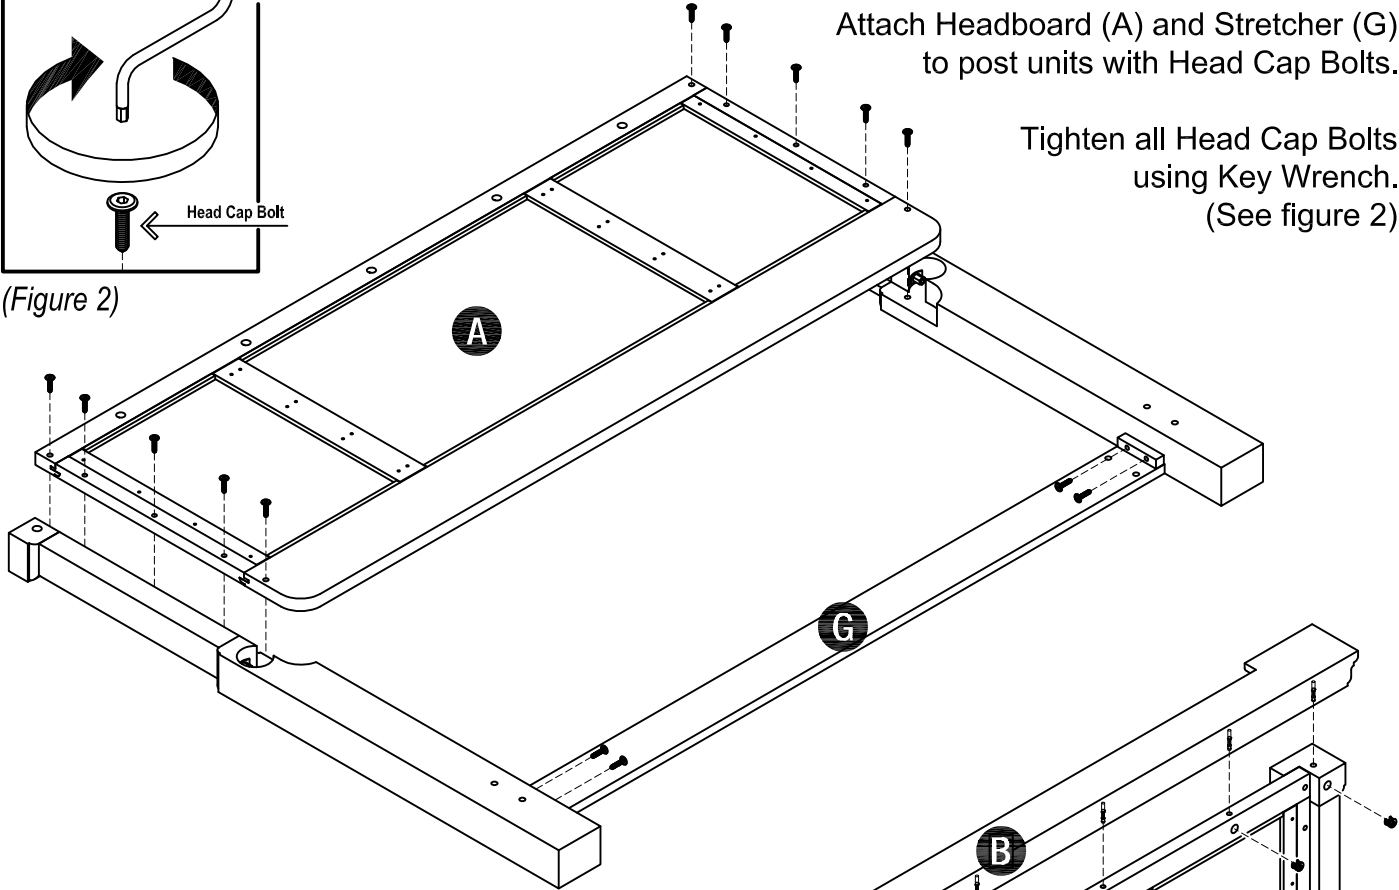 


## STEP 5

 Attach Crown (B) to unit using Cam Locks. (See figure 3)

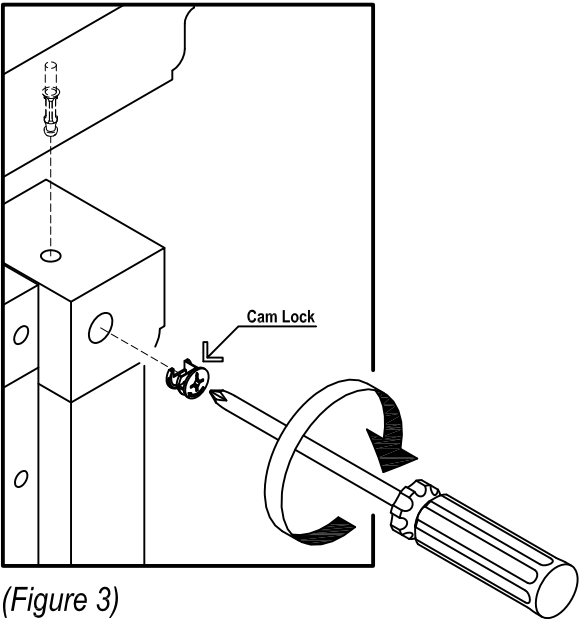

(Figure 3)

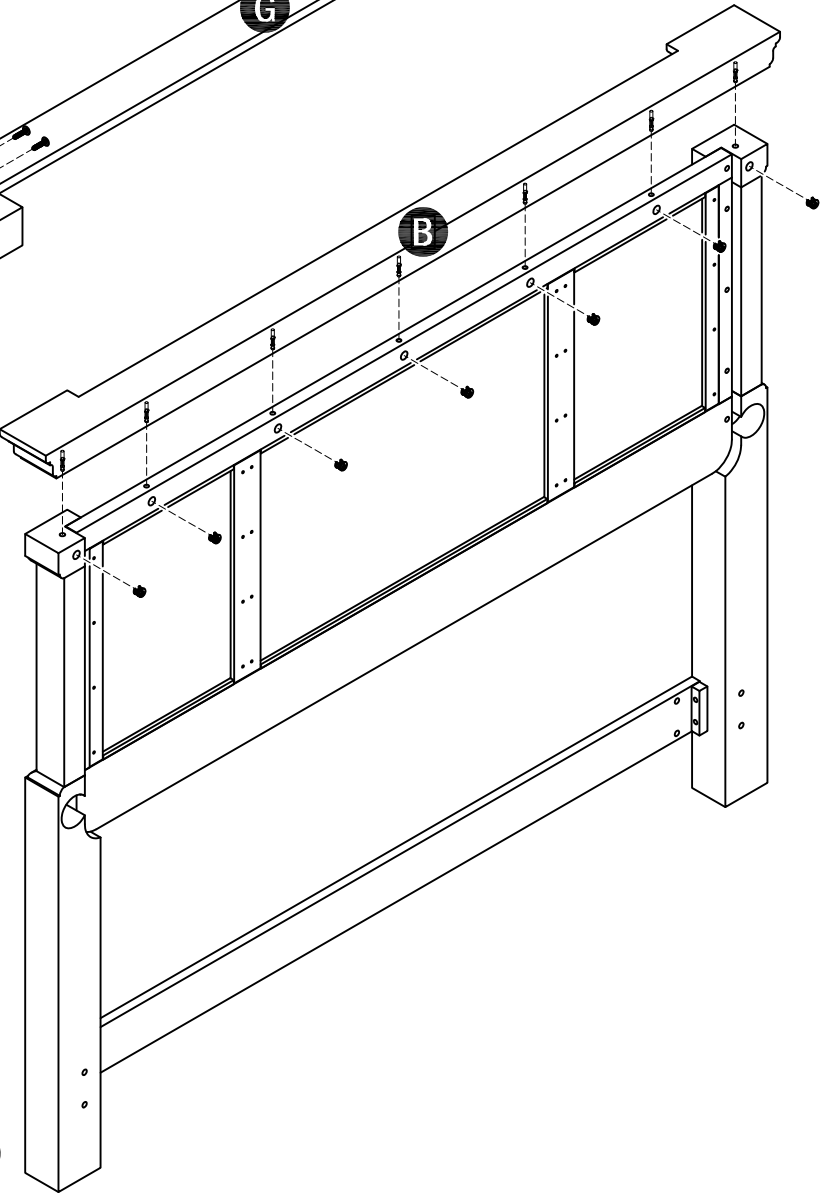 

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



 
Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

# 88 5521 502

## The Aspen Queen Footboard

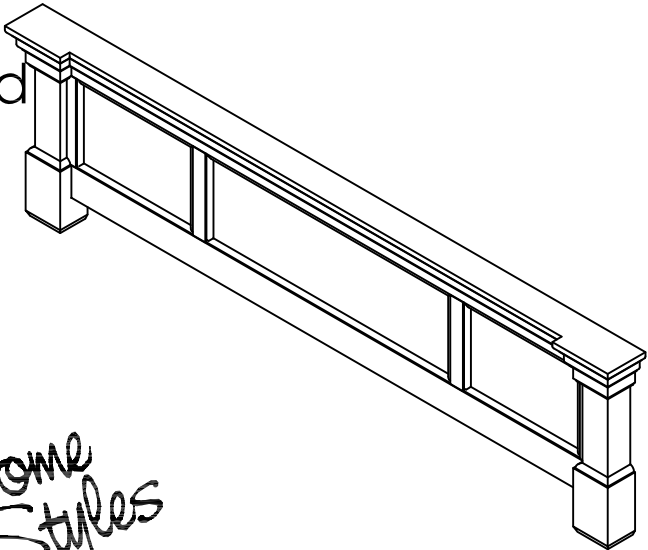


**IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home  
Styles*
 
### Part List

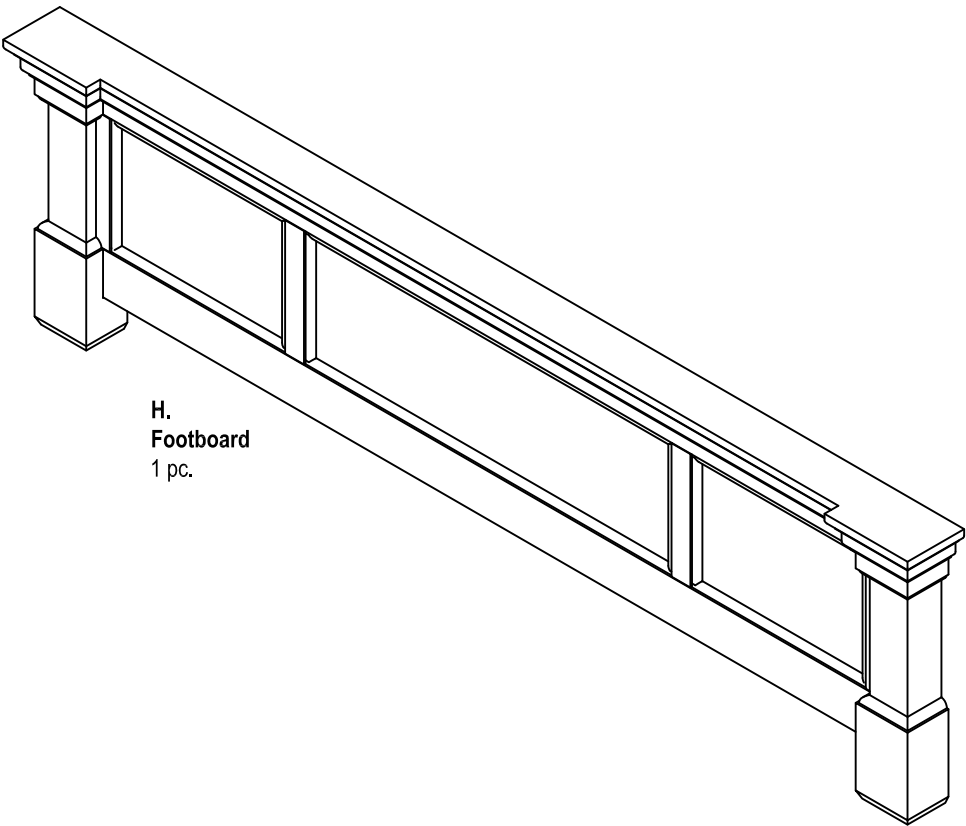

H.  
Footboard  
1 pc.

For assembly see instructions in carton 88 5521 503

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

88 5521 503

 
The Aspen Queen Bed Rails with Slats

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home  
Styles

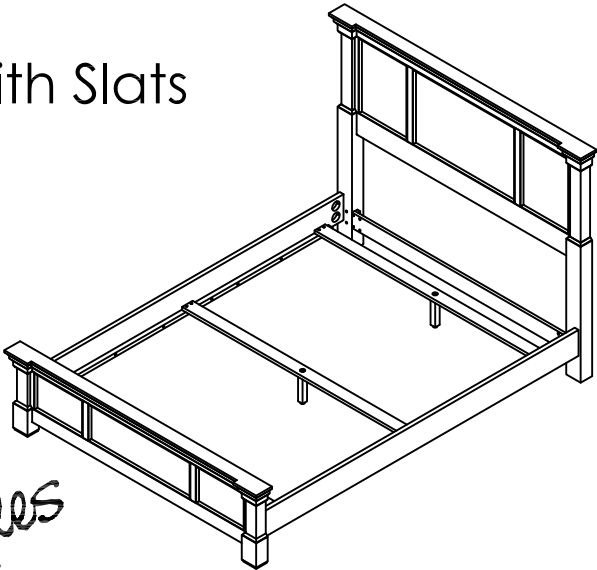


Part List

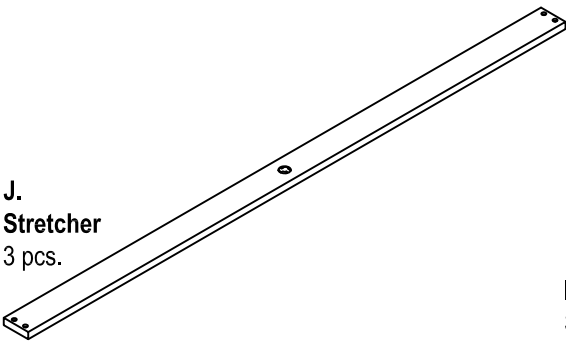 

 J.  
Stretcher  
3 pcs.

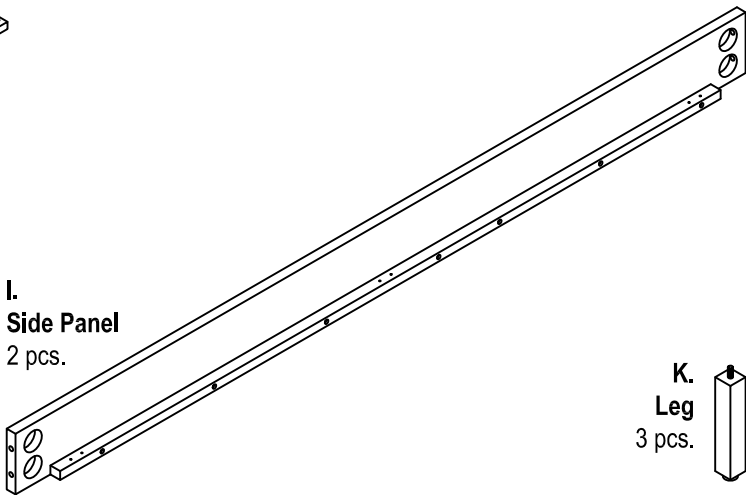


 I.  
Side Panel  
2 pcs.



K.  
Leg  
3 pcs.

 Hardware List



Bolt  
8 pcs. (+1 extra)



 
Square Washer  
8 pcs. (+1 extra)



Nut  
8 pcs. (+1 extra)

 
 
 

 

 
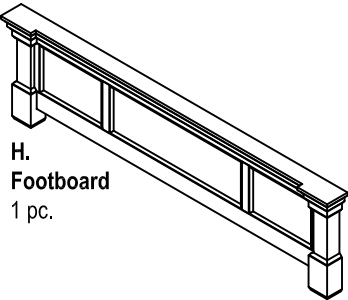 


Wrench  
1 pc.



Wood Screw  
12 pcs. (+1 extra)

For assembly also need the following :

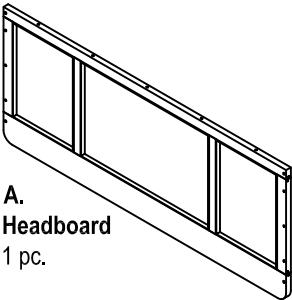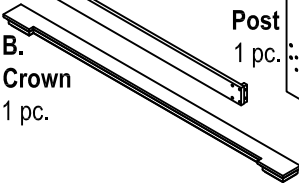88 5521 5011	Carton quantity: 1	88 5521 5012	Carton quantity: 1	88 5521 502	Carton quantity: 1
 <p>A. Headboard 1 pc.</p>		 <p>B. Crown 1 pc.</p>  <p>G. Stretcher 1 pc.</p>  <p>C. Post 1 pc.</p>  <p>E. Post 1 pc.</p>  <p>D. Post 1 pc.</p>  <p>F. Post 1 pc.</p>		 <p>H. Footboard 1 pc.</p>	

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319


# Assembly Instructions 2/2

 **IMPORTANT**

- \* Do not tighten up all the bolts & screws until each part is properly assembled.
- \* You should keep Hex Wrench in a safe place as you may need to tighten up the Nuts in the future.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

**STEP 1**

Insert Bolts into the pre-drilled holes of Headboard and Footboard.

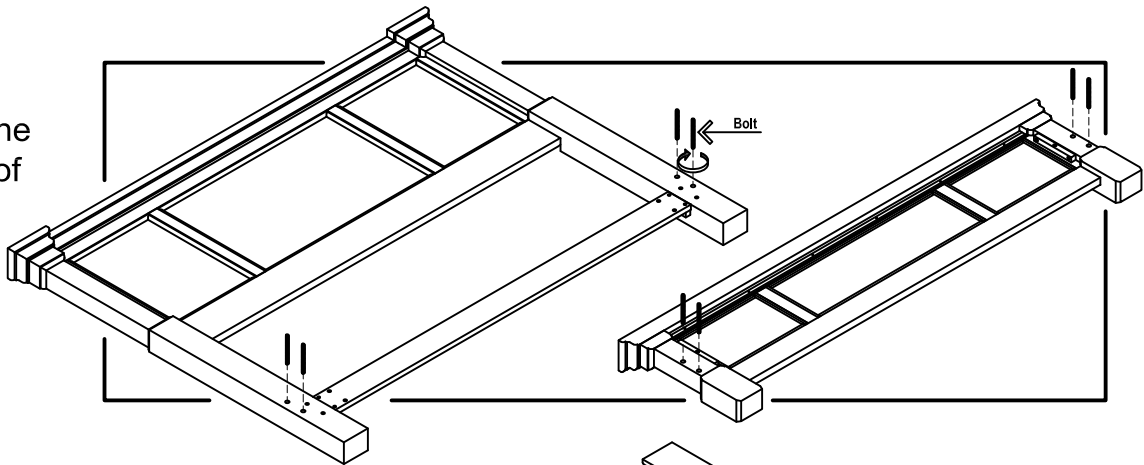

**STEP 2**

Assemble Side Panels (I) to Headboard and Footboard using Square Washers and Nuts. Tighten all the Bolts with Wrench. (See figure 1)


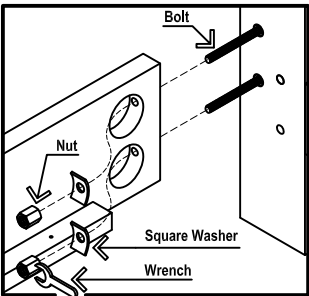 


Figure 1

Insert Leg (K) into pre-drilled holes of Stretchers (J) and tighten.

 Attach Stretchers (I) to the unit with Wood Screws.

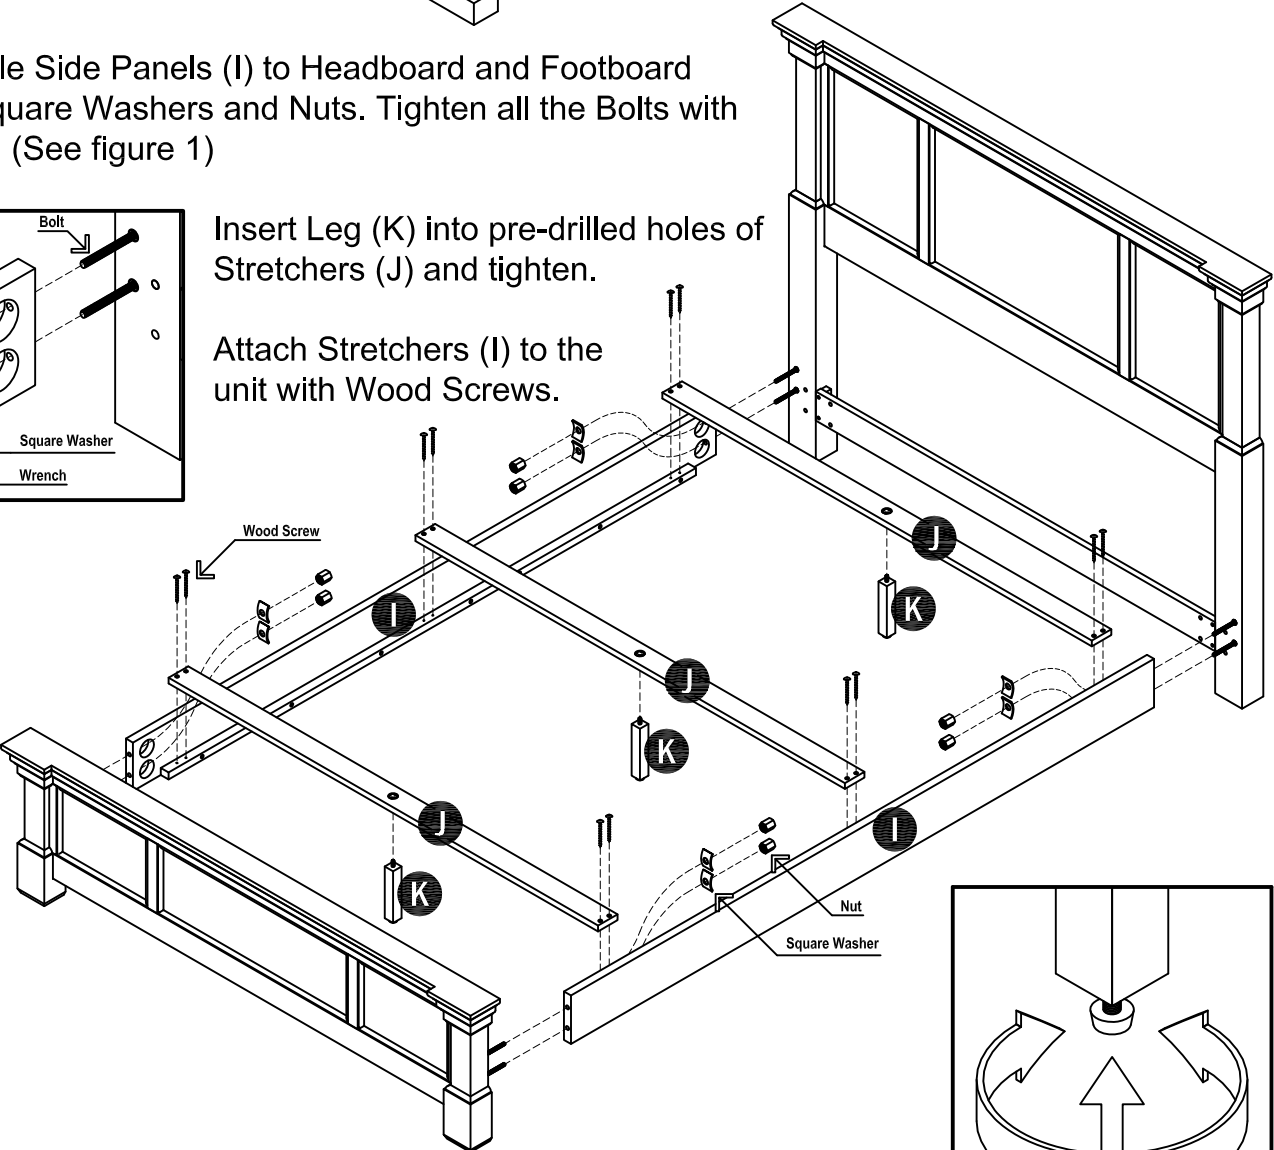

**STEP 3**

To level the unit, adjust the adjustable levelers on the bottom of legs. **Note: Unit must be level to work properly.** (See figure 2)

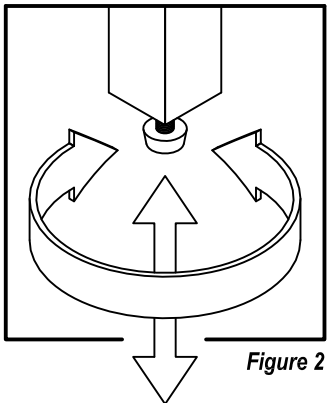 


Figure 2



# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.



**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.



**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319