

DOREL ASIA

COUNTER HEIGHT DESK

Model No:
WM3514

UPC CODE:
0-65857-15762-8



NOTE:
THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ
AND KEEP FOR FUTURE
REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1
E-MAIL: das@dorel.com

NOTES:

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on soft, smooth surface to prevent damage to product finish.
- * Phillips head screw driver is not included.
- * **DO NOT** use power tools.
- * **CAUTION:** Adult assembly required.
- * Assembly will require two people.
- * Estimated assembly time: 30 minutes.

CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. A dampened cloth may be used occasionally to clean the surface. Dry immediately and buff lightly, following the grain. Avoid using harsh cleaners and abrasive products. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

 
 
 

 



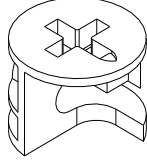 
 

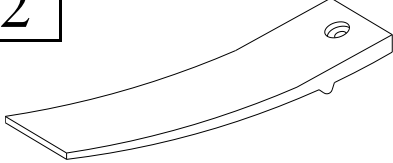 
 
Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

COUNTER HEIGHT DESK WM3514

 
 
 
 
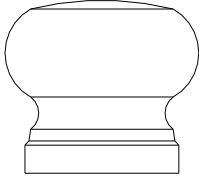 

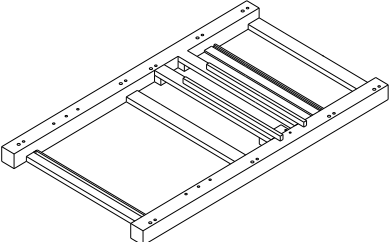 

HARDWARE LIST

<p>1</p>  <p>Ø5/32" x 1"</p>	<p>2</p>  <p>Ø5/32" x 3/4"</p>	<p>3</p> 
<p>FLAT HEAD SCREW 16 PCS</p>	<p>ROUND HEAD BOLT 2 PCS</p>	<p>KNOB 2 PCS</p>
<p>4</p>  <p>Ø3 x 12 MM</p>	<p>5</p>  <p>Ø1/4" x 3"</p>	<p>6</p> 
<p>FLAT HEAD SCREW 12 PCS</p>	<p>HEX SOCKET HEAD BOLT 26 PCS</p>	<p>BARREL NUT 26 PCS</p>
<p>7</p>  <p>Ø6 x 30 MM</p>	<p>8</p> 	<p>9</p> 
<p>WOOD DOWEL 28 PCS</p>	<p>CAM BOLT 6 PCS</p>	<p>CAM LOCK 6 PCS</p>
<p>10</p> 	<p>11</p> 	<p>12</p> 
<p>SHELF SUPPORT 4 PCS</p>	<p>ALLEN KEY 1 PC</p>	<p>DRAWER STOPPER 2 PCS</p>
<p>13</p>  <p>Ø1/8" x 1/2"</p> <p>ROUND HEAD SCREW 2 PCS</p>		

COUNTER HEIGHT DESK



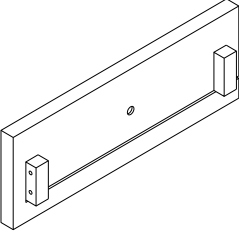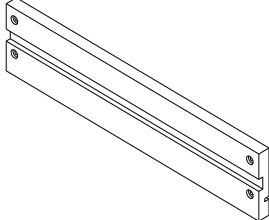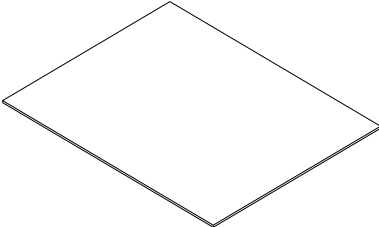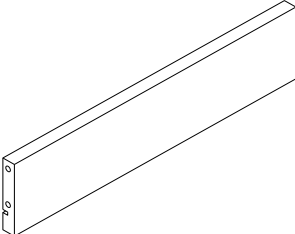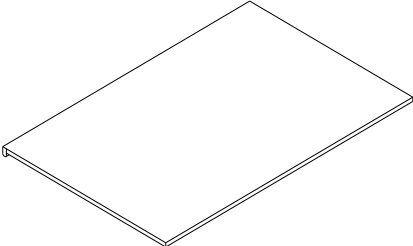





WM3514

PARTS LIST

A		B	
DRAWER FRONT 2 PCS		DRAWER SIDE 4 PCS	
C		D	
DRAWER BOTTOM 2 PCS		DRAWER BACK 2 PCS	
E		F	
TOP PANEL 1 PC		SUPPORT RAIL 1 PC	
G		H	
RIGHT SIDE PANEL 1 PC		RAIL 3 PCS	

COUNTER HEIGHT DESK WM3514





 
 
 
 
PARTS LIST

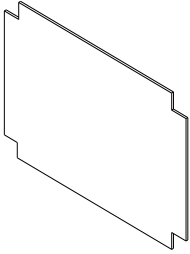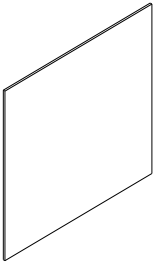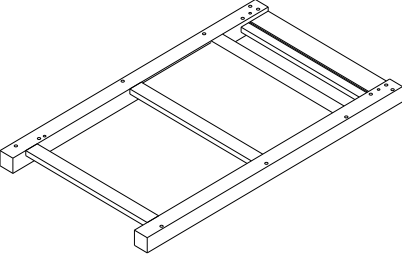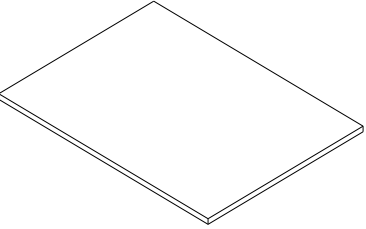I		J	
RAIL 3 PCS		BACK PANEL UPPER RAIL 1 PC	
K		L	
BACK PANEL LOWER RAIL 1 PC		DRAWER MIDDLE RAIL 1 PC	
M		N	
SHELF 2 PCS		BACK PANEL 1 PC	
O		P	
DIVIDER PANEL 1 PC		SMALL TOP PANEL 1 PC	

COUNTER HEIGHT DESK

WM3514

        PARTS LIST

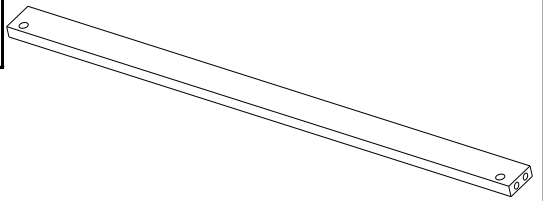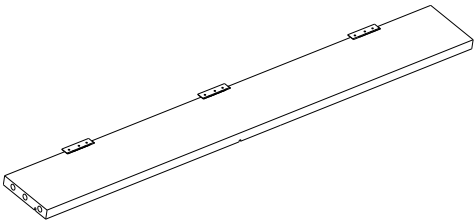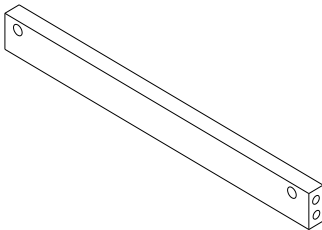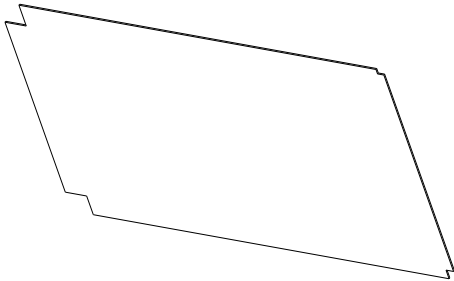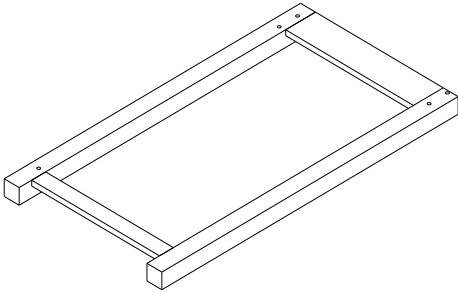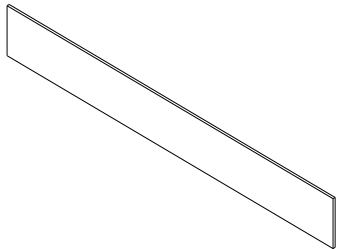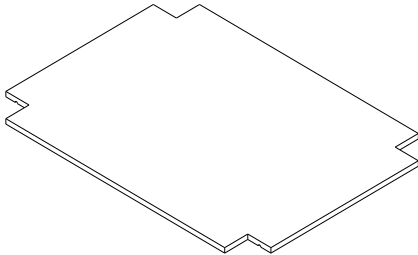Q		R	
<p>LEFT LOWER RAIL 1 PC</p>		<p>LEFT BACK UPPER RAIL 1 PC</p>	
S		T	
<p>LEFT FRONT UPPER RAIL 1 PC</p>		<p>LEFT CENTER RAIL 1 PC</p>	
U		V	
<p>LEFT SHELF 1 PC</p>		<p>LEFT SIDE PANEL 1 PC</p>	
W		X	
<p>DIVIDER 2 PCS</p>		<p>ADJUSTABLE SHELF 1 PC</p>	

COUNTER HEIGHT DESK

WM3514

STEP 1

Attach drawer sides (B) to drawer front (A) with flat head screws (1).

 
Slide drawer bottom (C) into the grooves of the drawer sides (B) and drawer front (A).

Attach drawer back (D) to drawer sides (B) with flat head screws (1).

Attach knob (3) to drawer front (A) with round head bolt (2).

Use a Phillips head screw driver (not included) to tighten all flat head screws (1) and round head bolts (2).


NOTE: Repeat this step to assemble the other drawer.

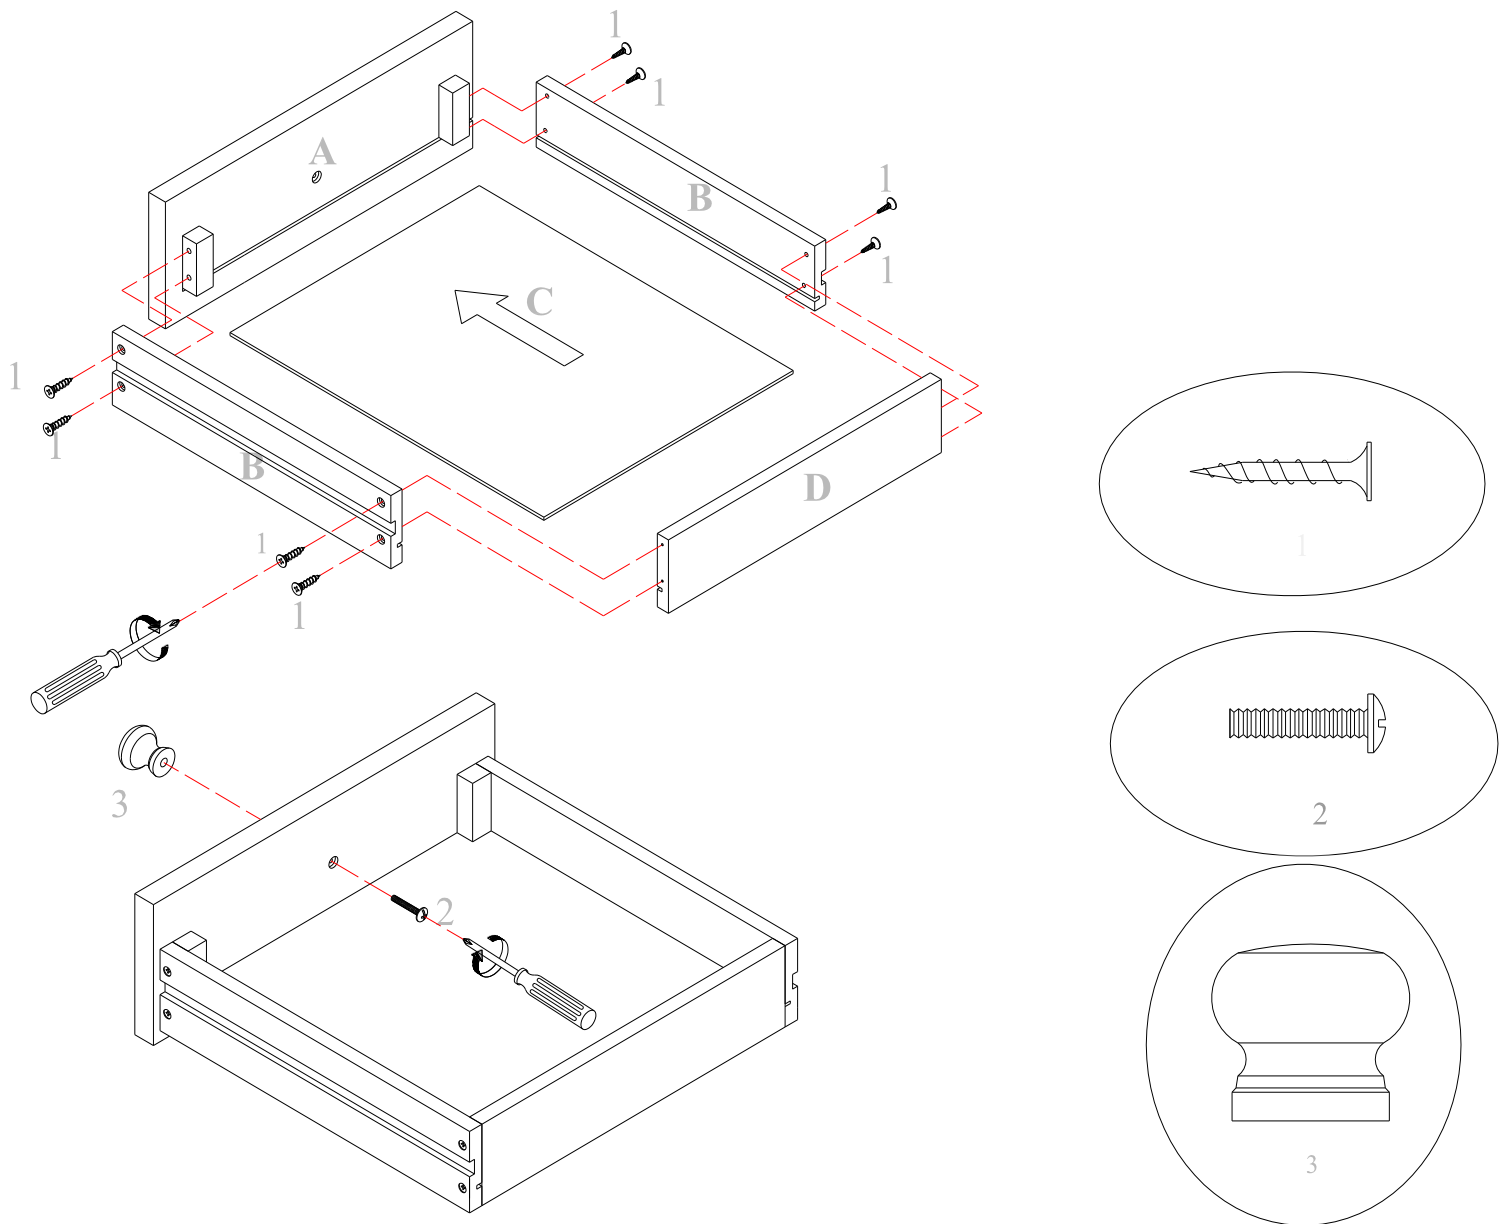

COUNTER HEIGHT DESK WM3514

STEP 2

 Attach support rail (F) to the top panel (E) with flat head screws (4).
Use a Phillips head screw driver (not included) to tighten the screws.

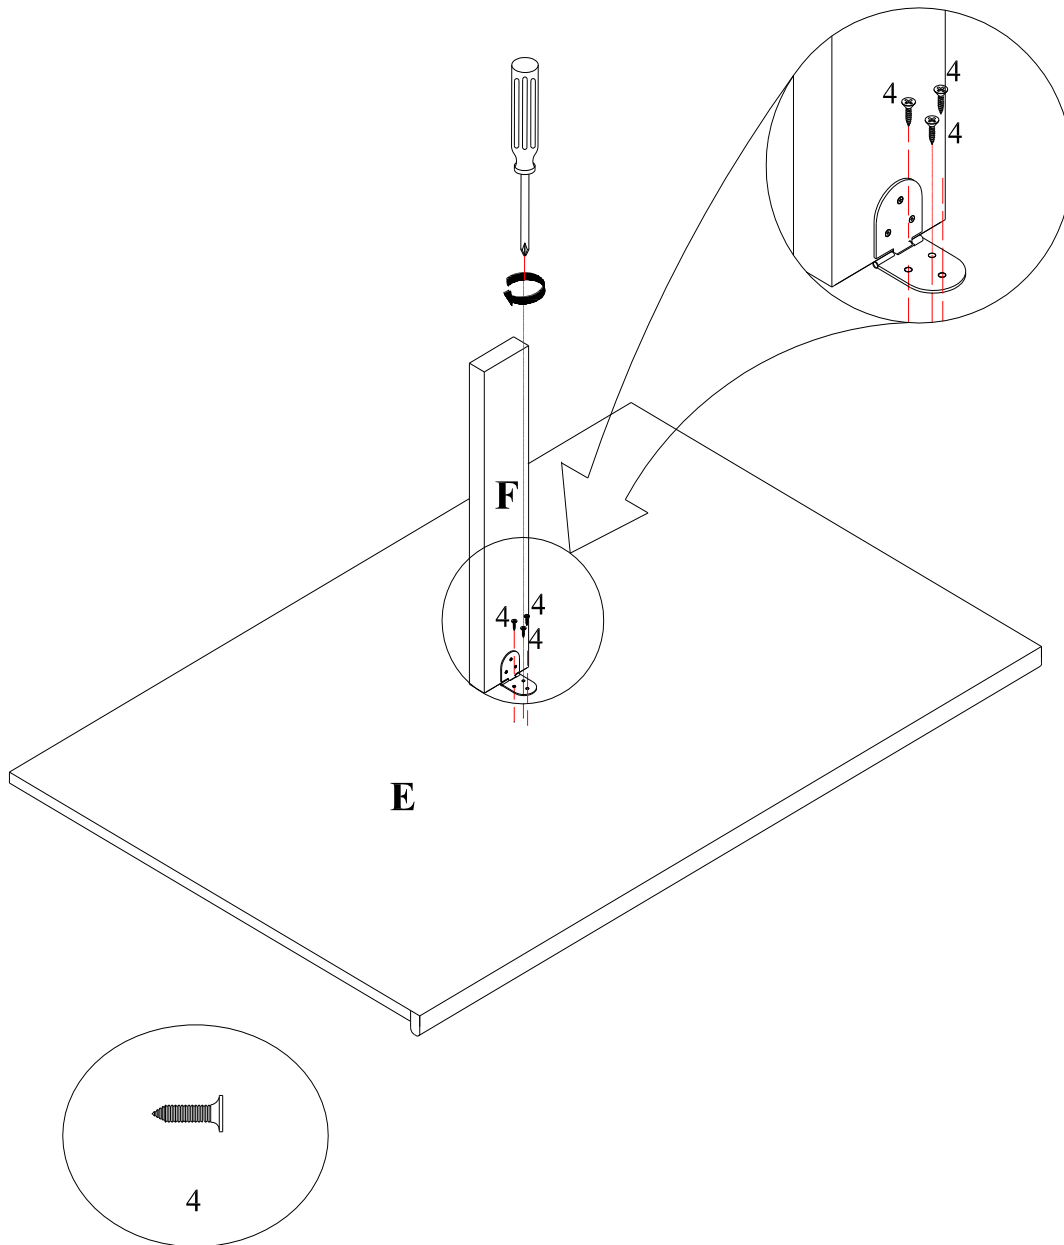

COUNTER HEIGHT DESK WM3514

STEP 3

 
 
 
Insert wood dowels (7) into right side panel (G) as shown below.

Insert barrel nuts (6) into rails (H & I), back panel upper rail (J) and back panel lower rail (K) as shown below.


Attach rails (H & I), back panel upper rail (J) and back panel lower rail (K) to right side panel (G) with hex socket head bolts (5). Use Allen key (11) to tighten bolts.

Attach drawer stoppers (12) to drawer middle rail (L) with round head screws (13) using Phillips head screw driver (not included)


Attach drawer middle rail (L) to right side panel (G).

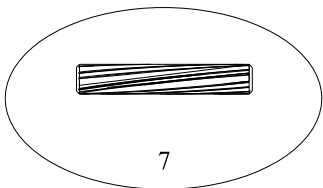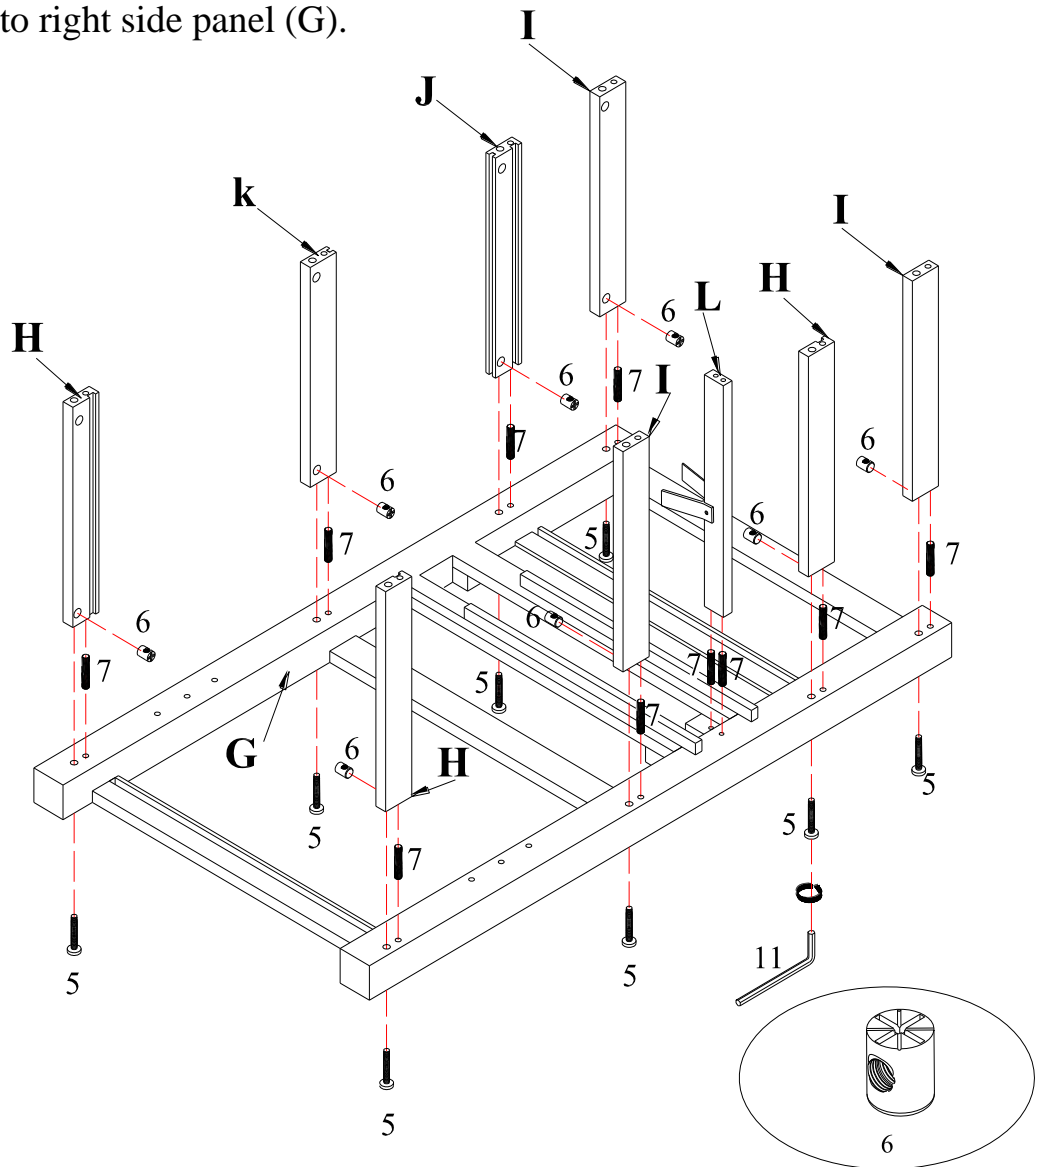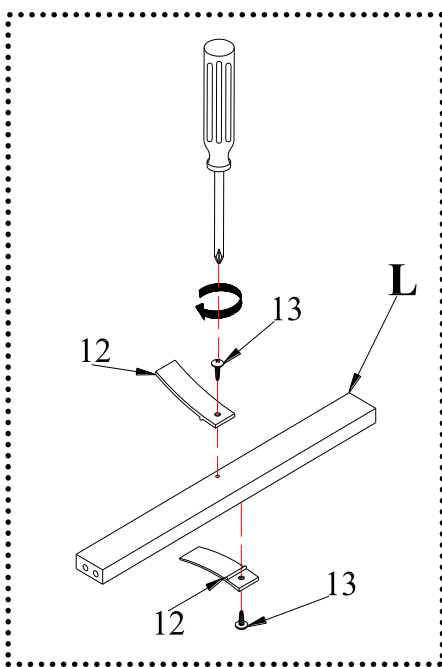


7

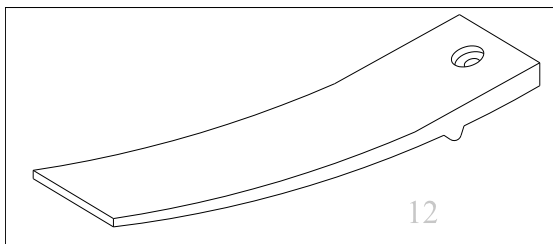 


12

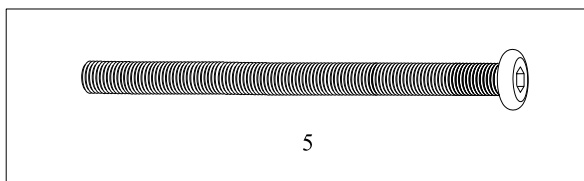 

5

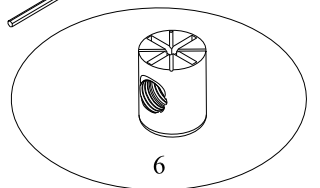 

6

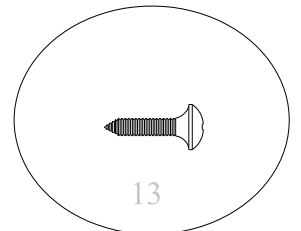 

13

COUNTER HEIGHT DESK


WM3514

STEP 4

Insert one shelf (M) into the grooves of rails (H) as shown below.

Insert another shelf (M) into the grooves of rail (H) and back panel upper rail (J) as shown below.

 Insert the back panel (N) into the grooves of back panel upper rail (J) and back panel lower rail (K) as shown below.

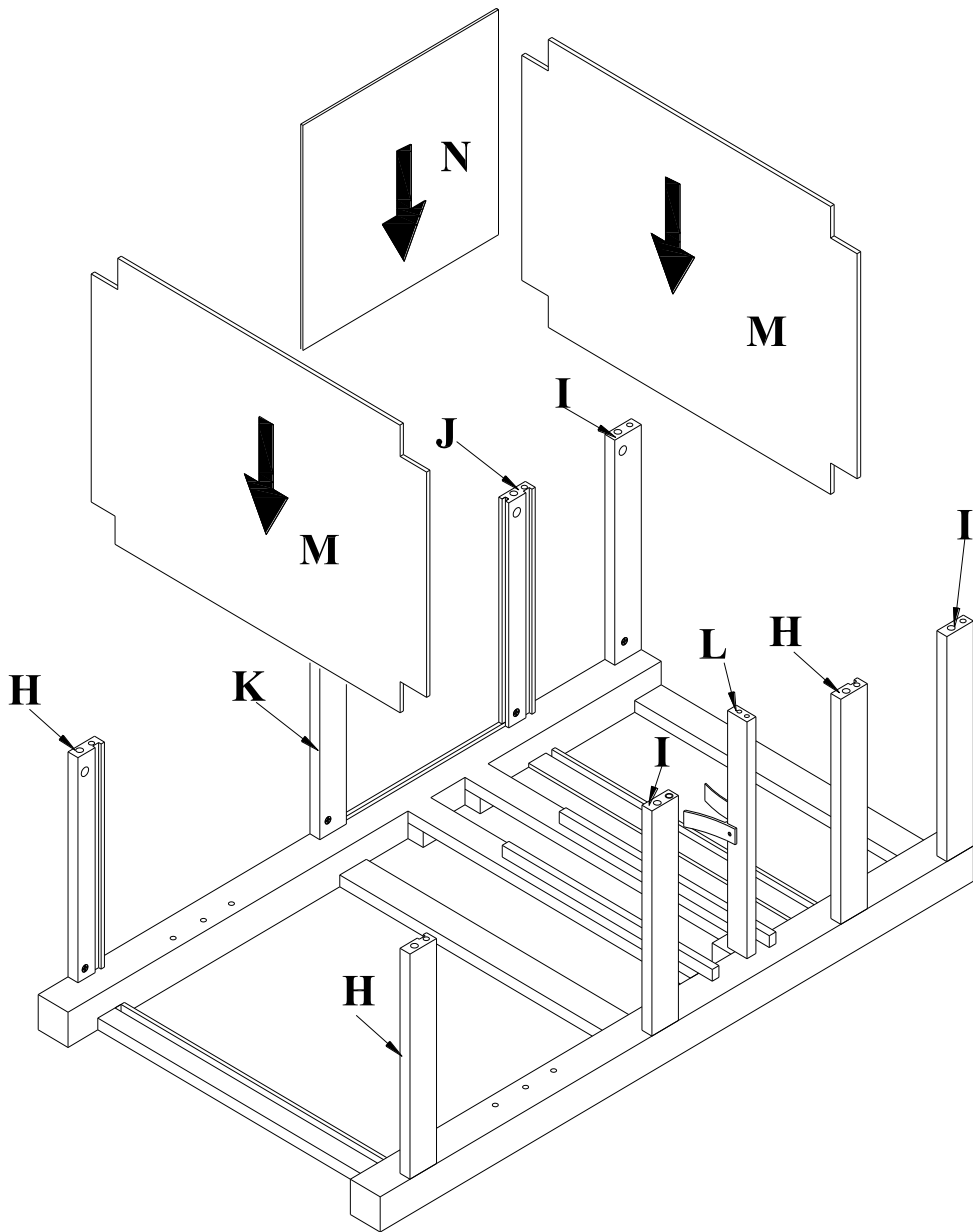





COUNTER HEIGHT DESK

WM3514

STEP 5

Insert wood dowels (7) and barrel nuts (6) into rails (H & I), back panel upper rail (J), back panel lower rail (K) and drawer middle rail (L) as shown below.

    Attach divider panel (O) to the assembled unit with hex socket head bolts (5) as shown below. Use Allen key (11) to tighten bolts.

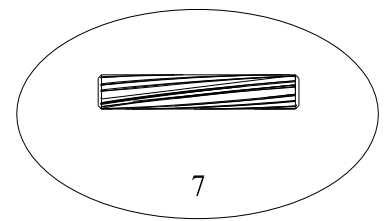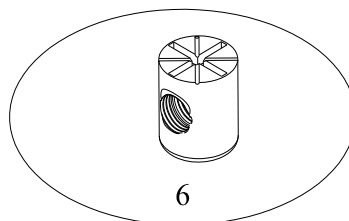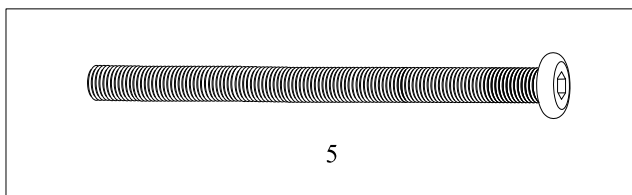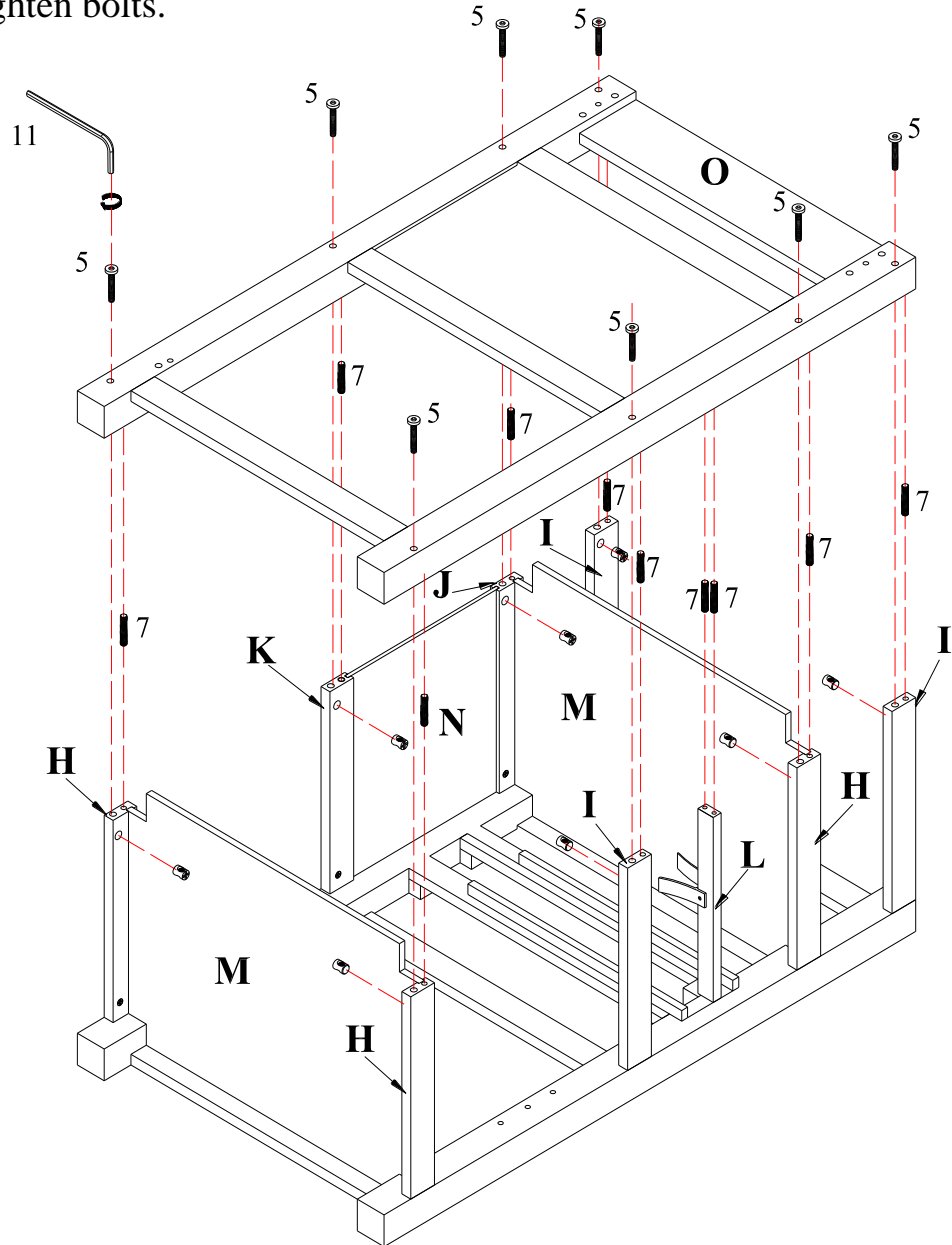

COUNTER HEIGHT DESK WM3514

STEP 6

Insert cam bolts (8) into the correct hole of left back upper rail (R) and left front upper rail (S) as shown below.

Insert cam locks (9) and wood dowels (7) into the correct hole of left center rail (T) as shown below.

 
Fasten left center rail (T) to left back upper rail (R) and left front upper rail (S) by rotating cam locks (9) 1/2 turn clockwise.

Insert wood dowels (7) into the correct hole of divider panel (O).

Insert barrel nuts (6) into the correct hole of left lower rail (Q), left back upper rail (R) and left front upper rail (S) as shown below.

Attach left lower rail (Q), left back upper rail (R) and left front upper rail (S) to divider panel (O) with hex socket head bolts (5).


Use Allen key (11) to tighten bolts.

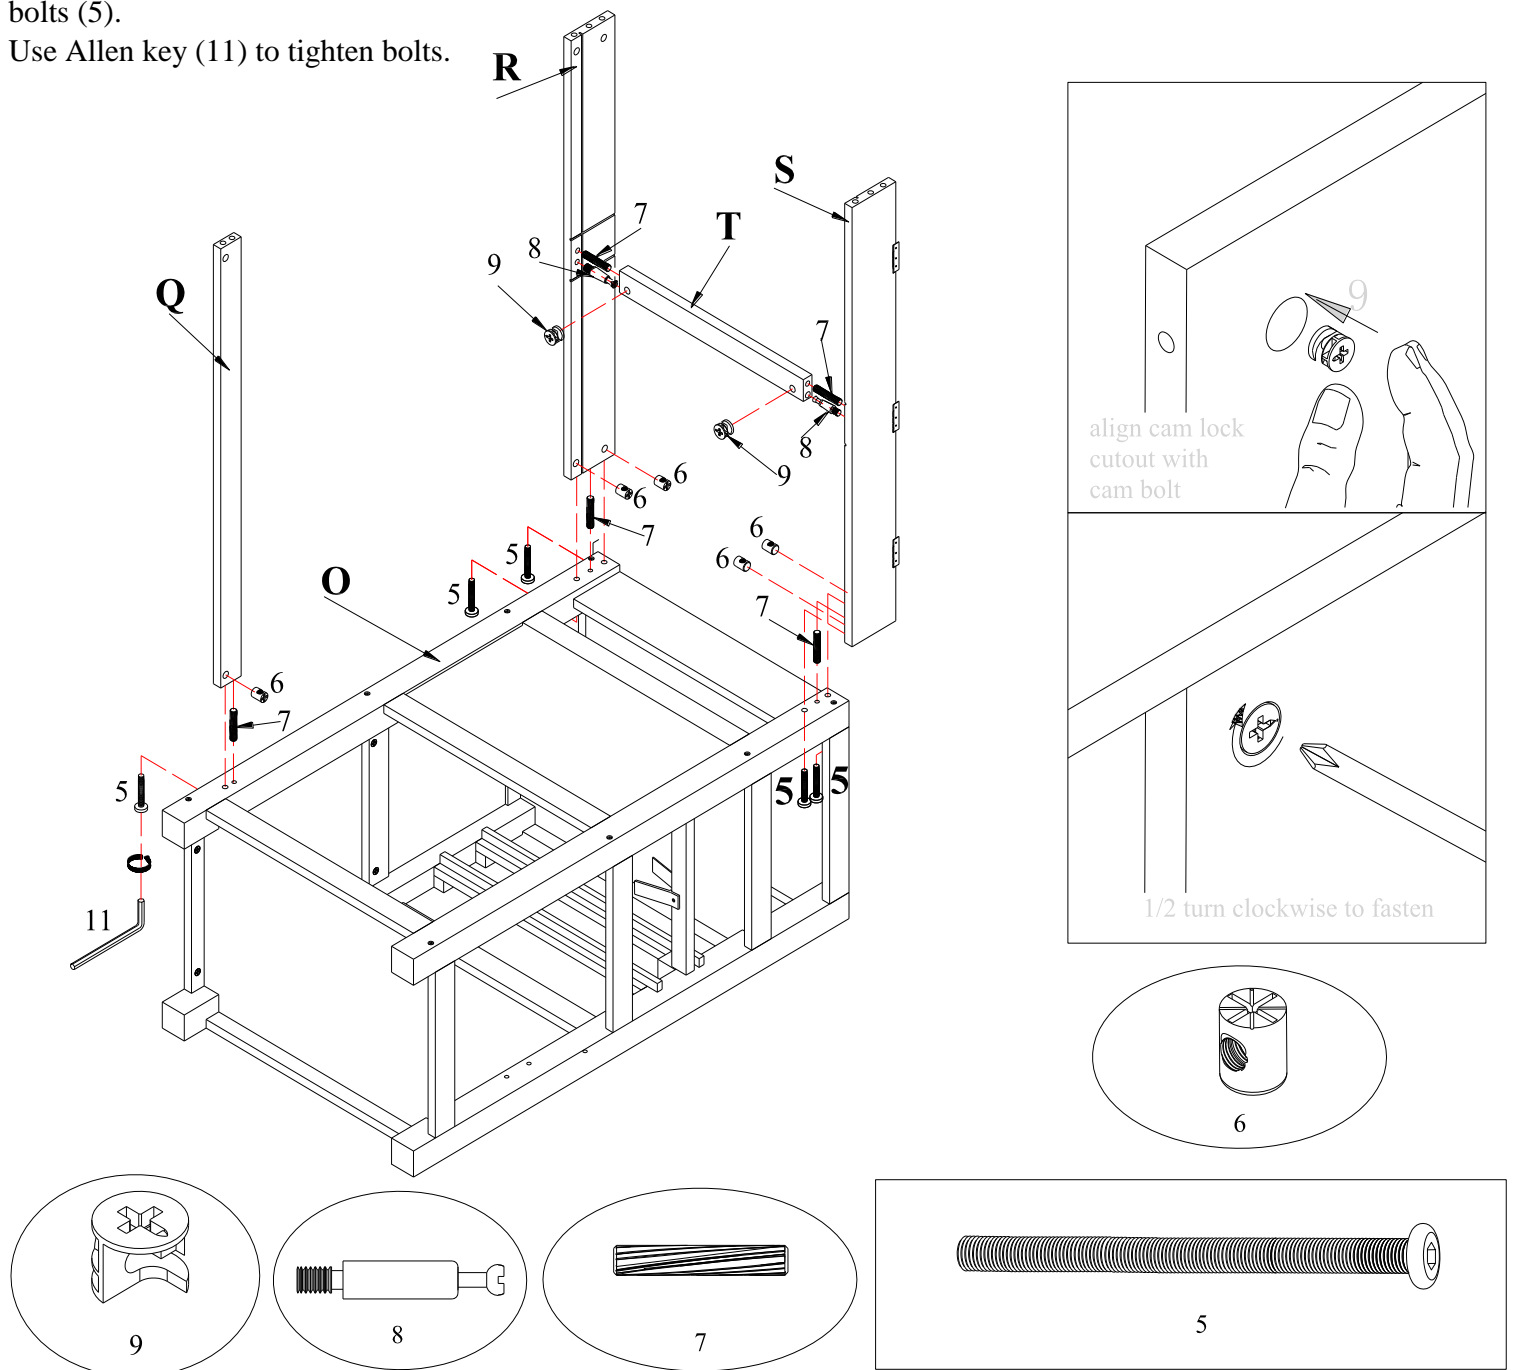

COUNTER HEIGHT DESK WM3514

STEP 7

 Insert left shelf (U) into the grooves of left back upper rail (R) and left front upper rail (S).

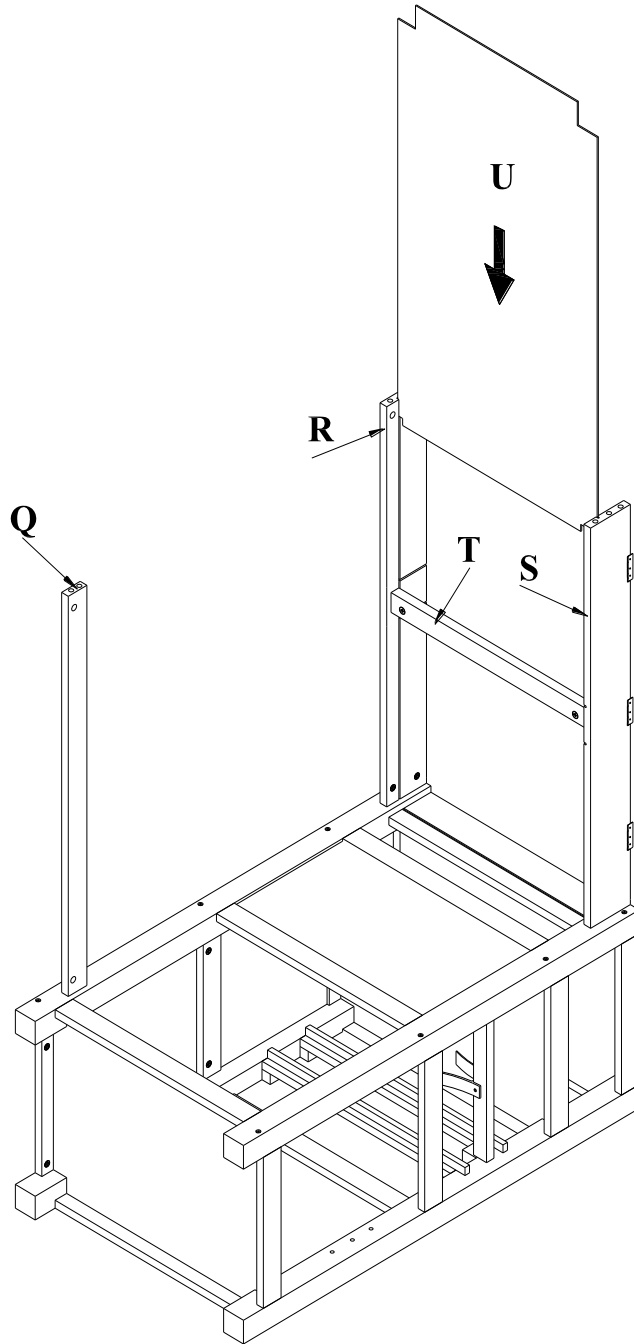


COUNTER HEIGHT DESK WM3514

STEP 8

Insert wood dowels (7) and barrel nuts (6) into the correct hole of left back upper rail (R), left front upper rail (S) and left lower rail (Q).

Attach left side panel (V) to the assembled unit with hex socket head bolts (5).

 Use Allen key (11) to tighten all the bolts.

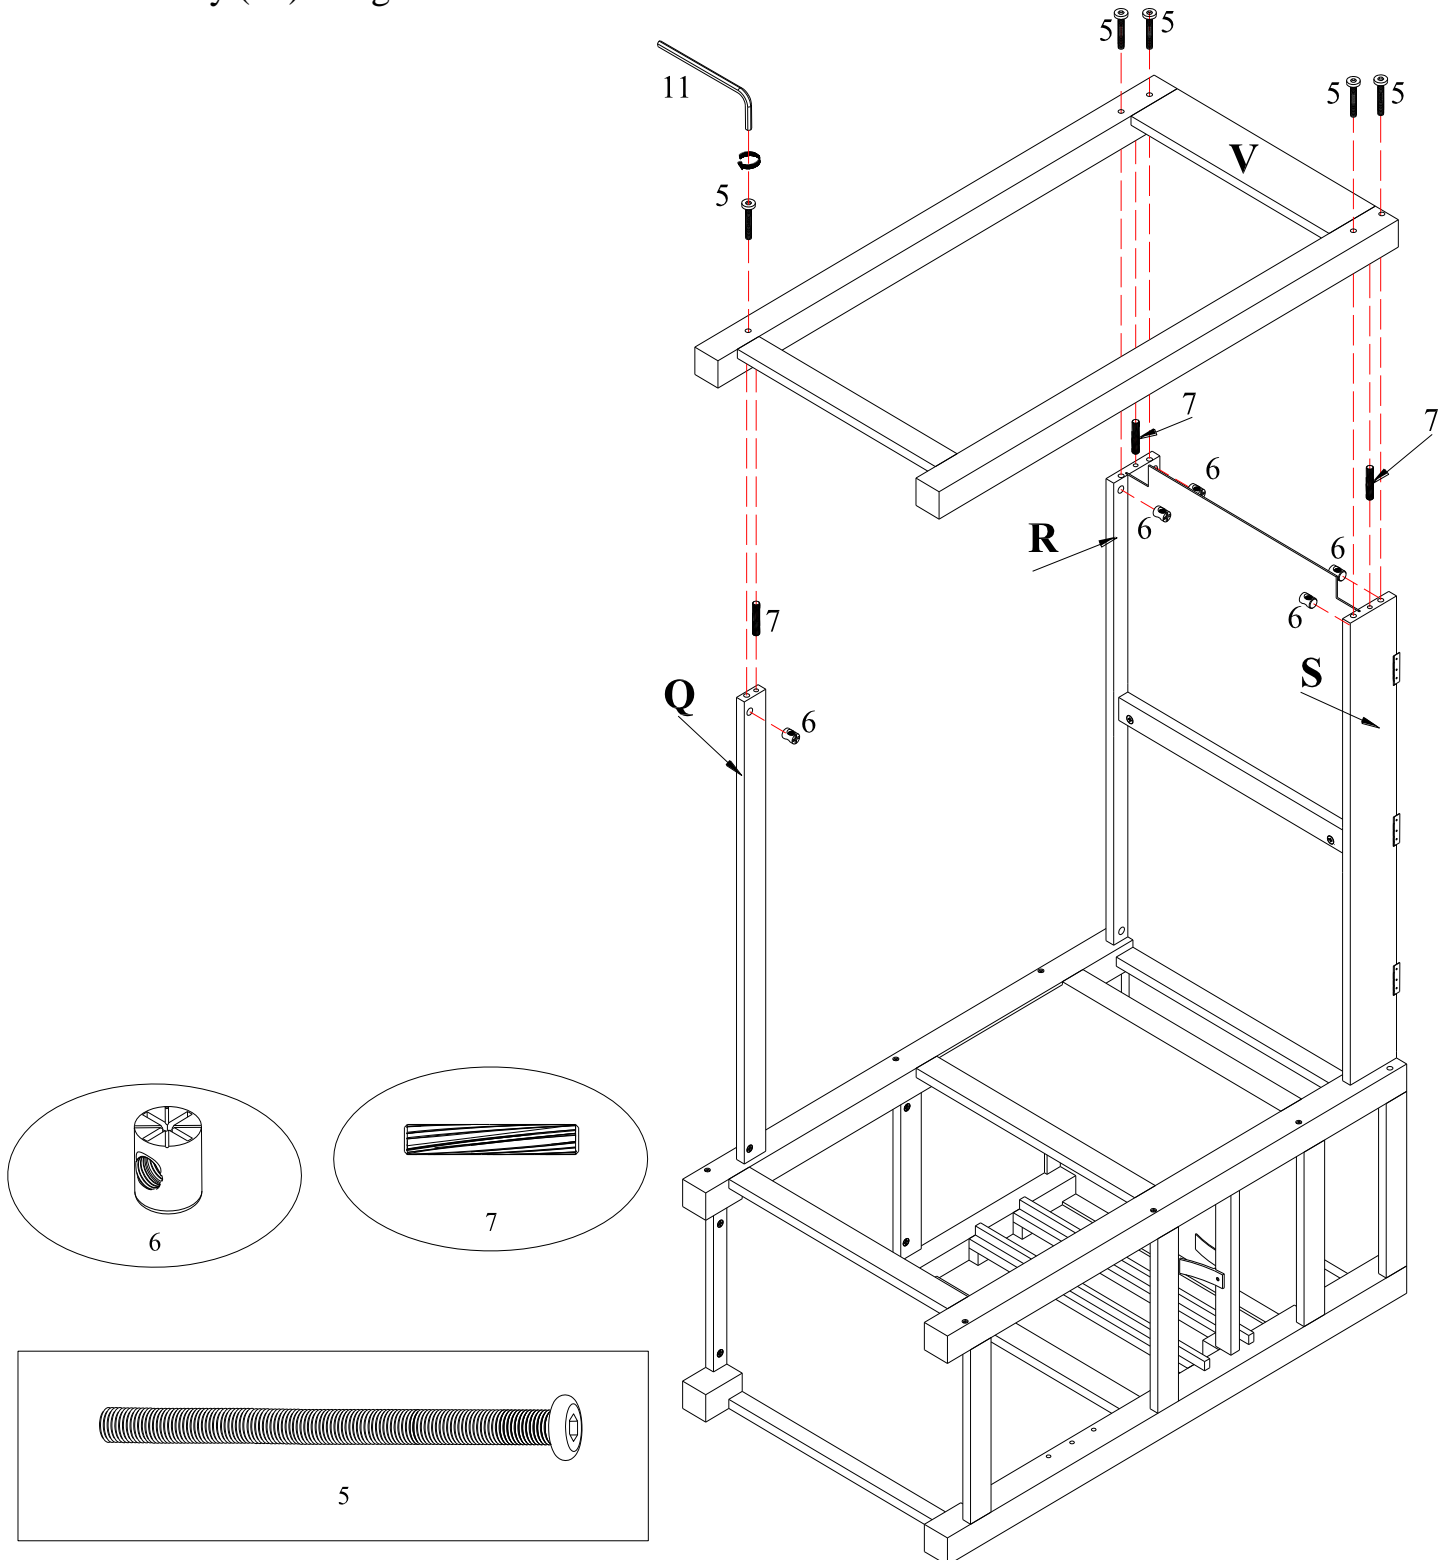

COUNTER HEIGHT DESK

WM3514

STEP 9

Insert cam bolts (8) into the correct hole of small top panel (P).

Insert cam locks (9) into the correct hole of right side panel (G) and divider panel (O).

Fasten small top panel (P) to right side panel (G) and divider panel (O) by rotating cam locks (9) 1/2 turn clockwise.

 
Insert dividers (W) into the grooves of left back upper rail (R) and left front upper rail (S) as shown below.

Attach top panel (E) to left front upper rail (S) with flat head screws (4) using a Phillips head screw driver (not included)

Insert shelf supports (10) into the right side panel (G) and divider panel (O).

Place adjustable shelf (X) on top of the shelf supports (10).


Insert the two drawers into the unit.

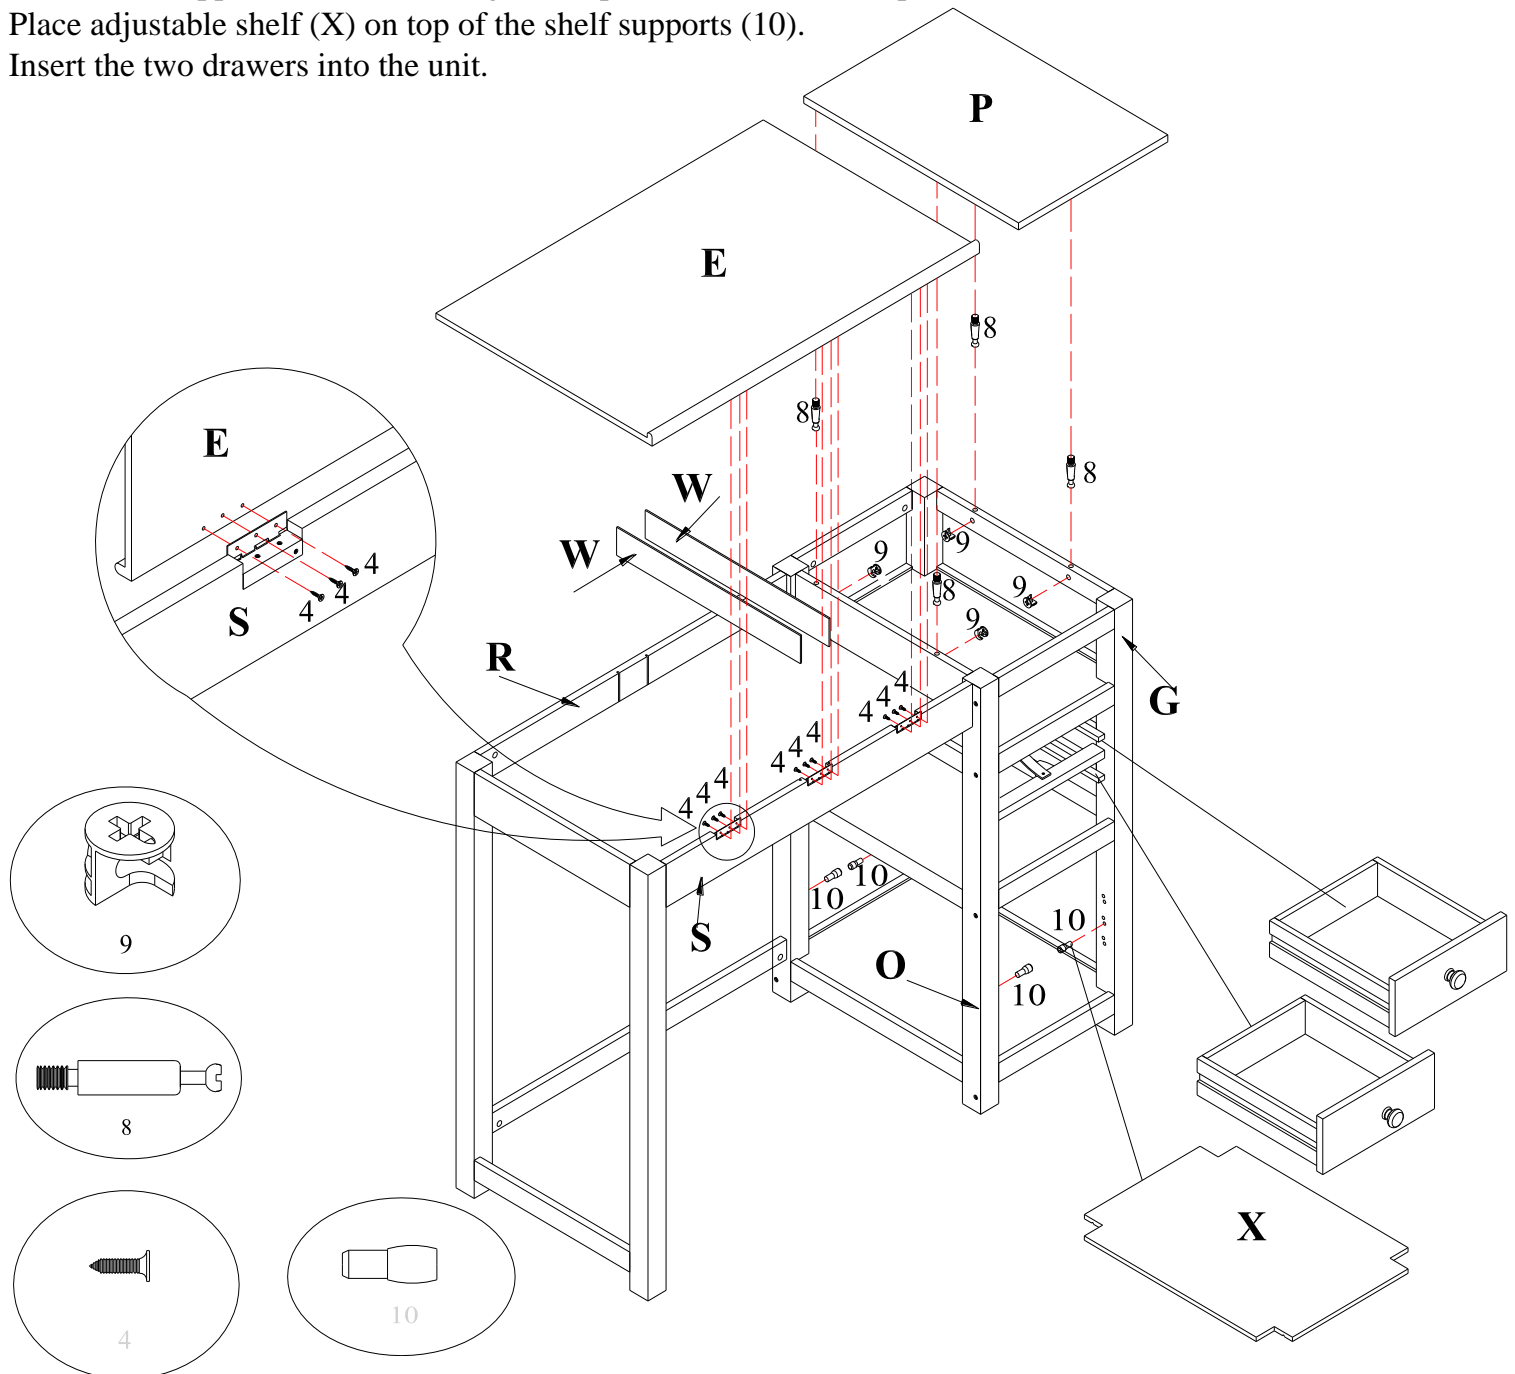

COUNTER HEIGHT DESK WM3514



 CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

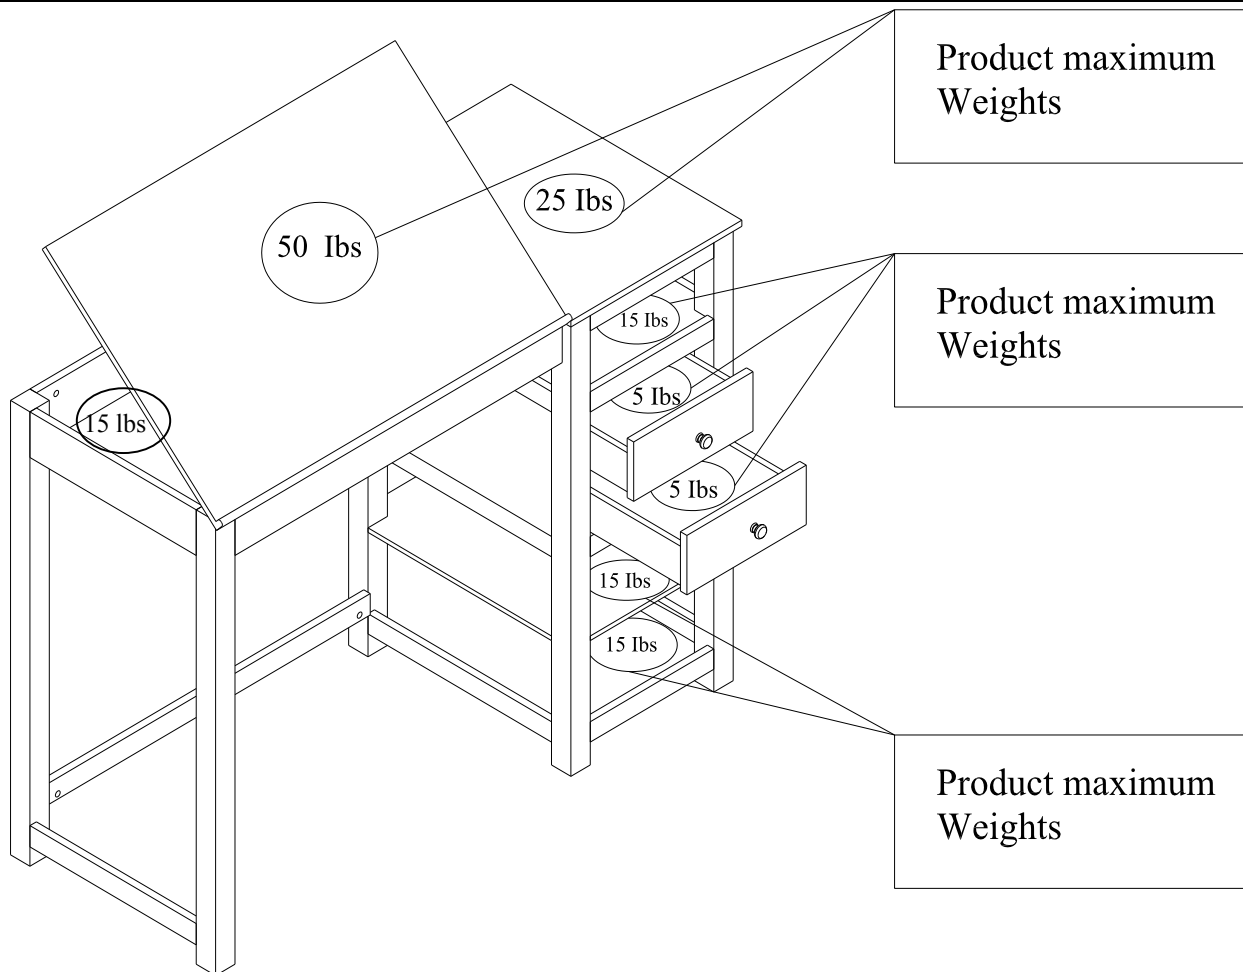

That's it ! You've finished assembling your counter height desk .

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service department. We will replace the part FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping
Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:

(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1