

DOREL ASIA

KIDDY TABLE & CHAIR SET

Model No.:


DA6133 (Dry Erase Top)

DA6227 (Chalkboard Top)

UPC CODE:

0-65857-16120-5 Dry Erase Top

0-65857-16121-2 Chalkboard Top

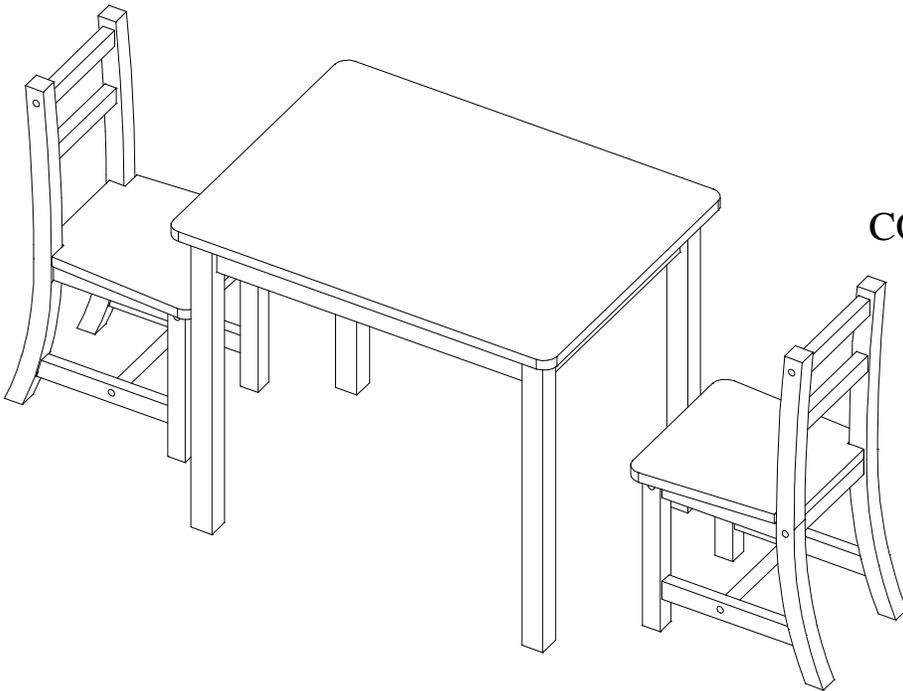

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ
AND KEEP FOR FUTURE
REFERENCE.

Lot number:

(TAKEN FROM CARTON)

Date of purchase:

_____ / _____ / _____.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service
department. We will replace the part
FREE of charge.



Tel #: 1-800-295-1980

E-Mail: das@dorel.com

Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

 **CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1
E-MAIL: das@dorel.com

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on a soft, smooth surface to prevent damage to product finish.
- * Phillips head screw driver is not included.
- * **DO NOT** use power tools.
- * **CAUTION:** Adult assembly required.
- * Assembly will require two people.
- * Estimated assembly time: 30 minutes.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

 
 
 

 



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

KIDDY TABLE & CHAIR SET

DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)








HARDWARE LIST
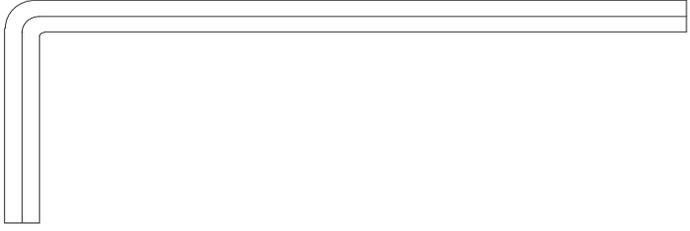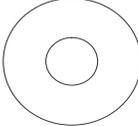
<p>1</p>  <p>Φ 6.5mm x 50mm</p> <p>HEX HEAD SCREW 16 PCS</p>	<p>2</p>  <p>Φ 1/4" x 55mm</p> <p>HEAD BOLT (HEX SOCKET) 8 PCS</p>
<p>3</p>  <p>Φ 4mm x 30mm</p> <p>FLAT HEAD SCREW 8 PCS</p>	<p>4</p>  <p>ALLEN KEY 1 PC</p>
<p>5</p>  <p>Φ 8mm x 30mm</p> <p>WOOD DOWEL 12 PCS</p>	<p>6</p>  <p>FLAT WASHER 8 PCS</p>
<p>7</p>  <p>SPRING WASHER 8 PCS</p>	

KIDDY TABLE & CHAIR SET

DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

PARTS LIST

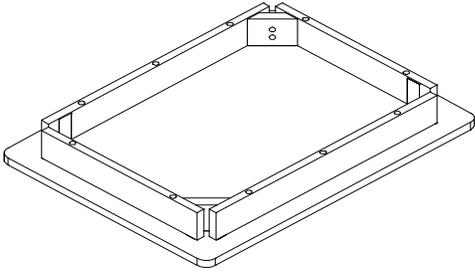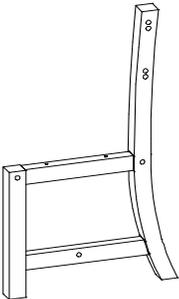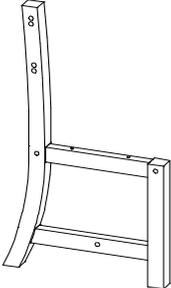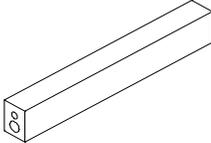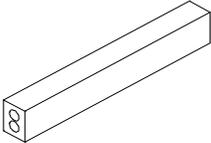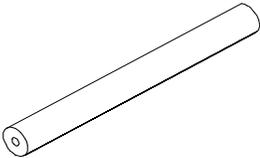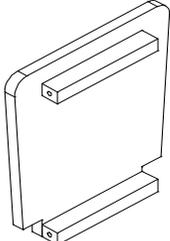A		B	
TABLE TOP - 1 PC		TABLE LEG 4 PCS	
C		D	
CHAIR LEFT SIDE FRAME 2 PCS		CHAIR RIGHT SIDE FRAME 2 PCS	
E		F	
CHAIR BACK UPPER RAIL 2 PCS		CHAIR BACK MIDDLE RAIL 2 PCS	
G		H	
CHAIR SUPPORT BAR - 2 PCS		CHAIR SEAT PANEL 2 PCS	





KIDDY TABLE & CHAIR SET

DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

STEP 1

Place table top (A) upside down on a smooth, clean surface.

Attach table legs (B) to table top (A) with head bolts (2), spring washers (7) and flat washers (6). Use Allen key (4) to fully tighten bolts.

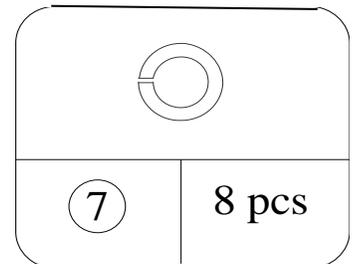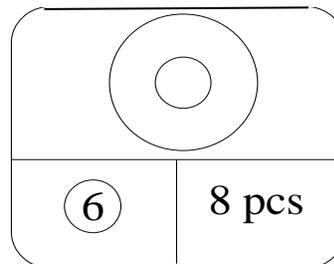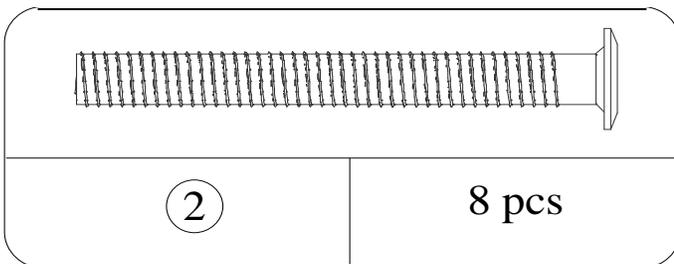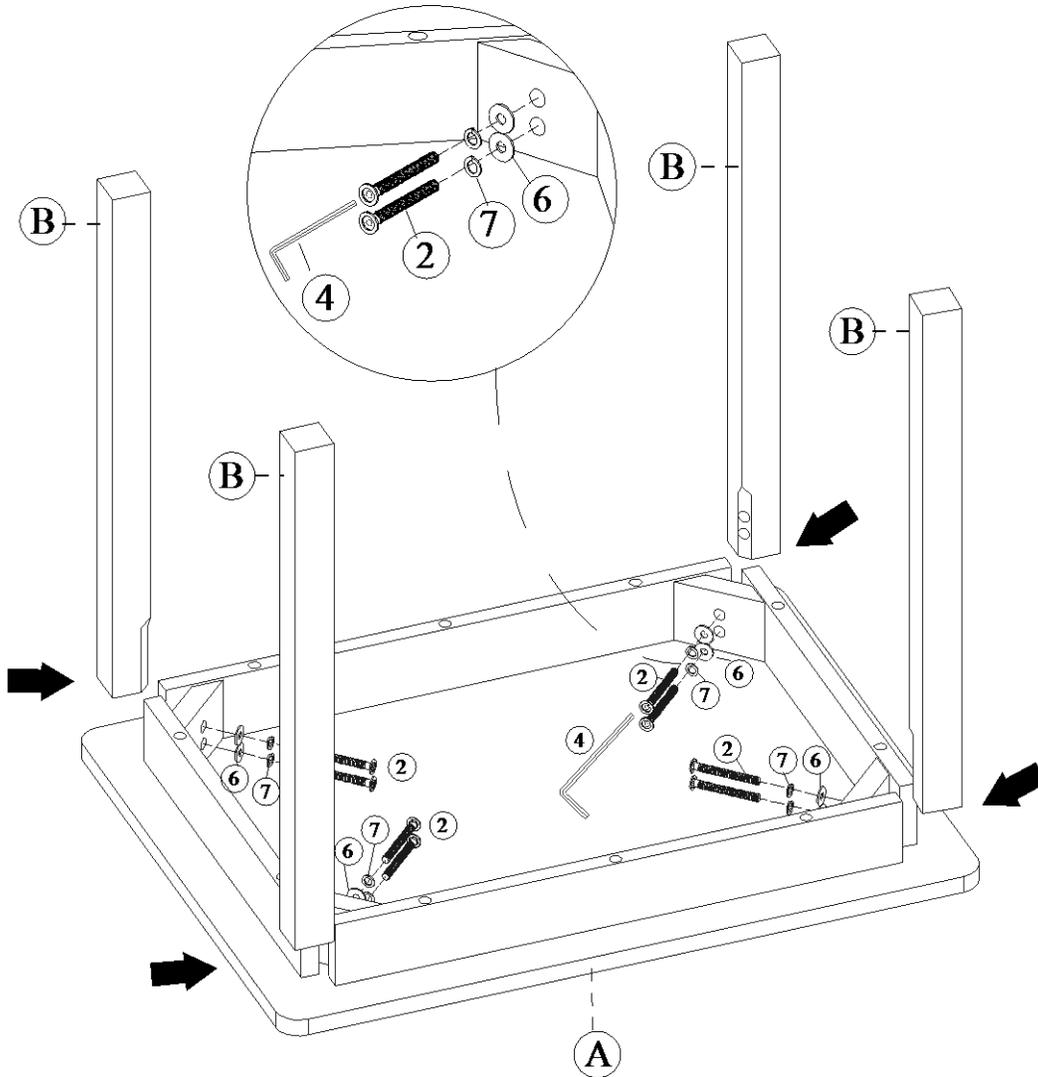

KIDDY TABLE & CHAIR SET




DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

STEP 2

Insert wood dowels (5) into one side of back upper rail (E) and back middle rail (F).

Attach back upper rail (E), back middle rail (F) and support bar (G) to the chair left side frame (C) with hex head screws (1). Use Allen key (4) to tighten the screws.

Note: Do not fully tighten the screws. This will facilitate assembly in the following steps.

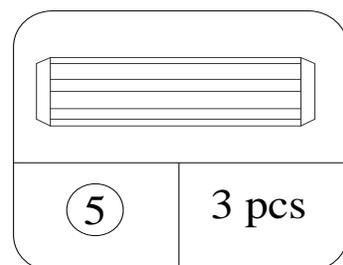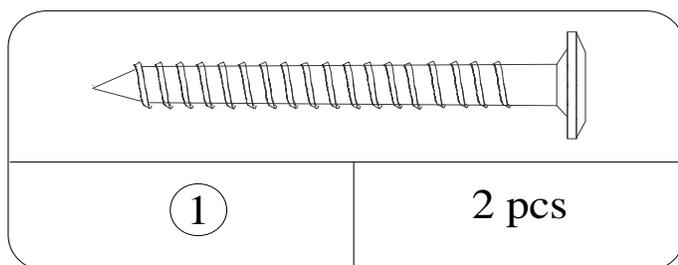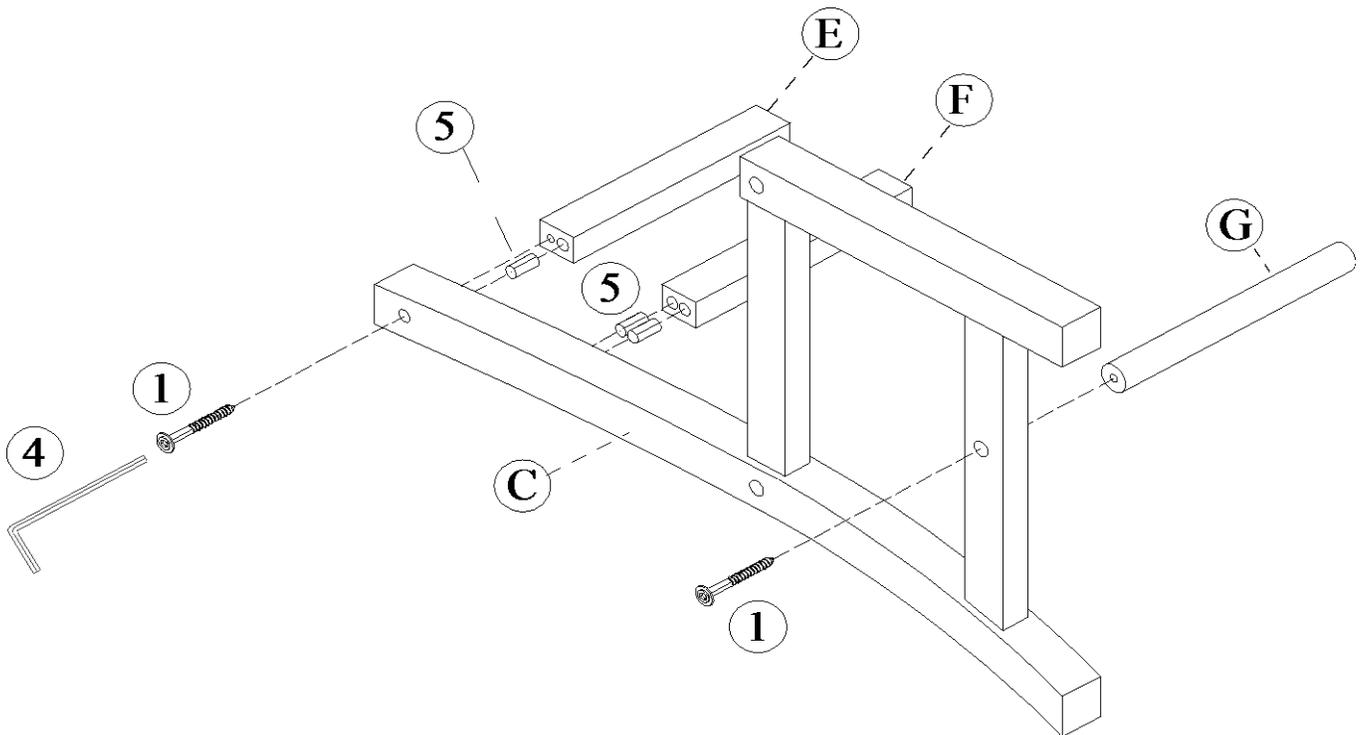

KIDDY TABLE & CHAIR SET



DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

STEP 3

Insert wood dowels (5) into the other side of back upper rail (E) and back middle rail (F).

Attach the chair right side frame (D) to the assembled unit with hex head screws (1). Use Allen key (4) to tighten the screws.

Note: Do not fully tighten the screws. This will facilitate assembly in the following steps.

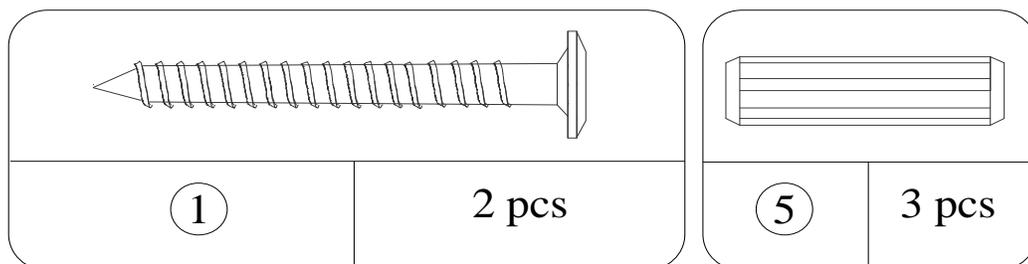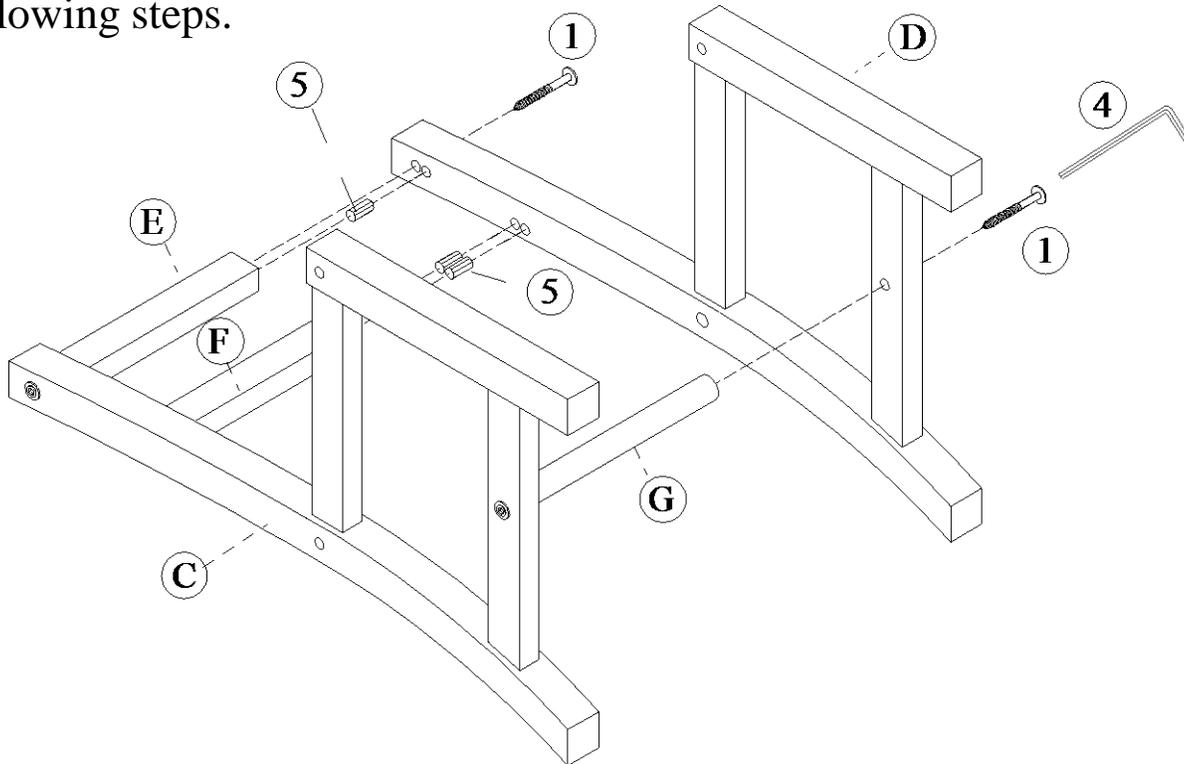

KIDDY TABLE & CHAIR SET



DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

STEP 4

Place the seat panel (H) on the assembled chair frame.

Attach seat panel (H) to the chair left and right side frames (C and D) with hex head screws (1). Use Allen key (4) to fully tighten all the hex head screws.

Note: Fully tighten all the hex head screws installed in the previous steps.

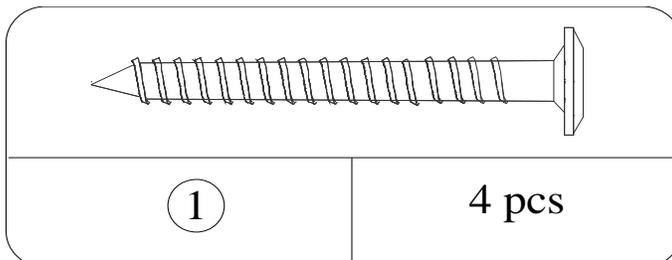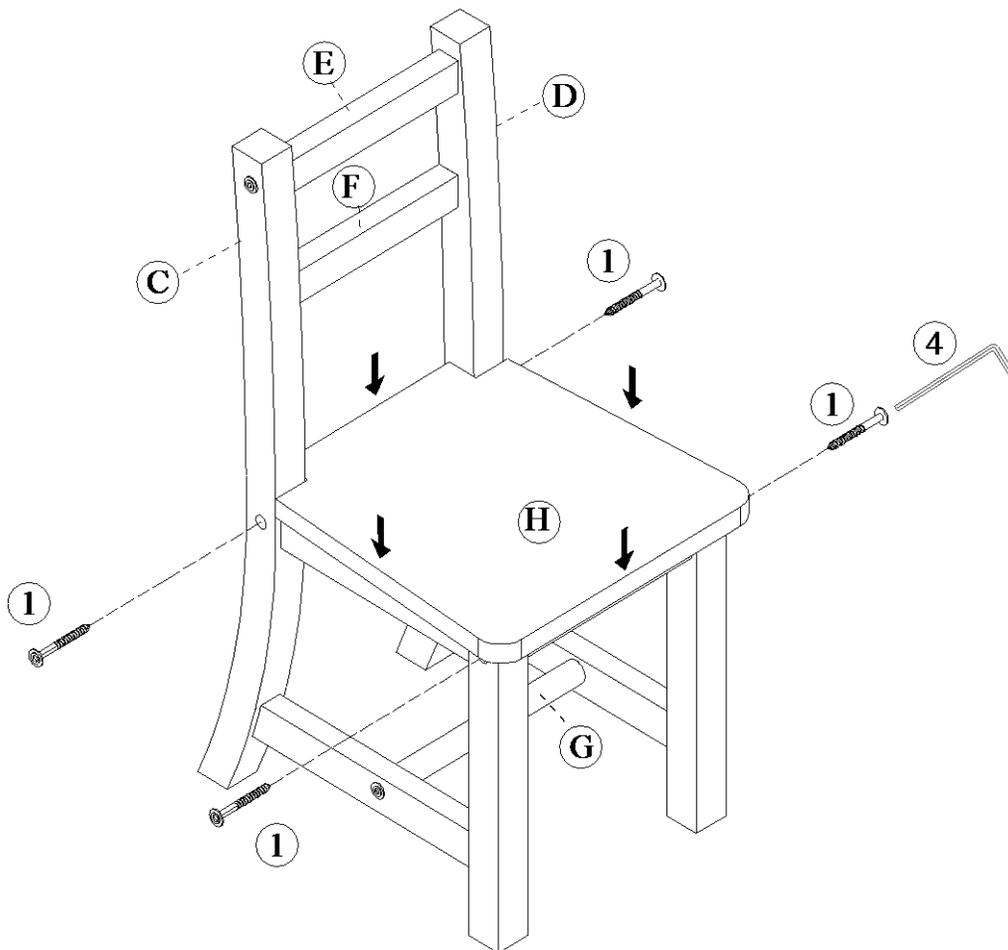

KIDDY TABLE & CHAIR SET



DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)

STEP 5

Lay the chair on its back.

Secure the seat panel (H) to side frames (C and D) as shown below using flat head screws (3) and a Phillips head screwdriver (not included).

Note: Repeat steps (2-5) to assemble the other chair.

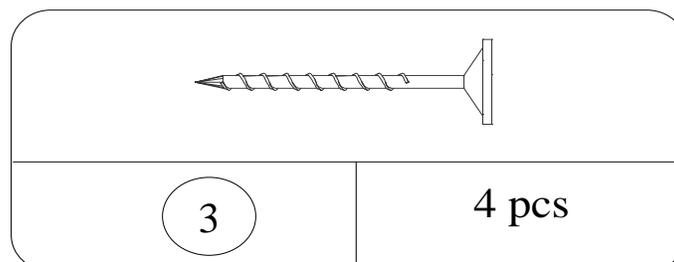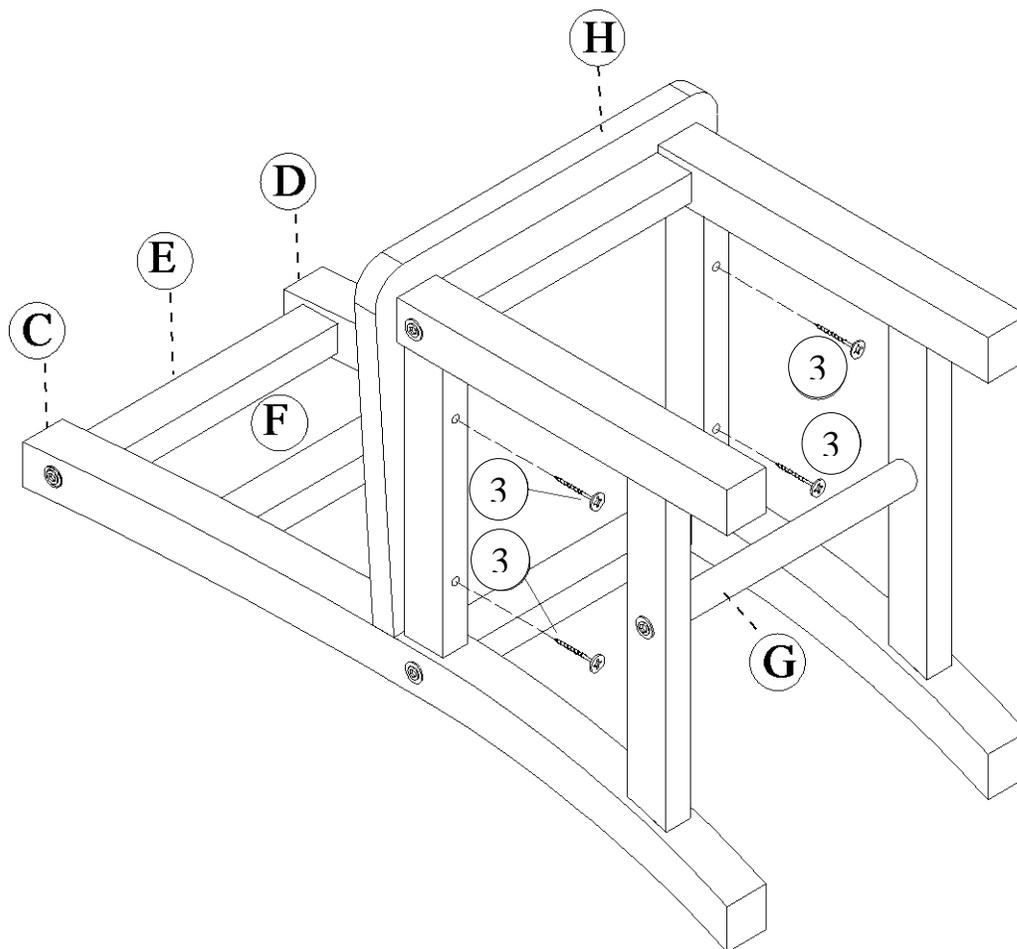


KIDDY TABLE & CHAIR SET

DA6133 (Dry Erase Top) / DA6227 (Chalkboard Top)



CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

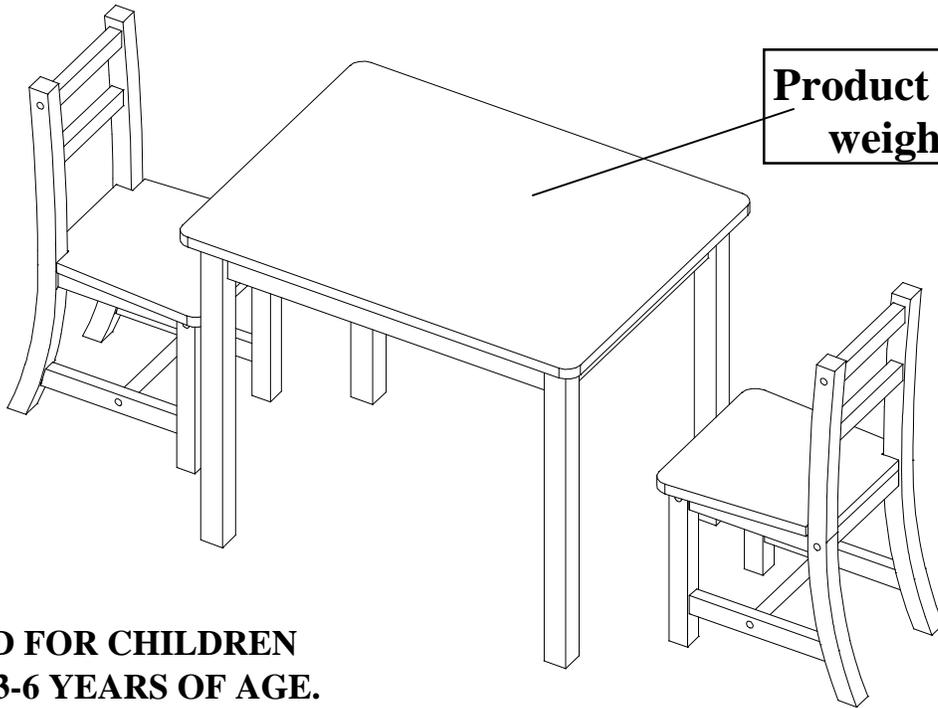

**Product maximum
weight: 50 lbs**

**INTENDED FOR CHILDREN
BETWEEN 3-6 YEARS OF AGE.**

That's it ! You've finished assembling your Kiddy table & chair set.

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service
department. We will replace the part
FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity (Please be sure to list model number or SKN number):

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1