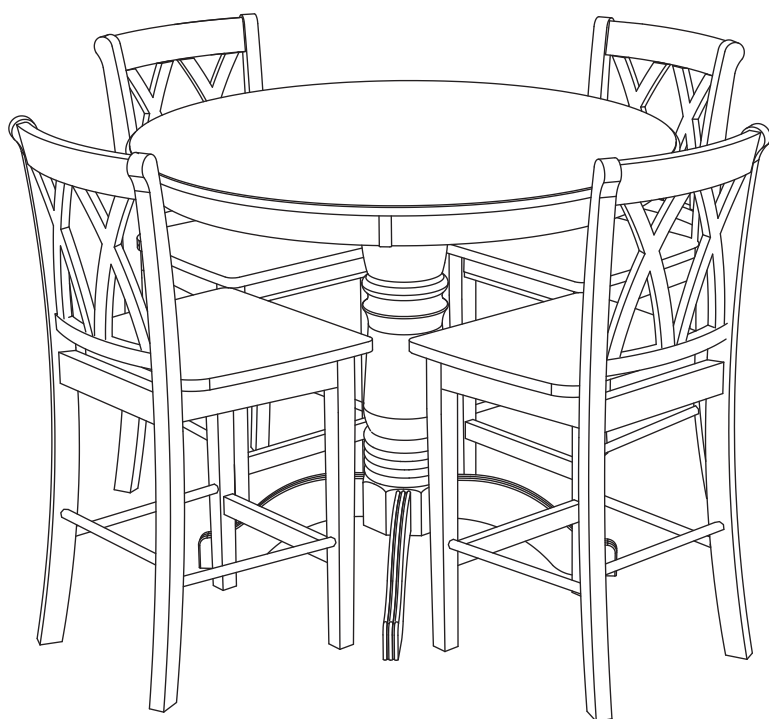


DOREL ASIA

5-PIECE DINING SET

Model No:
DA3023TDV

UPC CODE:
0-65857-16282-0



NOTE:
THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ AND
KEEP FOR FUTURE REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service
department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

 **CALL 1-800-295-1980**

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1**

E-MAIL: das@dorel.com

NOTES

- * Inspect all parts for damage before assembly. If any parts are damaged or missing, please contact Customer Service for replacement parts. In the case of a damaged table top, the set must be returned to the place of purchase for an exchange.
- * Assembly and handling may require two people.
- * Estimated assembly time is 45 - 60 minutes.
- * To prevent any scratches, please remove all packaging and assemble on a clean, smooth surface.
- * Read all instructions completely before assembling.
- * Do not use power tools.
- * CAUTION: Adult assembly required.
- * A Phillips head screw driver is not included.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

 


 
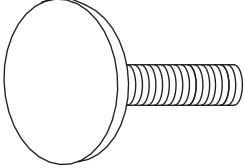
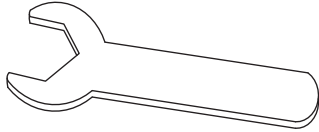

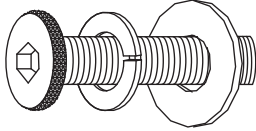

 

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

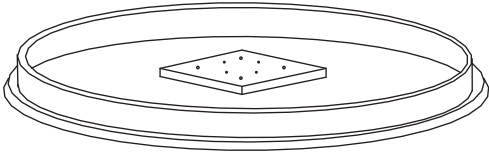
 
 
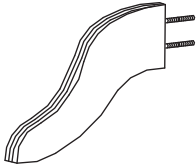
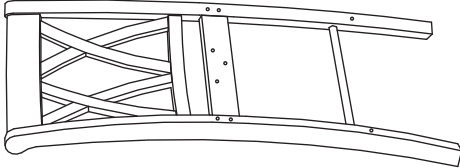
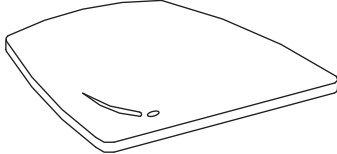
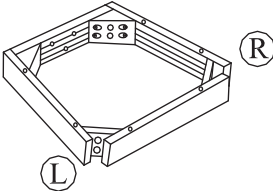
 

 

5-PIECE DINING SET DA3023TDV

HARDWARE LIST

<p>1</p> 	<p>2</p> 
<p>NUT 24 PCS</p>	<p>SPRING WASHER 52 PCS</p>
<p>3</p> 	<p>4</p>  <p>Ø 5/16" x 1-1/4"</p>
<p>FLAT WASHER 52 PCS</p>	<p>LONG ALLEN BOLT 4 PCS</p>
<p>5</p> 	<p>6</p> 
<p>LEVELER 4 PCS</p>	<p>WRENCH 1 PC</p>
<p>7</p> 	<p>8</p>  <p>Ø 1/4" x 1"</p>
<p>ALLEN KEY 1 PC</p>	<p>ALLEN BOLT (WITH SPRING AND FLAT WASHER) 4 PCS</p>
<p>9</p>  <p>Ø 1/4" x 3"</p>	<p>10</p>  <p>Ø 1/4" x 1-3/4"</p>
<p>LONG BOLT 16 PCS</p>	<p>SHORT BOLT 12 PCS</p>
<p>11</p> 	
<p>WOOD SCREW 48 PCS</p>	

5-PIECE DINING SET DA3023TDV

PARTS LIST

A 	B 
<p style="text-align: center;">TABLE TOP 1 PC</p>	<p style="text-align: center;">CONNECTING BOARD 1 PC</p>
C 	D 
<p style="text-align: center;">PEDESTAL 1 PC</p>	<p style="text-align: center;">TABLE LEG 4 PCS</p>
E 	F 
<p style="text-align: center;">CHAIR BACK FRAME 4 PCS</p>	<p style="text-align: center;">SEAT BOARD 4 PCS</p>
G 	H 
<p style="text-align: center;">SEAT FRAME 4 PCS</p>	<p style="text-align: center;">LEFT FRONT LEG 4 PCS</p>
I 	J 
<p style="text-align: center;">RIGHT FRONT LEG 4 PCS</p>	<p style="text-align: center;">FRONT STRETCHER 4 PCS</p>
K 	
<p style="text-align: center;">SIDE STRETCHER 8 PCS</p>	

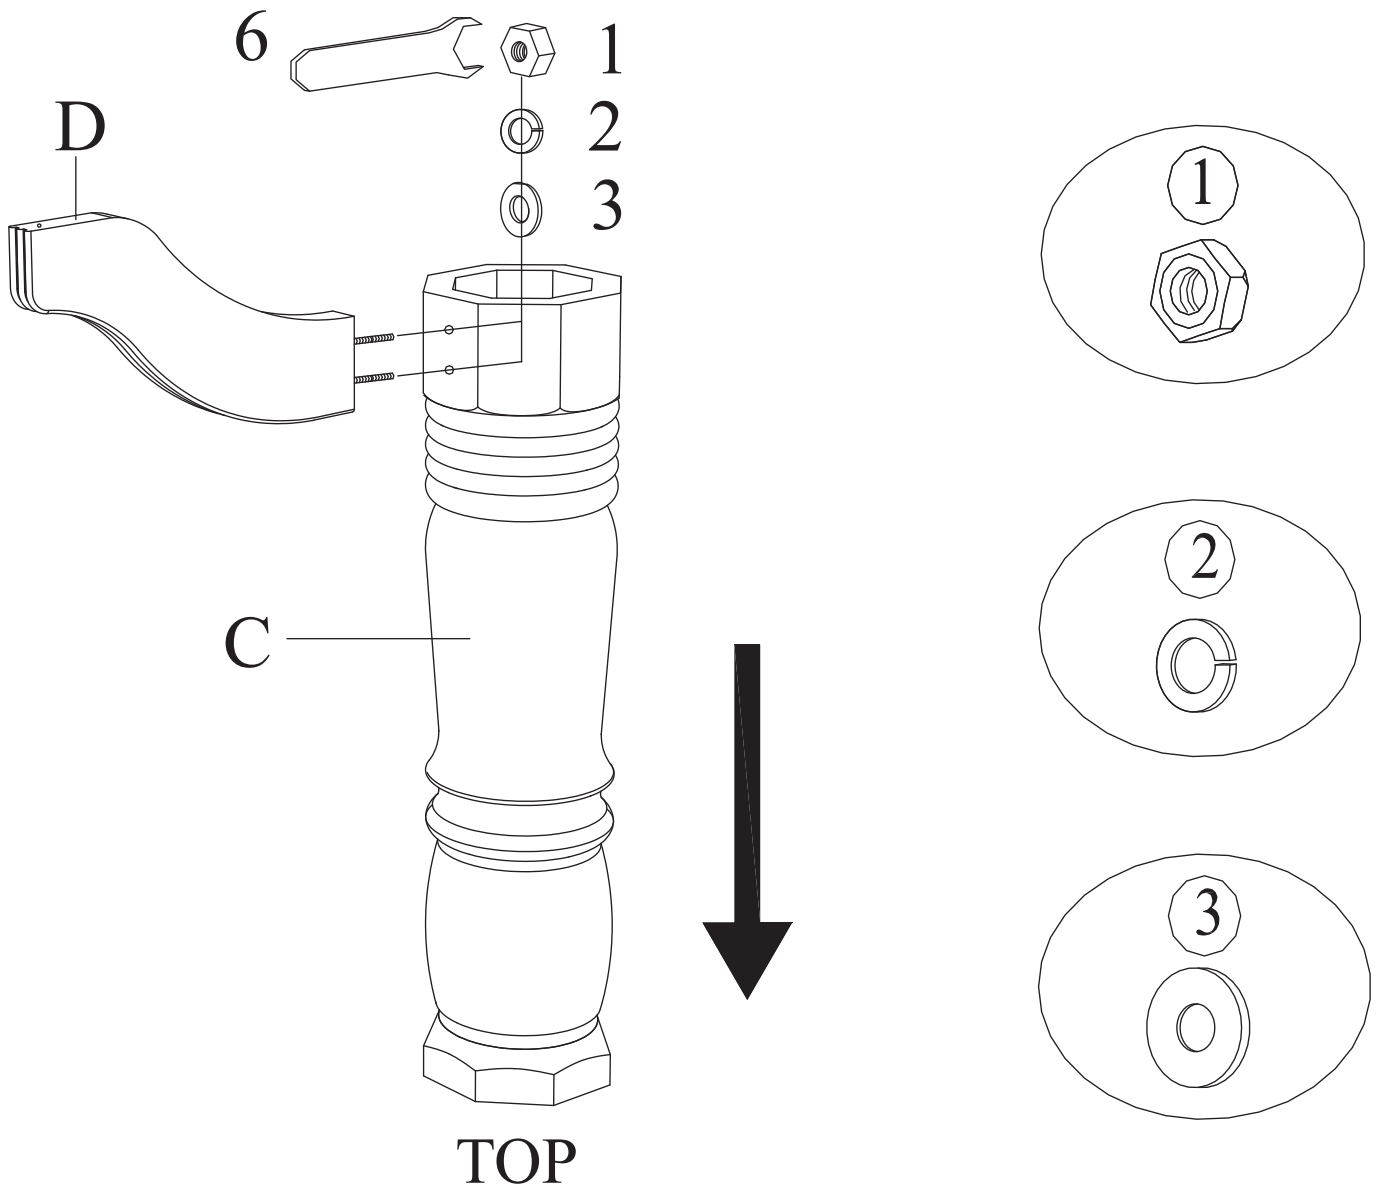
5-PIECE DINING SET DA3023TDV

STEP 1

Place pedestal (C) upside down on a clean, smooth surface.

Attach table legs (D) to pedestal (C) using nuts (1), spring washers (2) and flat washers (3).


Fully tighten the nuts with wrench (6).



5-PIECE DINING SET DA3023TDV

STEP 2

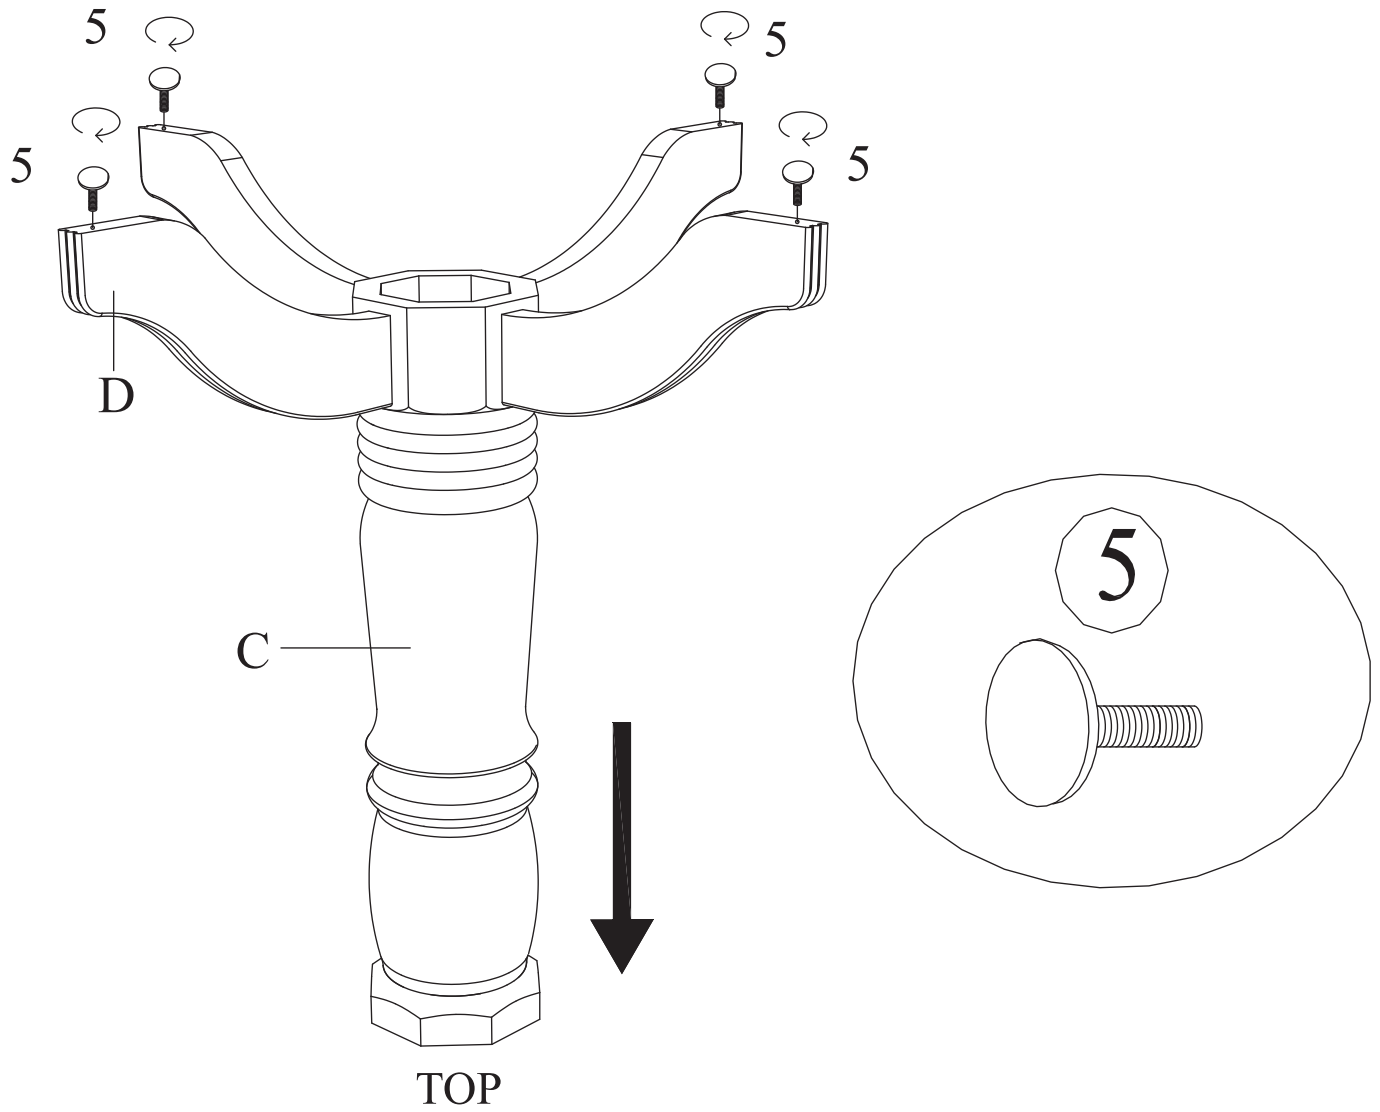Screw the levelers (5) into the pre-holes on the bottom of the legs (D).




5-PIECE DINING SET DA3023TDV

STEP 3

Turn the assembled pedestal (done in step 1 & 2) upright.

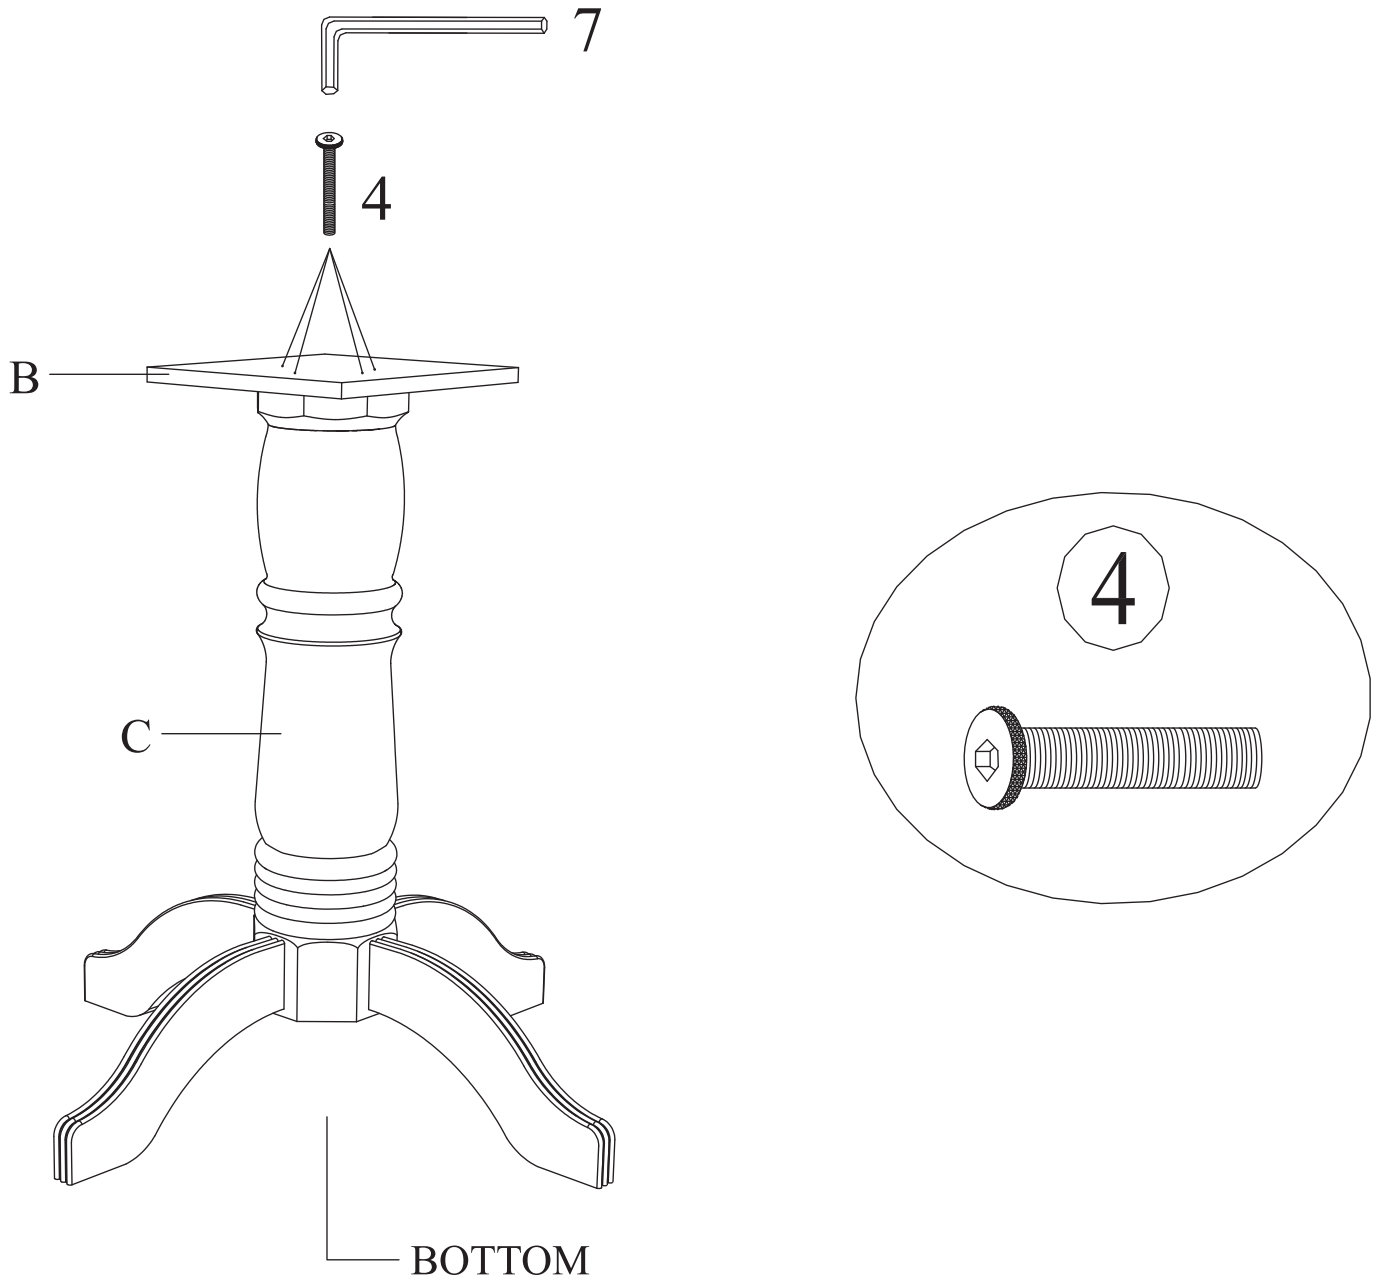Attach connecting board (B) to the pedestal (C) with long Allen bolts (4).
Fully tighten the Allen bolts with Allen key (7).



5-PIECE DINING SET DA3023TDV

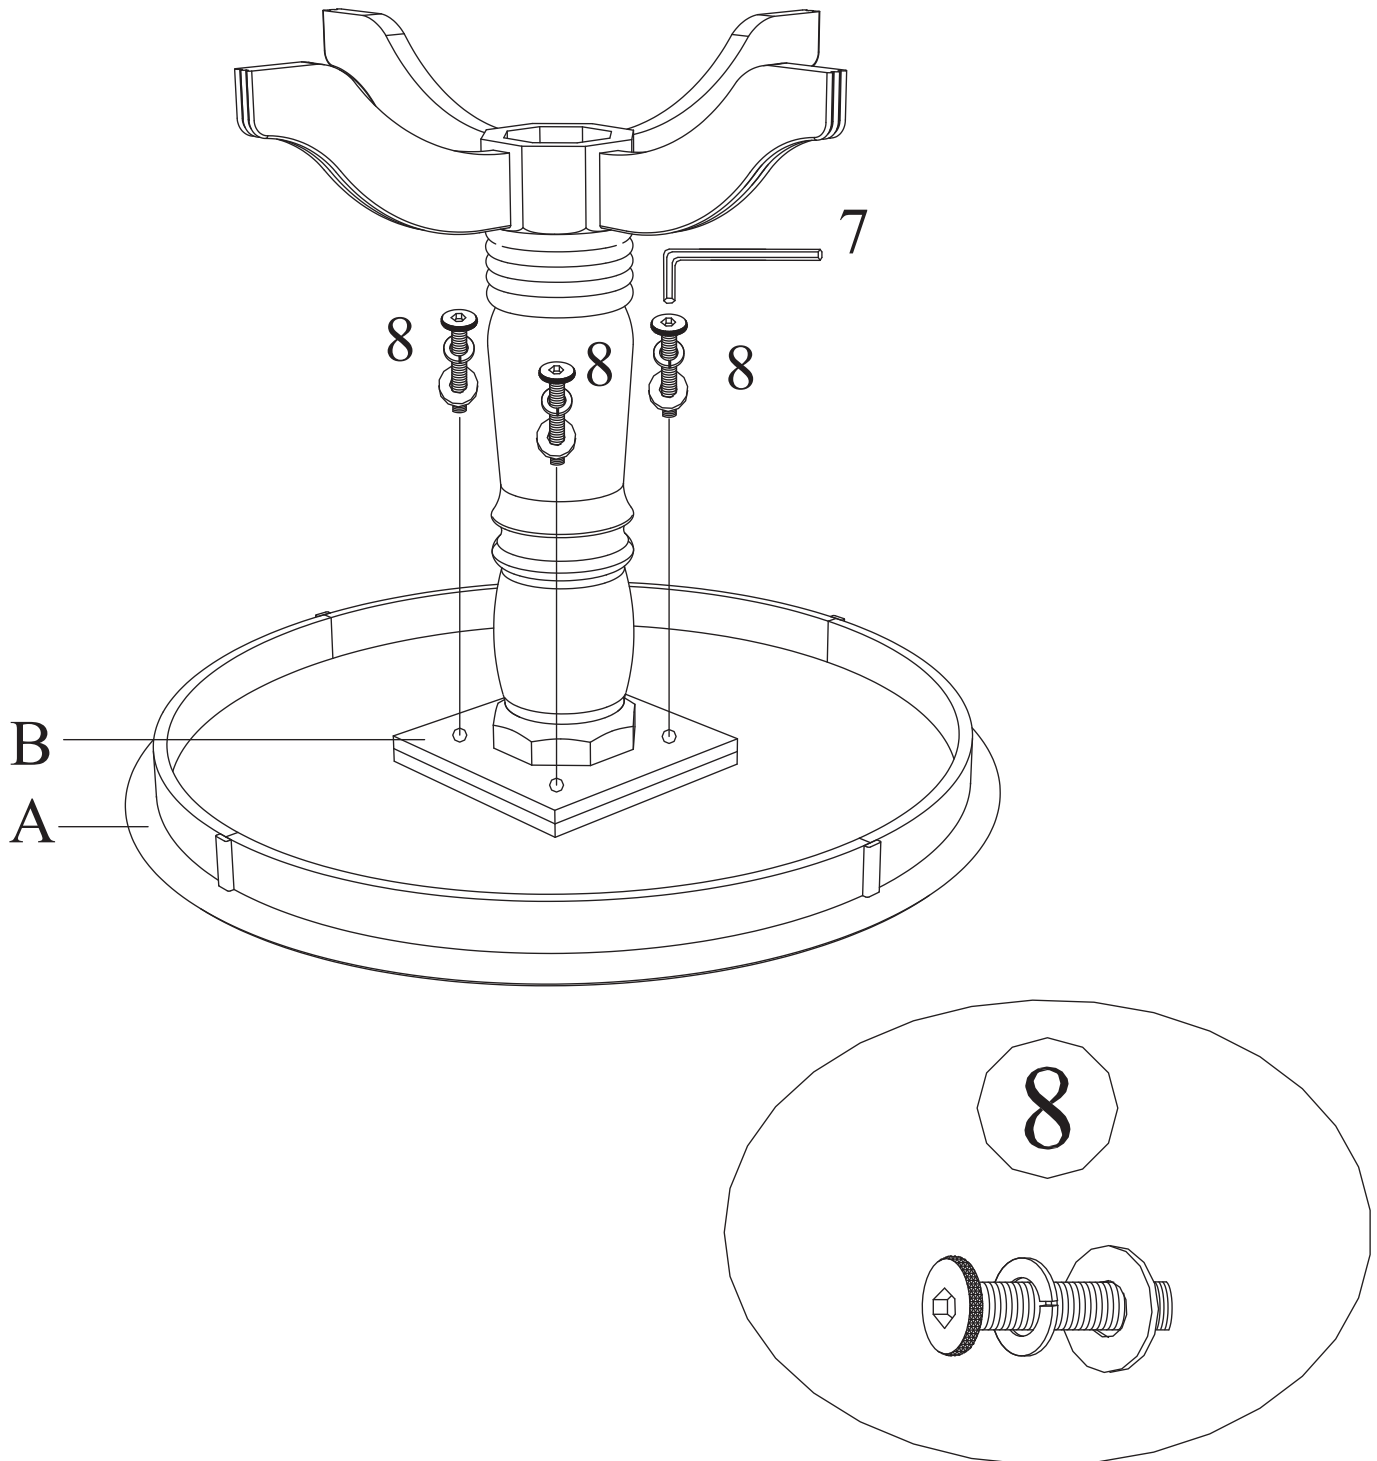
STEP 4

Place the table top (A) upside down on a clean, smooth surface.

Attach the assembled table base (done in step 3) to the table top (A) with short Allen bolts (8).

Fully tighten the Allen bolts with Allen key (7).

Then turn the table upright.




5-PIECE DINING SET DA3023TDV

STEP 5

Attach seat frame (G) to chair back frame (E) with bolts (9 & 10), spring washers (2) and flat washers (3) as shown. Use wrench (6) to tighten bolts.

Do not fully tighten the bolts in this step.

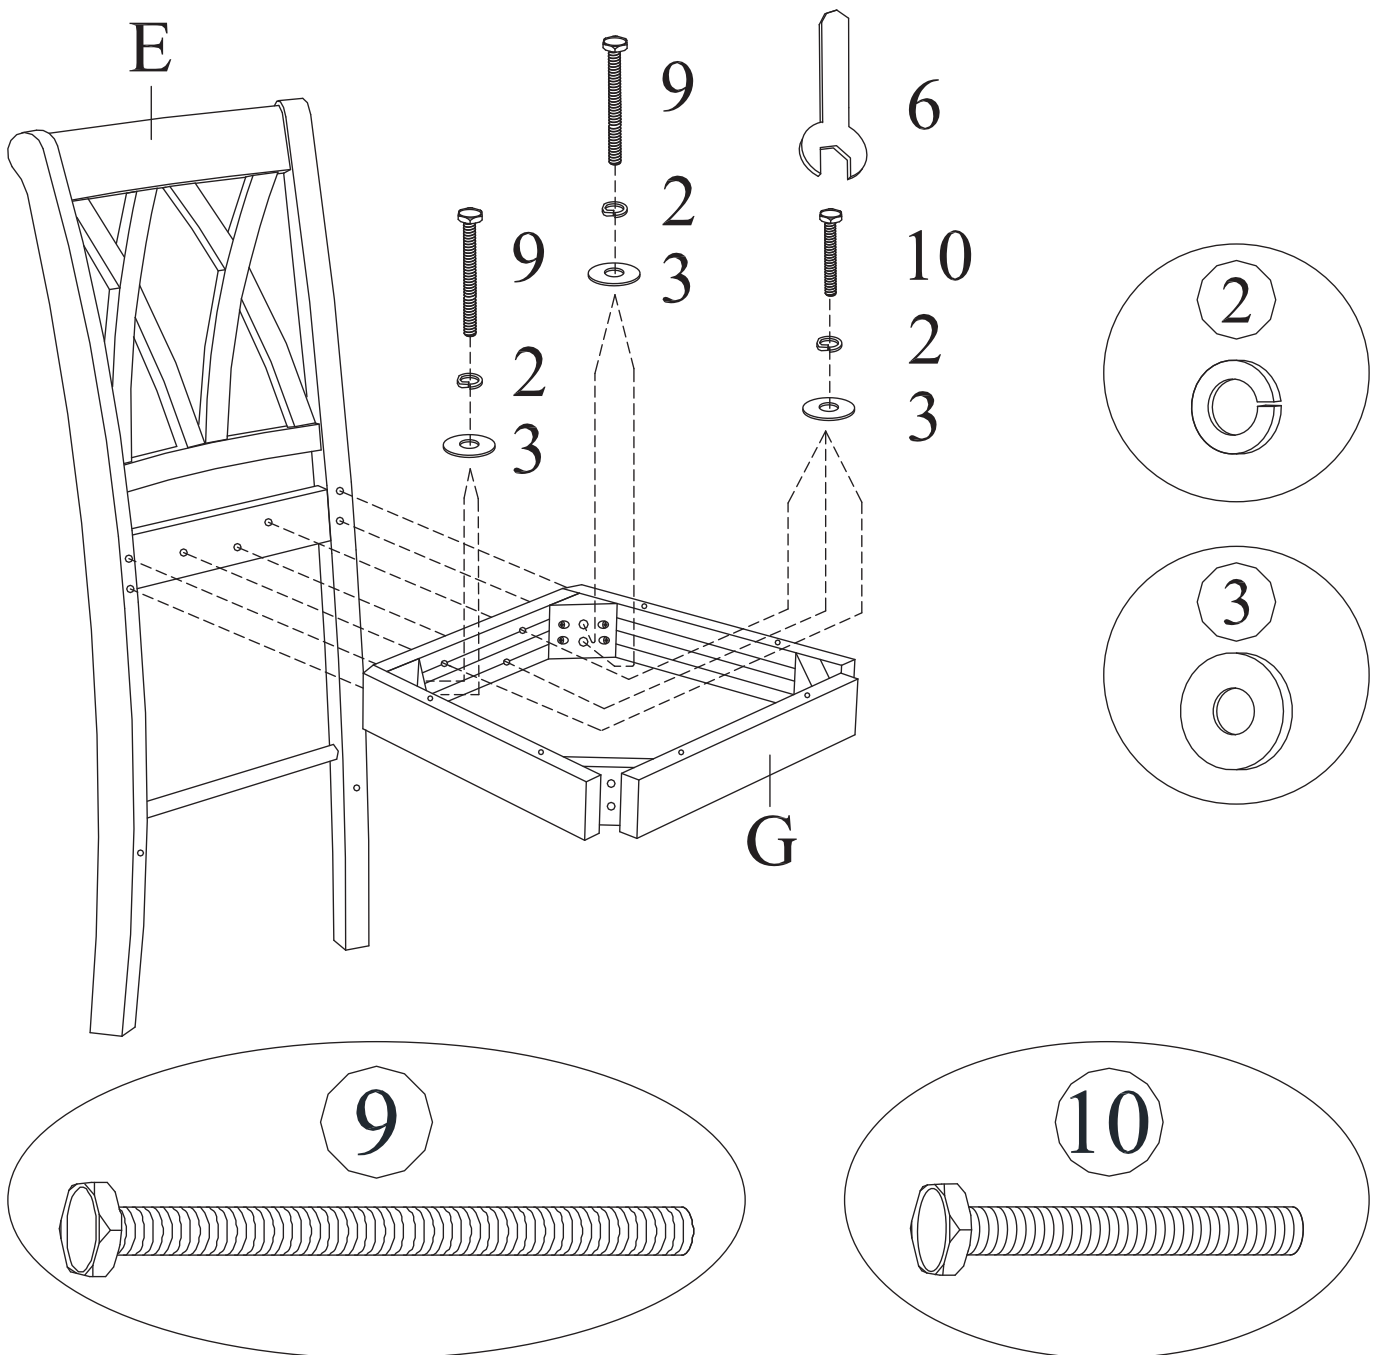Note: Seat frame (G) has holes on each side. These holes are to be attached the seat board (F) in last step. Ensure the wider holes face down towards the ground.



5-PIECE DINING SET DA3023TDV

STEP 6

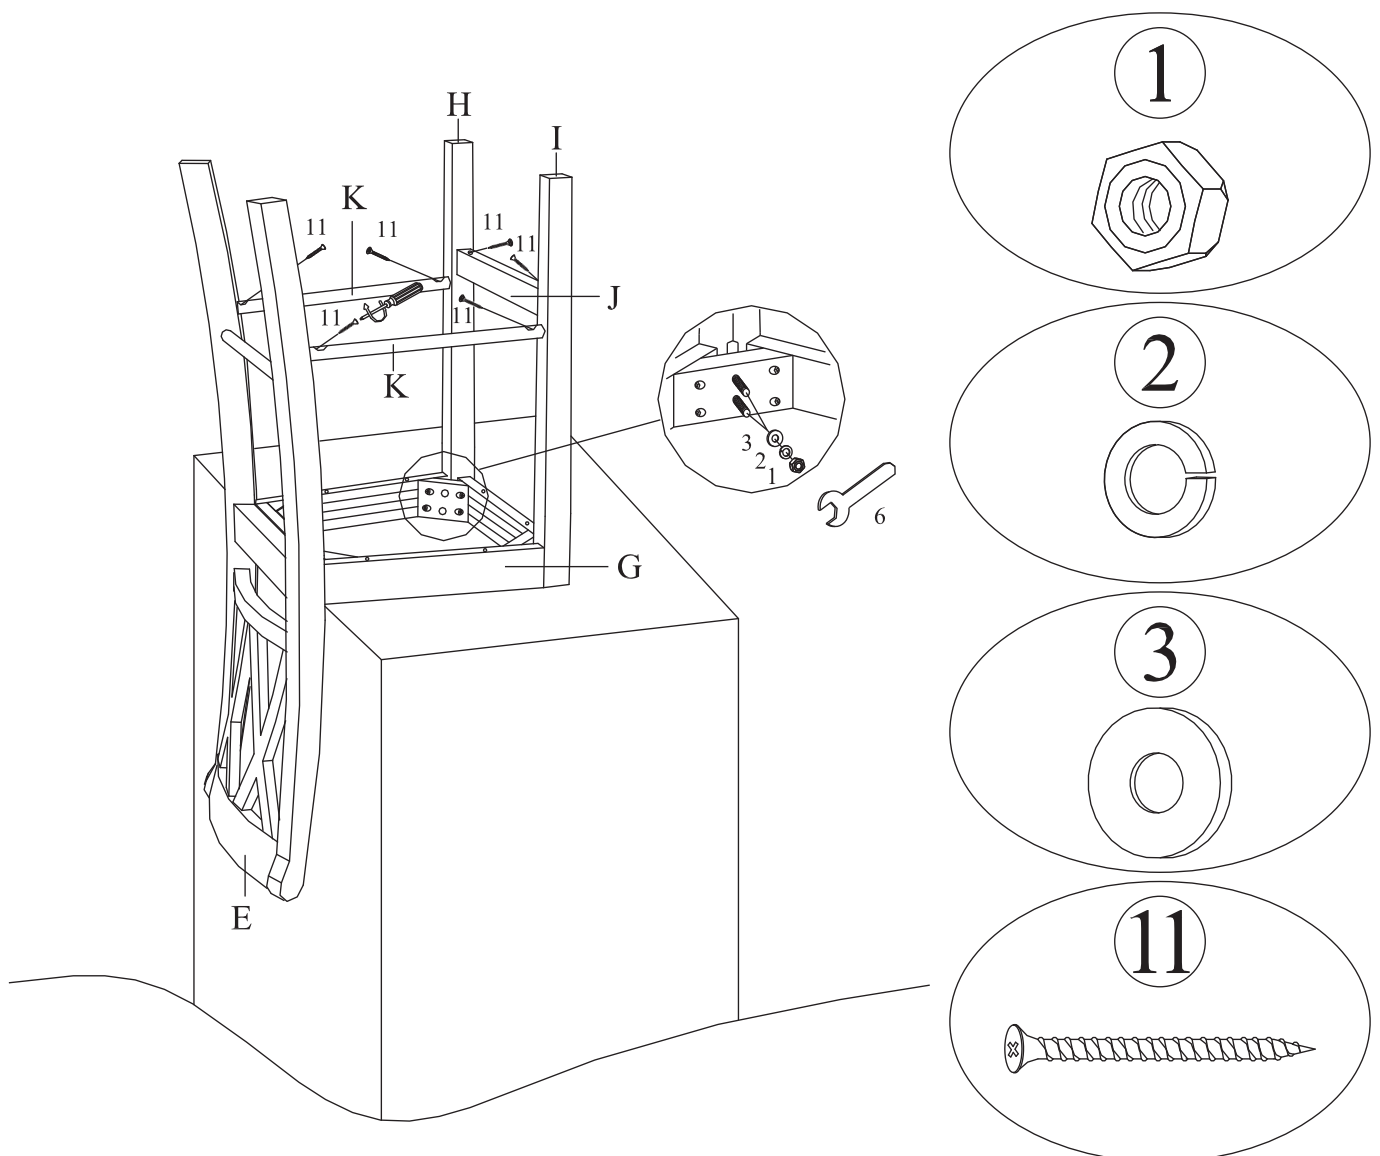
Attach the left and right front legs (H & I) to seat frame (G) with flat washers (3), spring washers (2) and nuts (1) as shown. Use wrench (6) to tighten nuts. Do not fully tighten nuts (1).

Insert the front stretcher (J) into the front legs (H & I) as shown.

Insert the side stretchers (K) into the front left and right legs (H & I) and chair back frame (E). Secure front stretcher (J) and side stretchers (K) to front legs (H & I) and chair back frame (E) with wood screws (11) using a Phillips head screw driver (not included).

NOTE: The small holes on all the stretchers must face towards the ground (when chair is in the normal use position).

Fully tighten all nuts for legs (H & I), then fully tighten all screws in this step.




5-PIECE DINING SET DA3023TDV

STEP 7

Place seat board (F) upside down on a clean smooth surface.

Attach seat board (F) with wood screws (11) using a Phillips head screw driver (not included) to tighten all screws.

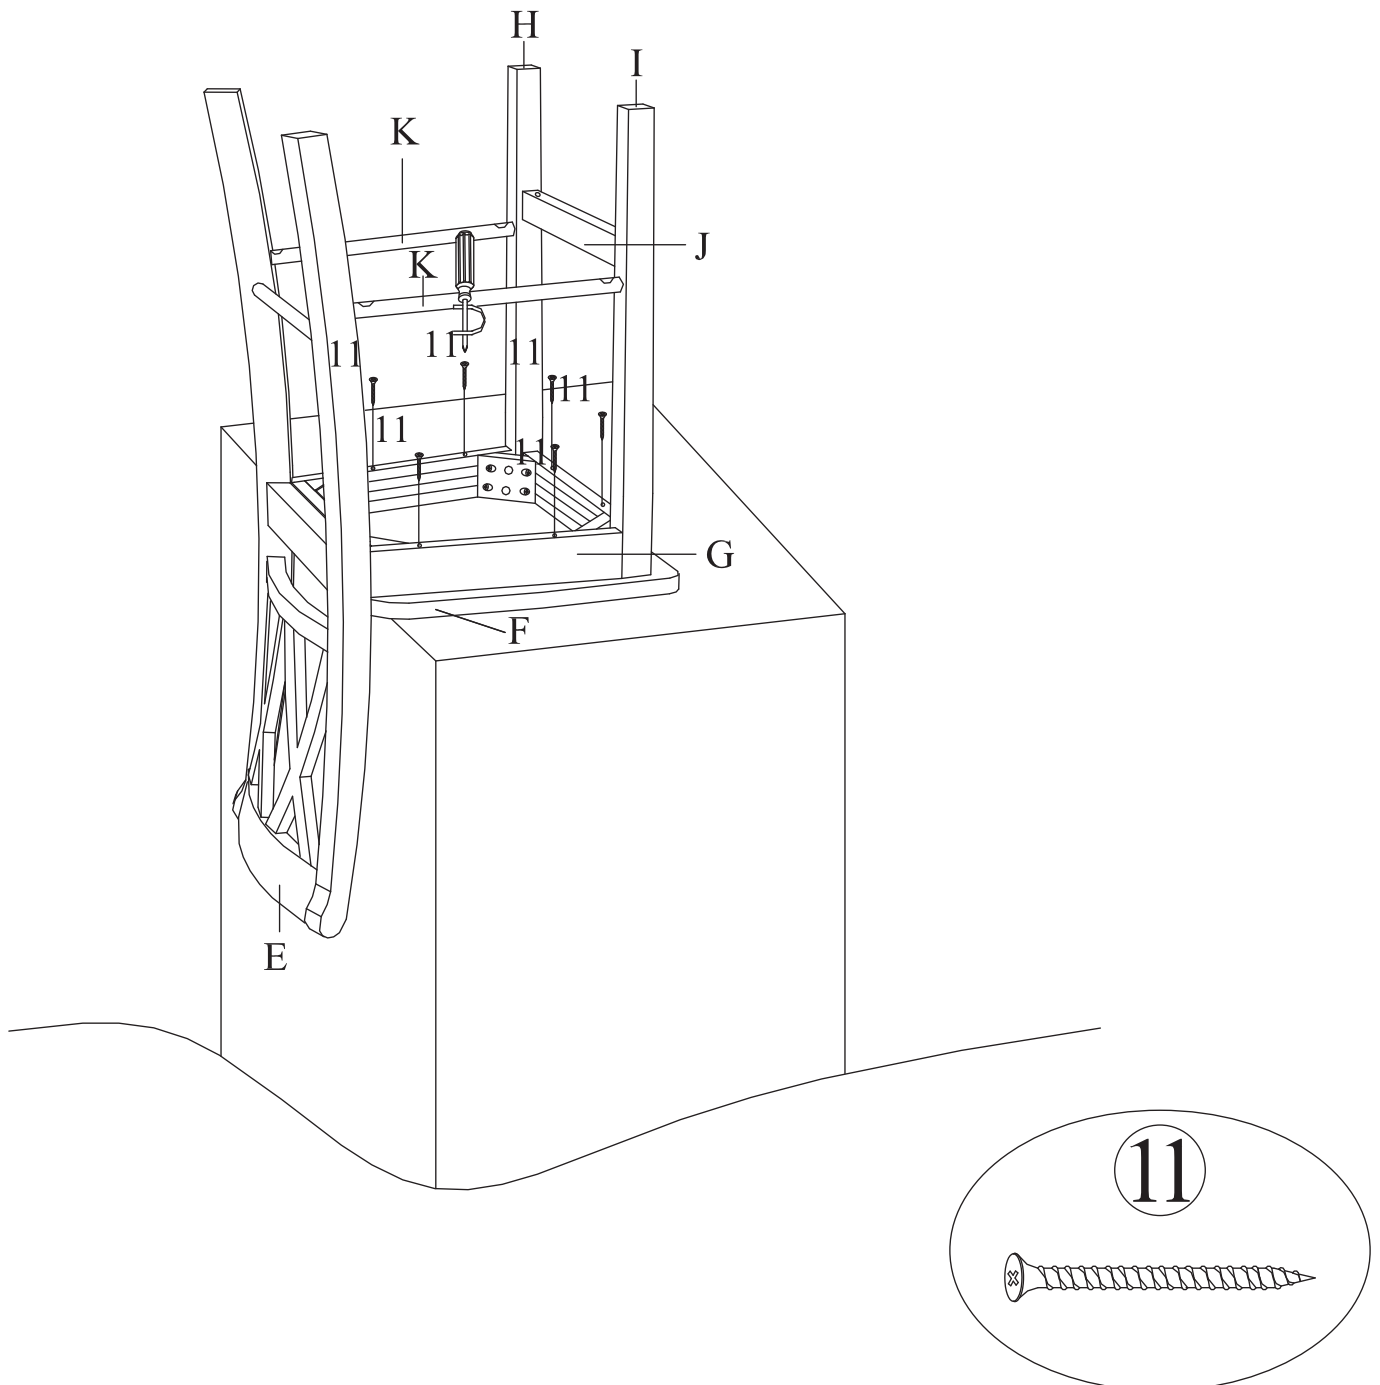
NOTE: Repeat Step 5 to 7 to assemble the other chairs.



5-PIECE DINING SET DA3023TDV



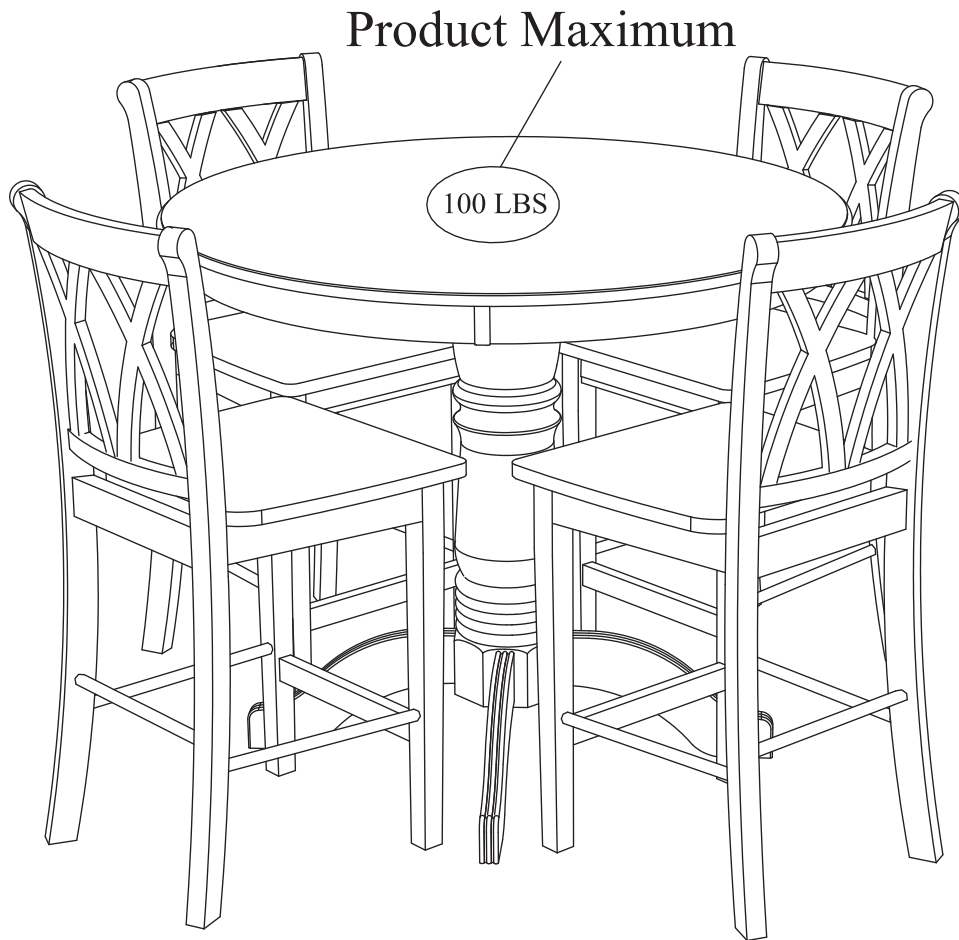CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.



Note: You can adjust the levelers (5) to level the table.
That's it ! You've finished assembling your dining set.

DO NOT RETURN PRODUCT TO THE STORE.
If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

MODEL #: DA3023TDV

Customer Service

**PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE
PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING
NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).**

**Customer Service Phone Number 1-800-295-1980
Customer Service Fax Number 514-353-7819**

Email: das@dorel.com

Request Date:

Name:

Shipping Address:
Street & Number :
City & State:
Zip Code:

Day Time Phone Number :
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1