


DOREL ASIA

5-PIECE DINING SET

Model No: DA2908

UPC CODE:
0-65857-16283-7

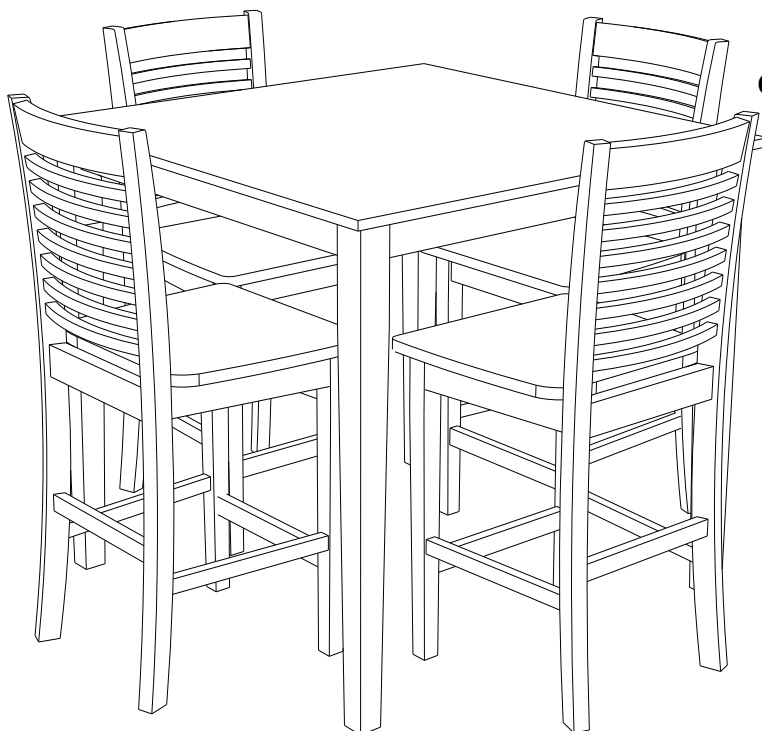

NOTE:
THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ
AND KEEP FOR FUTURE
REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer
service department. We will replace the part
FREE of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1**

E-MAIL: das@dorel.com



WARNING

- * Assembly and handling may require two people.
- * Estimated assembly time is 30 minutes.
- * Assemble on a clean smooth surface to prevent any scratches or damages to the product.
- * Read all instructions before assembling.
- * Do not use power tools.
- * CAUTION: Adult assembly required.
- * Phillips head screw driver is not included.

CARE AND CLEANING

Dust table regularly with a soft, dry cloth to prevent soil build up. A dampened cloth may be used occasionally to clean the surface. Dry immediately and buff lightly, following the grain. Avoid using harsh cleaners and abrasive products.

Use coasters to prevent the formation of moisture rings and trivets to protect from hot items. Cover extension leaves (if applicable) with a soft protective fabric before storing. Do not slide objects across the surface - always lift them.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY





 
 

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.



WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

**5-PIECE DINING SET
DA2908**


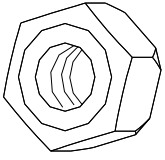
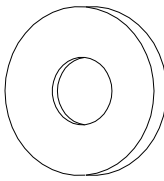
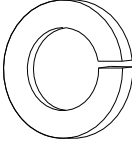
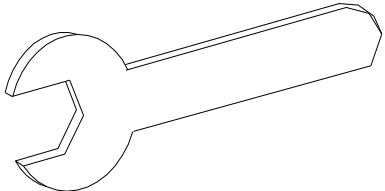





HARDWARE LIST

1		2	
NUT 24 PCS		FLAT WASHER 52 PCS	
3		4	
SPRING WASHER 52 PCS		WRENCH 1 PC	
5	 $\varnothing 1/4" \times 3"$	6	 $\varnothing 1/4" \times 1-3/4"$
LONG BOLT 16 PCS		SHORT BOLT 12 PCS	
7			
WOOD SCREW 48 PCS			

5-PIECE DINING SET

   DA2908

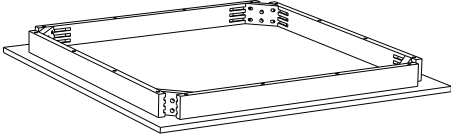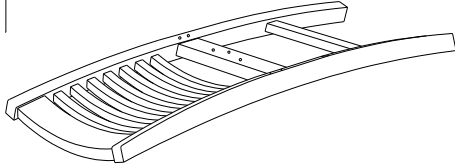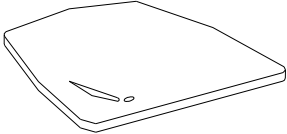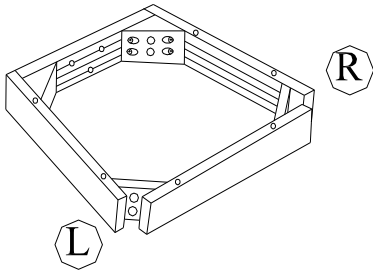PARTS LIST
 
<p>A</p> 	<p>B</p> 
<p style="text-align: center;">TABLE TOP 1 PC</p>	<p style="text-align: center;">TABLE LEG 4 PCS</p>
<p>C</p> 	<p>D</p> 
<p style="text-align: center;">CHAIR BACK FRAME 4 PCS</p>	<p style="text-align: center;">CHAIR LEFT FRONT LEG 4 PCS</p>
<p>E</p> 	<p>F</p> 
<p style="text-align: center;">CHAIR RIGHT FRONT LEG 4 PCS</p>	<p style="text-align: center;">SEAT BOARD 4 PCS</p>
<p>G</p> 	<p>H</p> 
<p style="text-align: center;">SEAT FRAME 4 PCS</p>	<p style="text-align: center;">CHAIR RIGHT SIDE CROSSBAR 4 PCS</p>
<p>I</p> 	<p>J</p> 
<p style="text-align: center;">CHAIR LEFT SIDE CROSSBAR 4 PCS</p>	<p style="text-align: center;">CHAIR FRONT CROSSBAR 4 PCS</p>


5-PIECE DINING SET DA2908

STEP 1

The table legs (B) have been packaged with pre-installed bolts. Remove the plastic plugs covering the bolts on table legs (B).

Place table top (A) upside down on a clean smooth surface.

Attach table legs (B) to table top (A) with nuts (1), spring washers (3) and flat washers (2) as shown. Tighten nuts (1) using wrench (4).

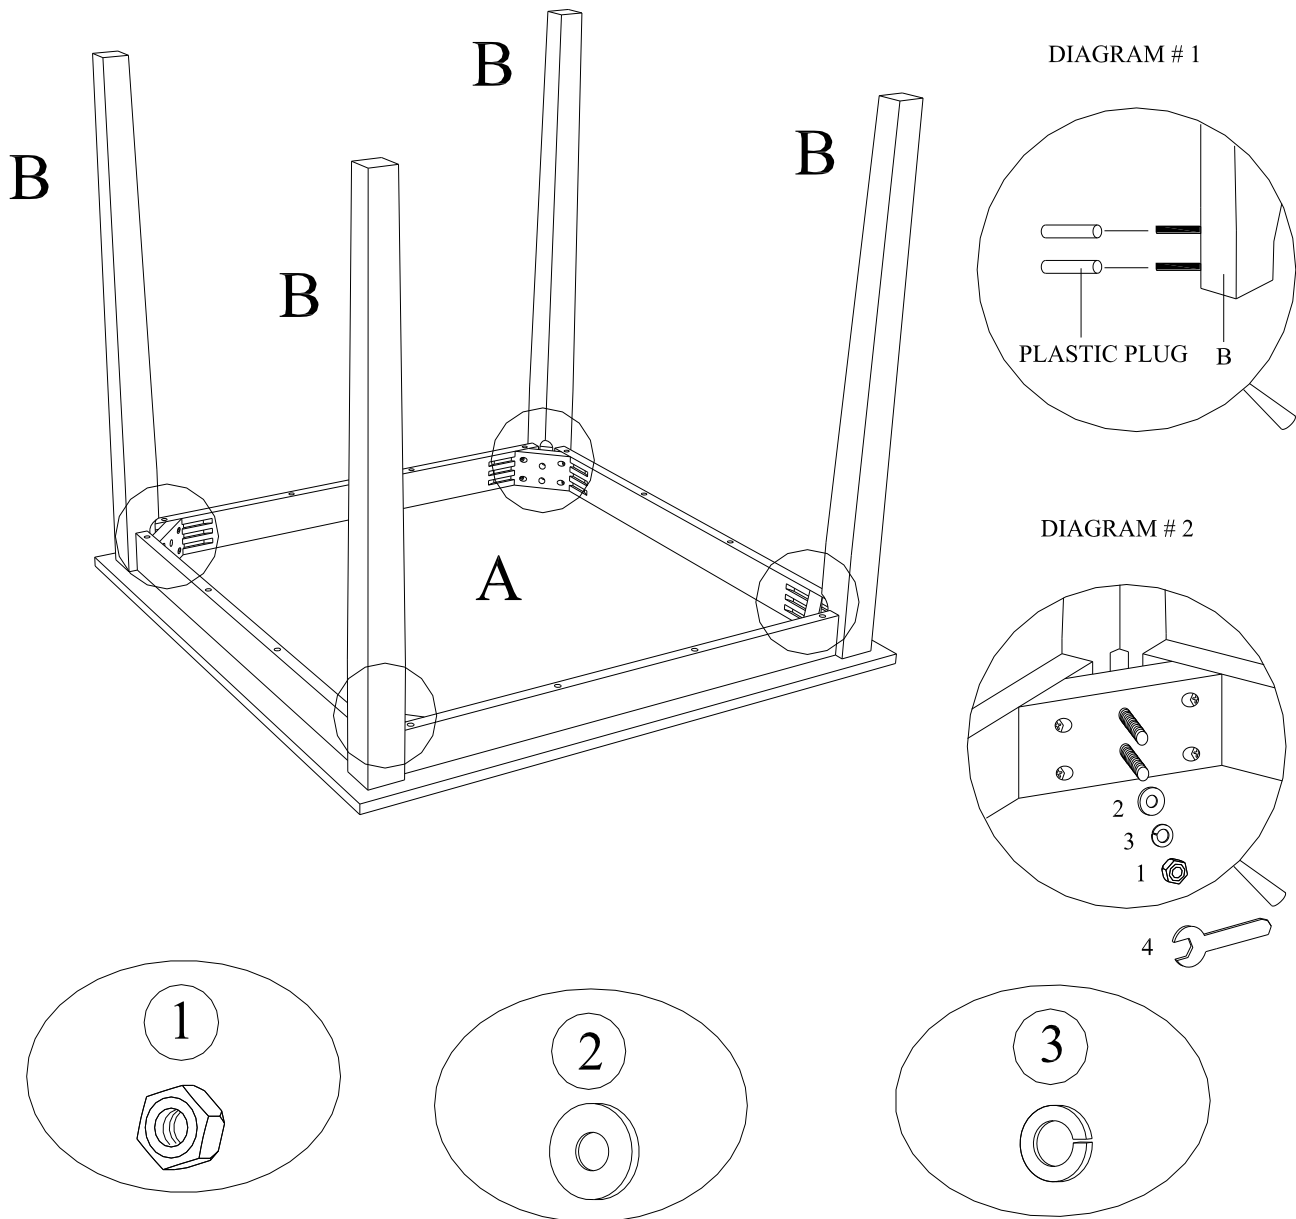


5-PIECE DINING SET

DA2908

STEP 2

Attach seat frame (G) to back frame (C) with short bolts (6), long bolts (5), spring washers (3) and flat washers (2) as shown. Do not fully tighten the bolts in this step.

Note: Seat frame (G) has holes on each side. These holes are to attached the seat board (F) in the in the next step. Ensure that the wider end of the holes face down towards the ground.

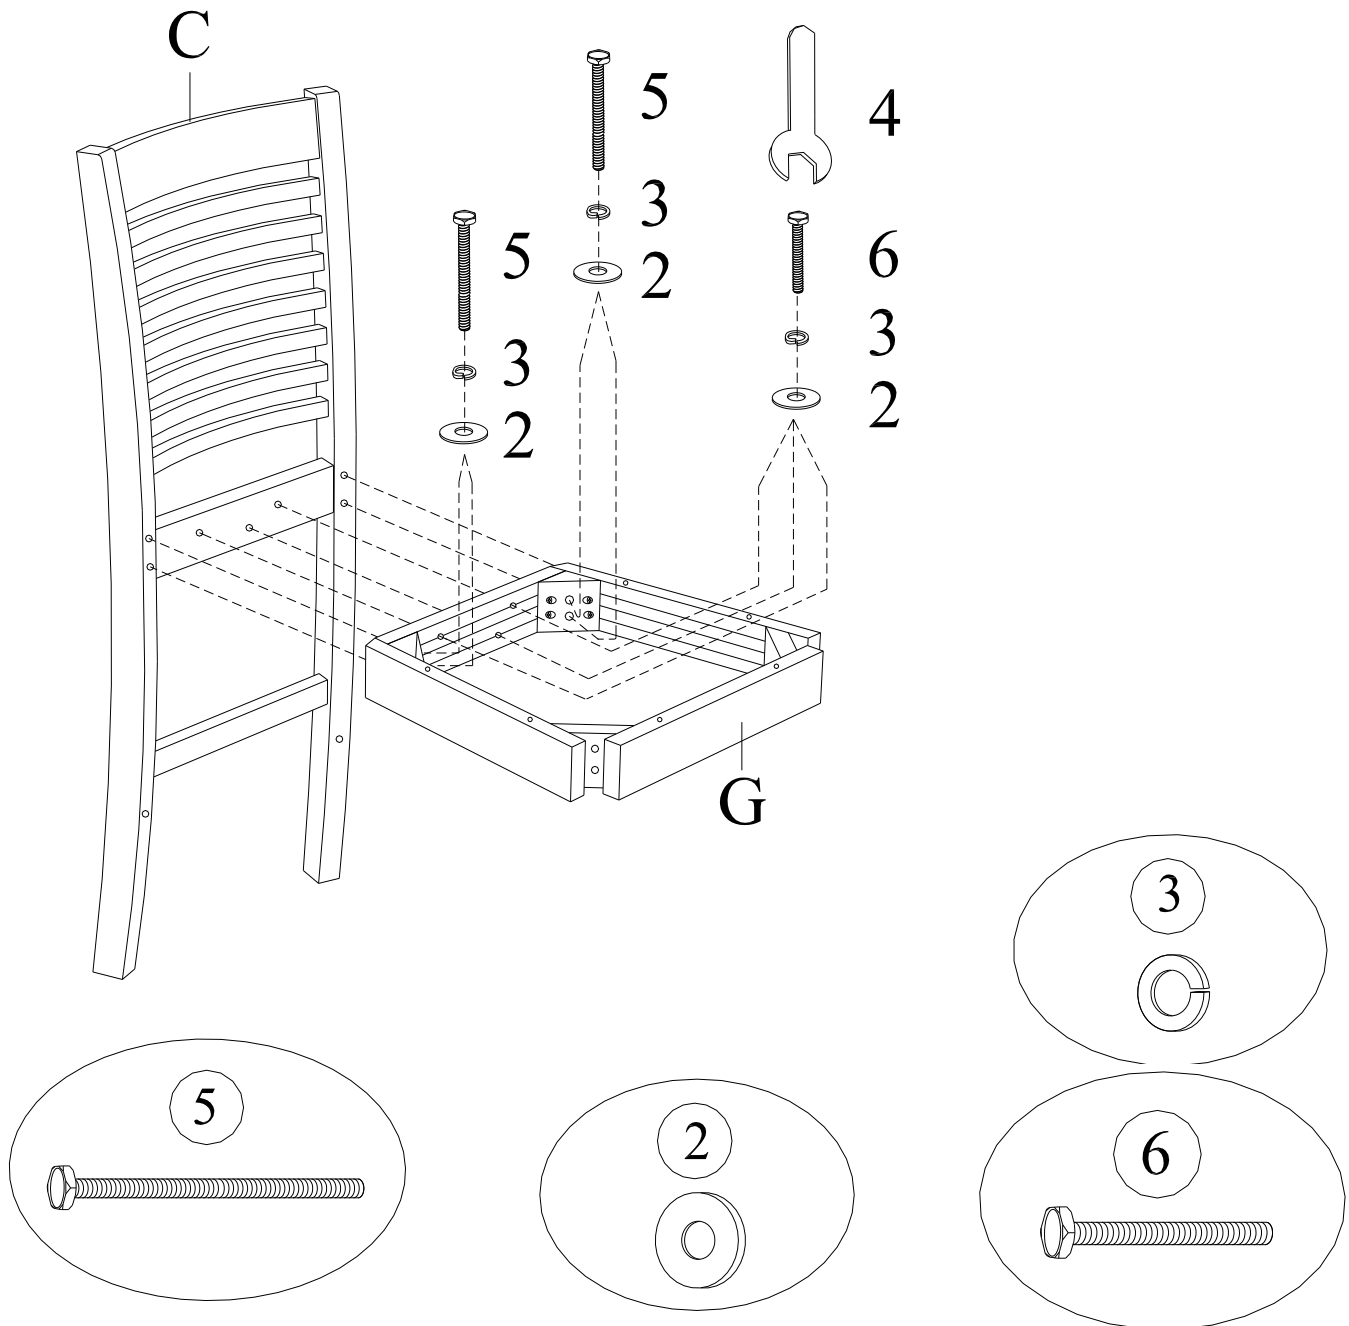


5-PIECE DINING SET

DA2908

STEP 3

Place seat board (F) upside down on a clean smooth surface.

Attach the assembled chair frame to seat board (F) with wood screws (7) using a Phillips head screw driver (not included).

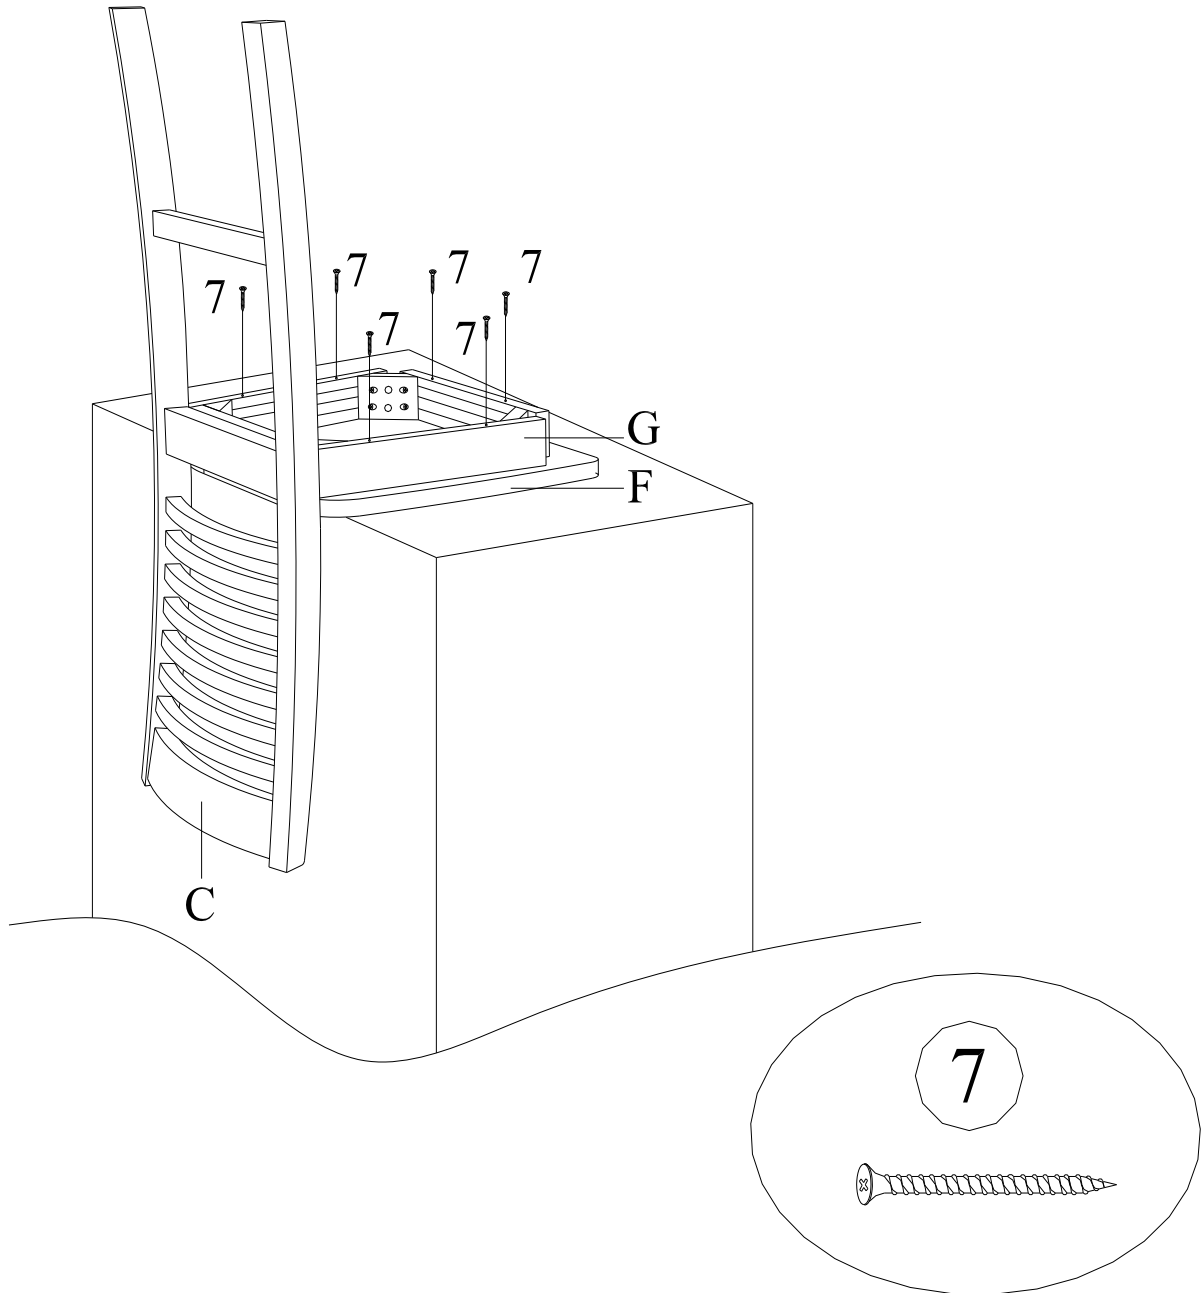

5-PIECE DINING SET DA2908

STEP 4

Attach chair left and right front legs (E&D) to chair seat frame (G) with flat washers (2), spring washers (3), and nuts (1). Do not fully tighten nuts (1).


Insert the chair front crossbar (J) to the front chair legs (E & D) as shown.

Insert side crossbars (H & I) to the front left and right chair legs (E&D) and chair back frame (C).

NOTE: The small holes on all crossbars must face towards the ground (when the chair is in the normal use position).

Tighten all nuts previously installed with wrench (4).


Secure the front crossbar (J) and side crossbars (I&H) to chair legs with wood screws (7) as shown below. Repeat Steps 2-4 to assemble the remaining chairs.

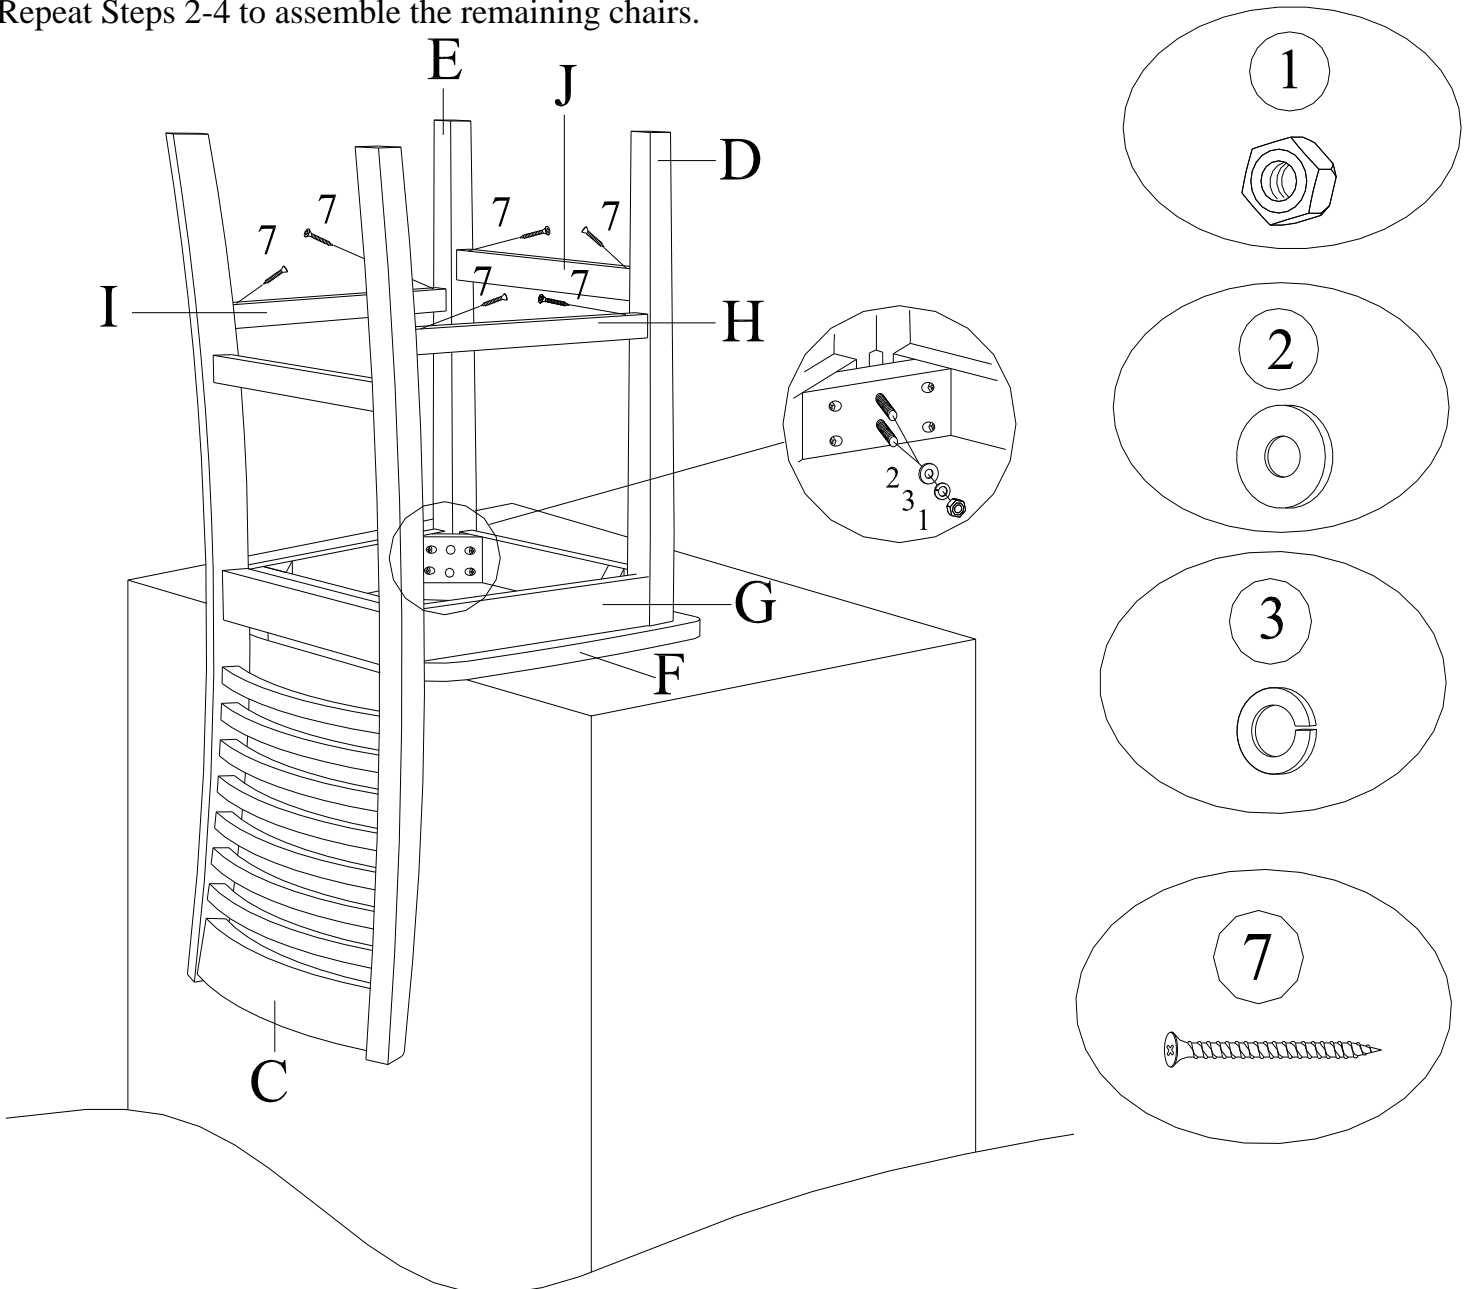

5-PIECE DINING SET DA2908



CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

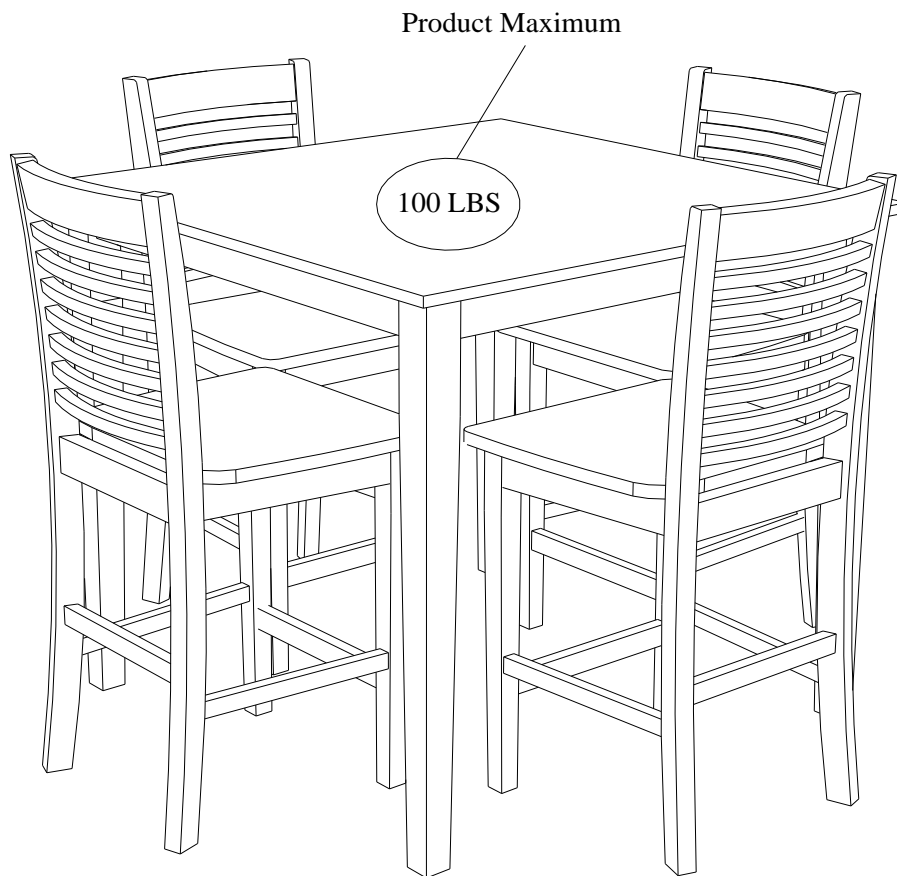

That's it ! You've finished assembling your dining set .

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

MODEL #: DA2908

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Customer Service Fax Number 514-353-7819

Email: das@dorel.com

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1