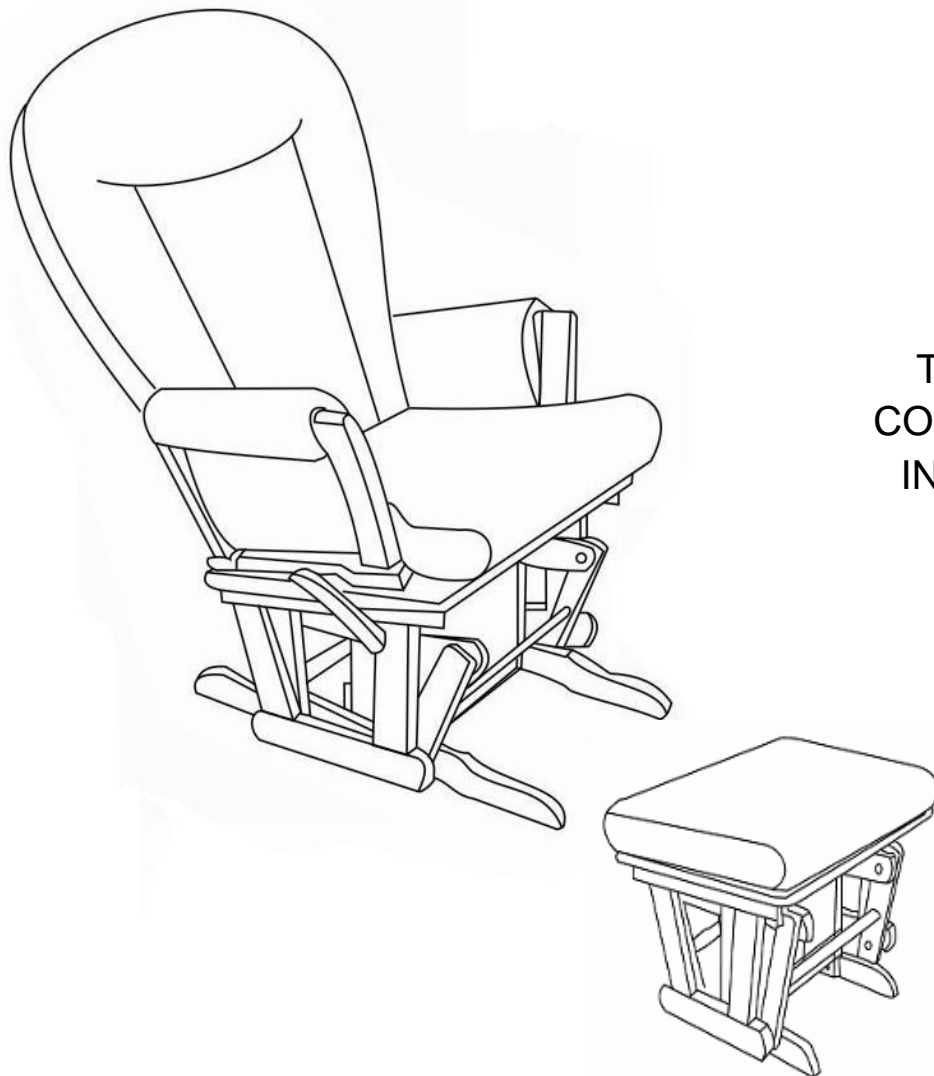


DOREL ASIA

GLIDER ROCKER

Model No:
BCF3085R

UPC CODE:
0-65857-15412-2



NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ
AND KEEP FOR FUTURE
REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada H1G 3L1**

E-MAIL: das@dorel.com

NOTES:

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on soft, smooth surface to prevent damage to product finish.
- * **DO NOT** use power tools.
- * CAUTION: Adult assembly required.
- * Assembly will require two people.
- * Estimated assembly time: 20 minutes

CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

DOREL ASIA LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

 
 

 

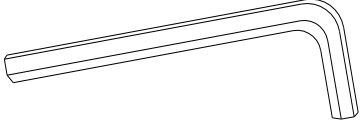


WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

GLIDER ROCKER

BCF3085R

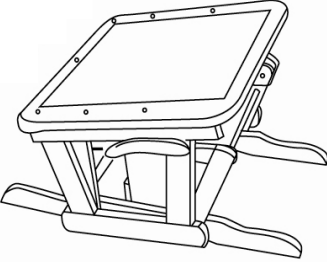
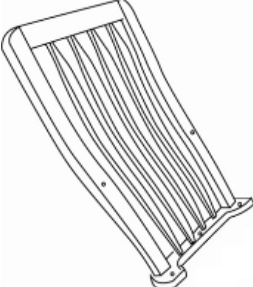
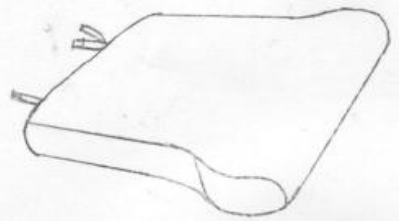
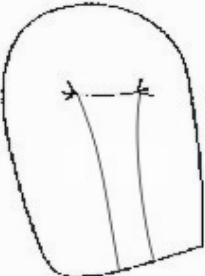
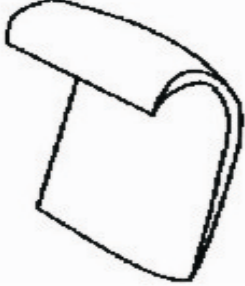
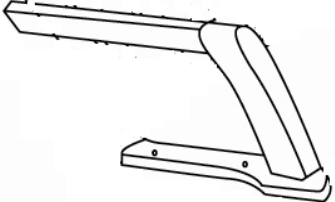
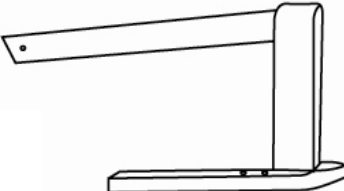

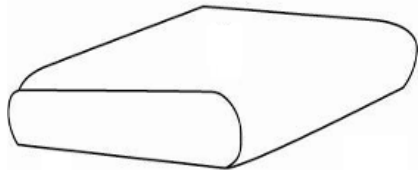
HARDWARE LIST

1	 <p>Φ1/4" x 63MM</p>	2	 <p>Φ1/4" x 35MM</p>
LONG BOLT 2 PCS		SHORT BOLT 7 PCS	
3	 <p>Φ1/4" x 10MM</p>	4	 <p>Φ1/4" x 12MM</p>
SPRING WASHER 9 PCS		FLAT WASHER 9 PCS	
5	 <p>Φ1/4" X 13MM</p>	6	 <p>4MM</p>
NUT 2 PCS		ALLEN KEY 1 PC	

GLIDER ROCKER

BCF3085R

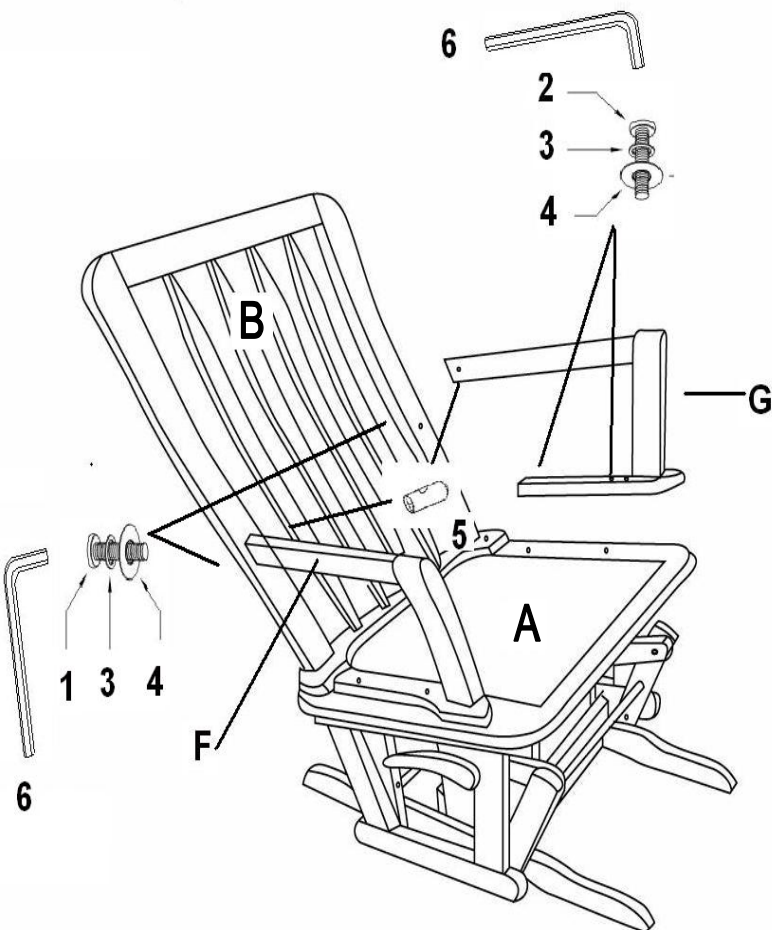
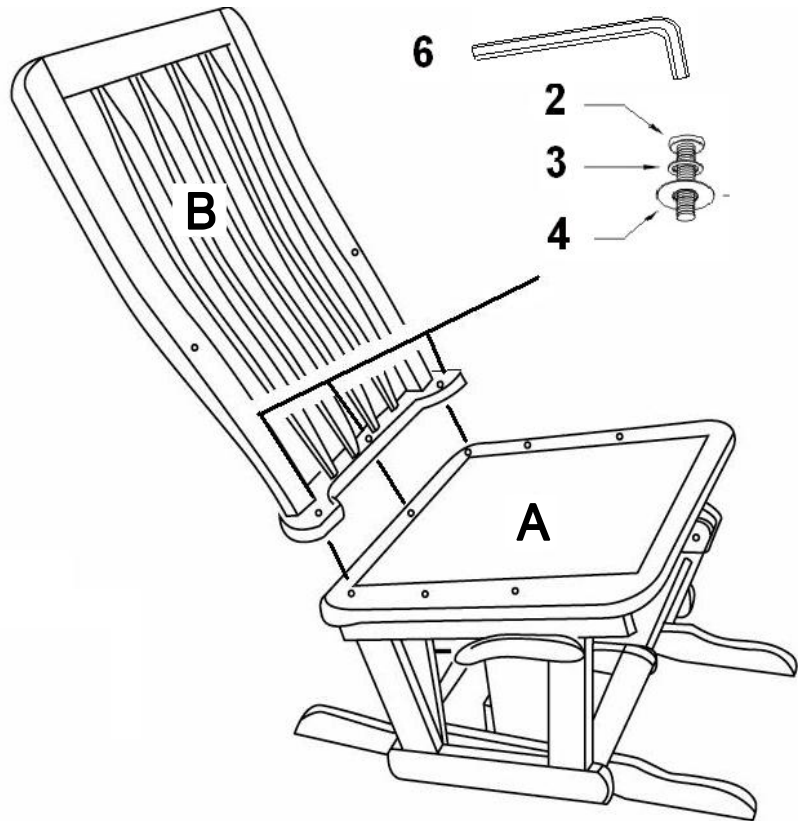
PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 
<p style="text-align: center;">BASE 1 PC</p>	<p style="text-align: center;">BACK FRAME 1 PC</p>	<p style="text-align: center;">SEAT CUSHION 1 PC</p>
<p>D</p> 	<p>E</p> 	<p>F</p> 
<p style="text-align: center;">BACK CUSHION 1 PC</p>	<p style="text-align: center;">ARM CUSHION 2 PCS</p>	<p style="text-align: center;">RIGHT ARMREST 1 PC</p>
<p>G</p> 	<p>H</p> 	<p>I</p> 
<p style="text-align: center;">LEFT ARMREST 1 PC</p>	<p style="text-align: center;">OTTOMAN 1 PC</p>	<p style="text-align: center;">OTTOMAN CUSHION 1 PC</p>

GLIDER ROCKER BCF3085R

STEP 1

Attach back frame (B) to base (A) with short bolts (2), flat washers (4) and spring washers (3). Use Allen Key (6) to tighten short bolts (2).



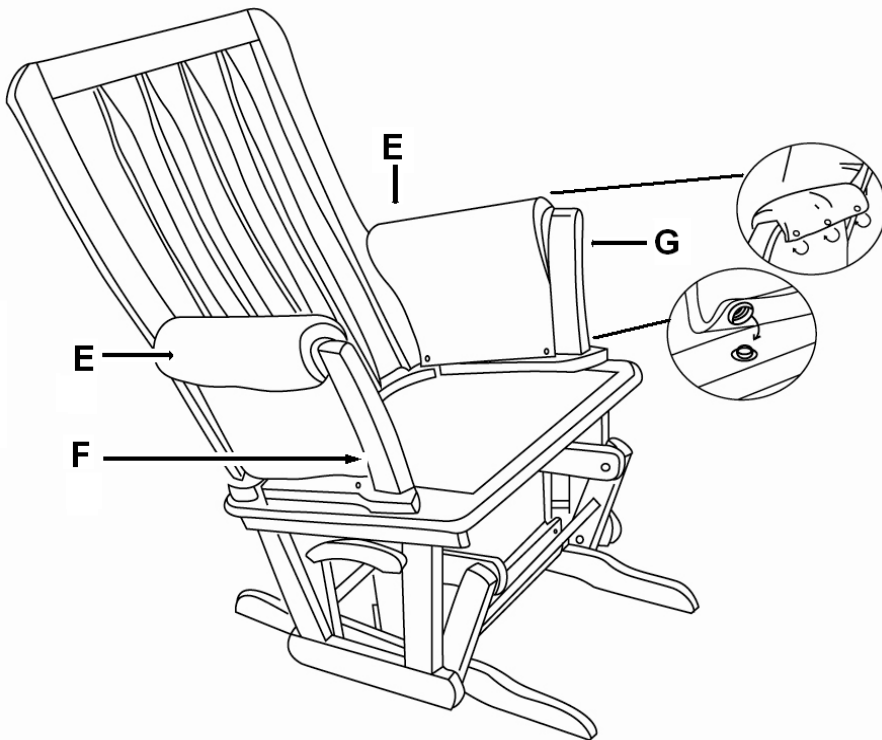
STEP 2

Attach the right armrest (F) and left armrest (G) to base (A) with short bolts (2), flat washers (4), spring washers (3).

Use Allen Key (6) to tighten the short bolts (2).

Attach right armrest (F) and left armrest (G) to back frame (B) with long bolts (1), flat washers (4), spring washers (3) and nuts (5). Use Allen Key (6) to tighten long bolts (1).

GLIDER ROCKER BCF3085R

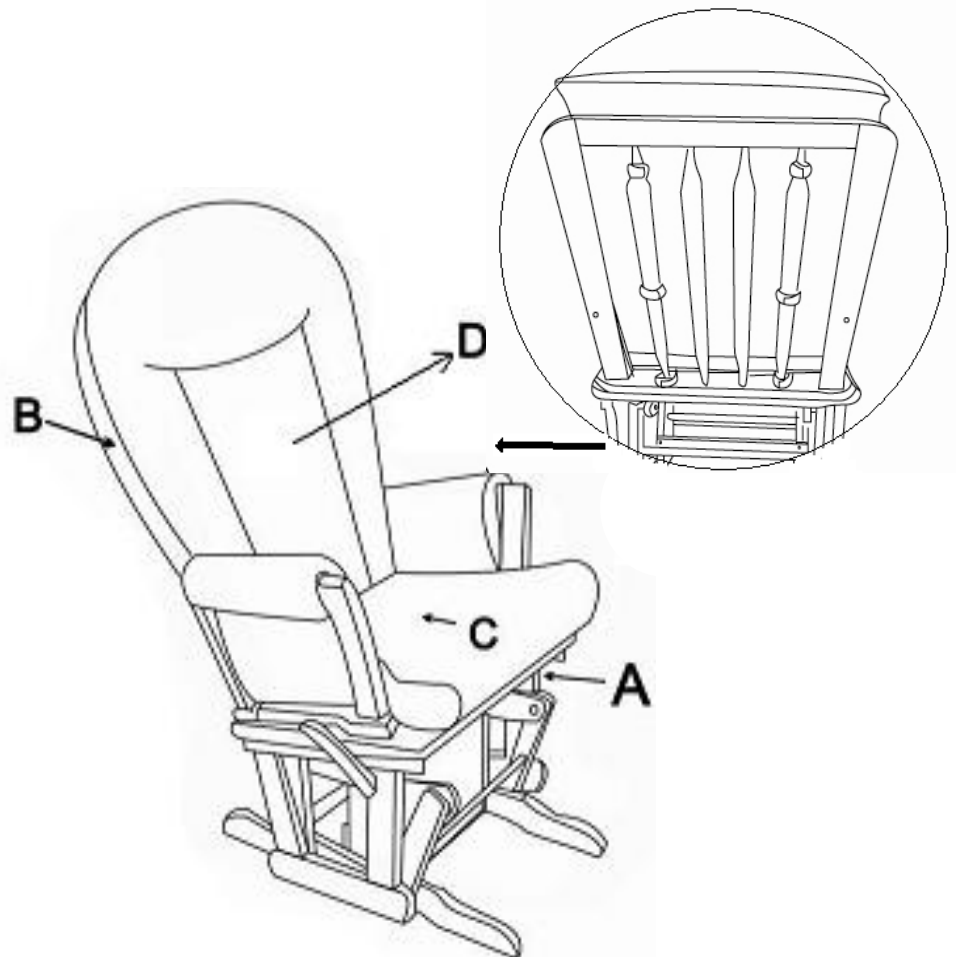


STEP 3

Attach arm cushions (E) to right armrest (F) and left armrest (G) by buttoning the snaps along the interior seat and on the outsides of arms as shown.

STEP 4

Place seat cushion (C) to base (A) and back cushion (D) to back frame (B).

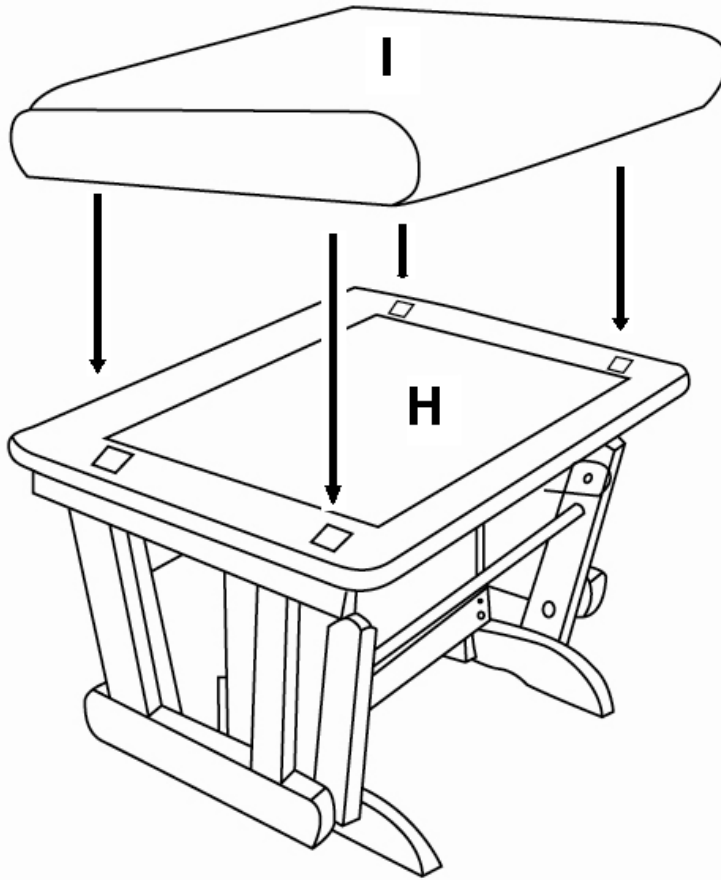


GLIDER ROCKER

BCF3085R

STEP 5

Attach ottoman cushion (I) to ottoman (H).



GLIDER ROCKER BCF3085R

DO NOT sit on the edge of the seat, armrests or on the backrest as this could cause the chair to tip over.



DO NOT leave children unattended on or beside the chair.

DO NOT use the chair as a step stool.

That's it ! You've finished assembling your glider rocker.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980 Customer Service Fax Number 514-353-7819	Email: das@dorel.com
------------------------------------------------------------------------------------------	----------------------

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:

(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)