


DOREL ASIA

GLIDER ROCKER

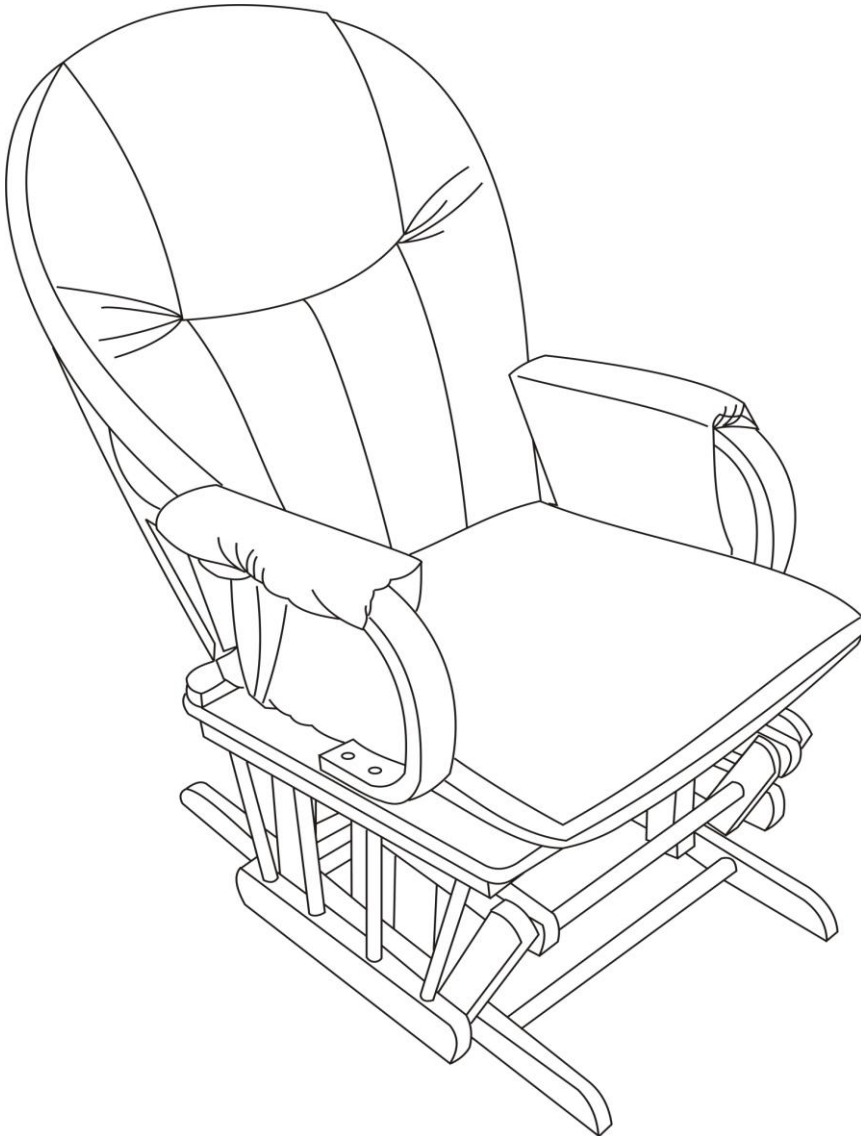

MODEL NO:

WM3846ECOM Espresso
WM3846NCOM Natural
WM3846CCOM Cherry

UPC CODE

0-65857-15753-6 Espresso
0-65857-15754-3 Natural
0-65857-15755-0 Cherry

NOTE:
THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE READ
AND KEEP FOR FUTURE REFERENCE.

Lot number:
(TAKEN FROM CARTON)

Date of purchase:

____ / ____ / ____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100**

Montreal, Quebec

Canada H1G 3L1

E-MAIL: das@dorel.com



WARNING

DO NOT leave children unattended on or beside the chair .

DO NOT use your chair as a step stool.

DO NOT sit on the edge of the seat, armrests or on the backrest as this could make the chair tip over.

NOTES

- * Ensure that all parts and components are present before beginning assembly.
- * Assembly may require two people.
- * Assemble on soft surfaces to prevent damage to the product finish.
- * Read all instructions completely before assembly.
- * Phillips head screwdriver is not included
- * Do not use power tools.
- * CAUTION: Adult assembly required.
- * Cushions must not be machine washed. Dry clean only.
- * Estimated assembly time: 20 minutes

CARE AND CLEANING

Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.






WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.





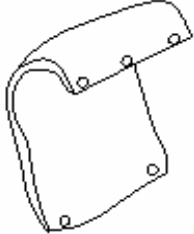

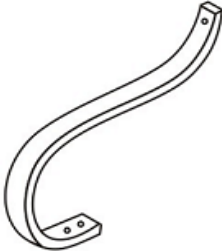
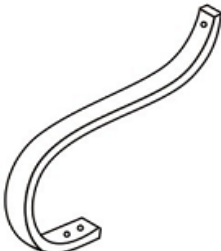
GLIDER ROCKER

WM3846E COM / WM3846N COM / WM3846C COM

HARDWARE LIST

<p>1</p>  <p>Ø1/4" x 1-3/8"</p>	<p>2</p>  <p>Ø1/4" x 1/2"</p>	<p>3</p>  <p>4MM</p>
<p>HEX SOCKET HEAD BOLT 8 PCS</p>	<p>SPRING WASHER 8 PCS</p>	<p>ALLEN KEY 1 PC</p>

PARTS LIST
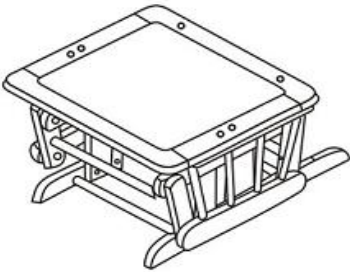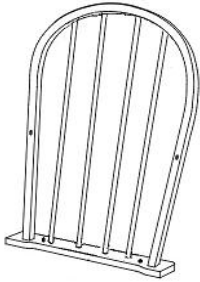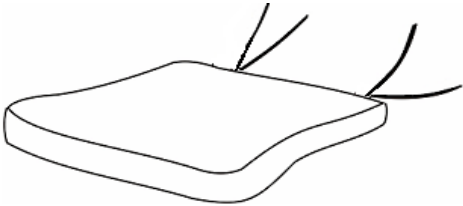
<p>A</p> 	<p>B</p> 	<p>C</p> 
<p>BASE 1 PC</p>	<p>BACK FRAME 1 PC</p>	<p>SEAT CUSHION 1 PC</p>
<p>D</p> 	<p>E</p> 	<p>F</p> 
<p>BACK CUSHION 1 PC</p>	<p>LEFT ARM CUSHION 1 PC</p>	<p>RIGHT ARM CUSHION 1 PC</p>
<p>GL</p> 	<p>GR</p> 	
<p>LEFT ARMREST 1 PC</p>	<p>RIGHT ARMREST 1 PC</p>	

NOTE: Cushions to be dry cleaned only. DO NOT MACHINE WASH.


GLIDER ROCKER

WM3846ECOM / WM3846NCOM / WM3846CCOM

STEP 1

Attach the back frame (B) to the base (A) with hex socket head bolts (1) and spring washers (2). Use Allen key (3) to tighten bolts.

NOTE : Leave bolts loose to facilitate assembly of arms in following steps.

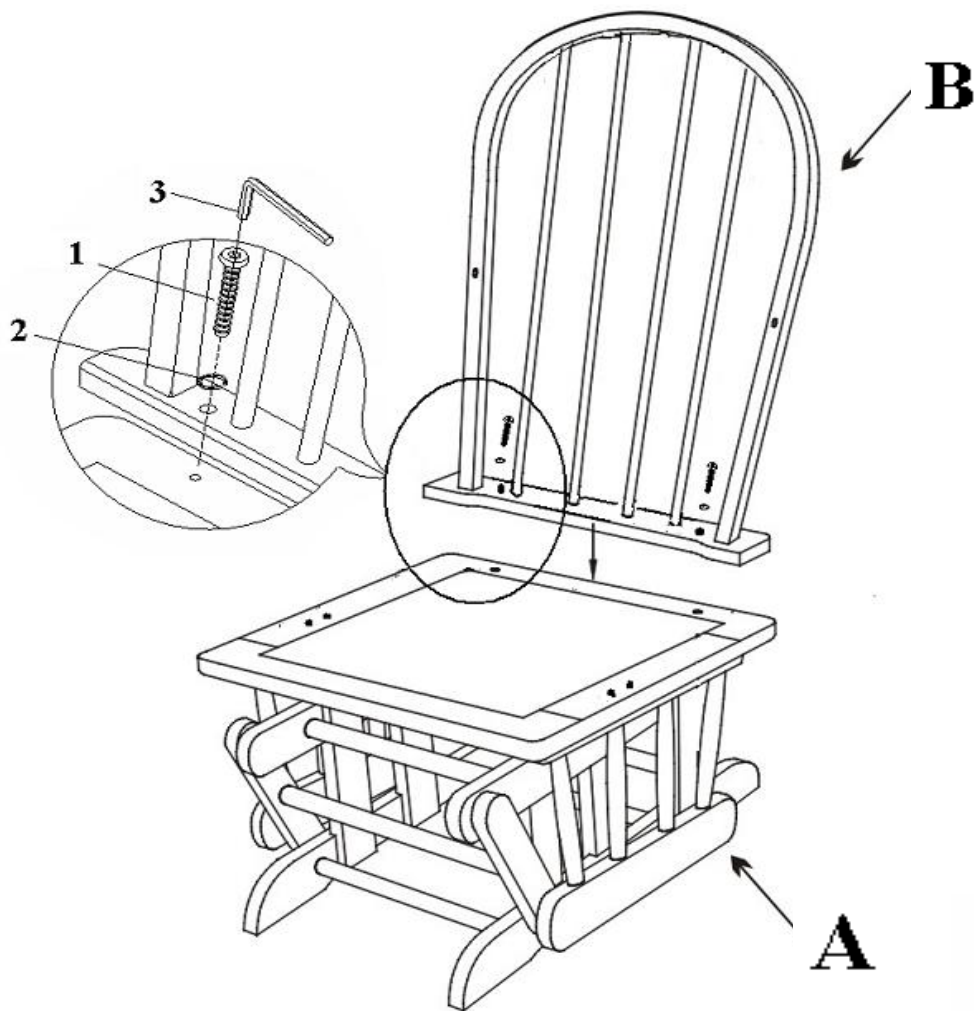

GLIDER ROCKER

WM3846ECOM / WM3846NCOM / WM3846CCOM

STEP 2

Attach the right armrest (GR) to back frame (B) with hex socket head bolts (1) and spring washers (2).


Use Allen key (3) to tighten bolts.

Attach the right armrest (GR) to the base (A) with hex socket head bolts (1) and spring washers (2).

Use Allen key (3) to tighten bolts.

Repeat step 2 to assemble left armrest (GL).

NOTE : Once all bolts have been installed, fully tighten all bolts installed in step 1 and step 2.

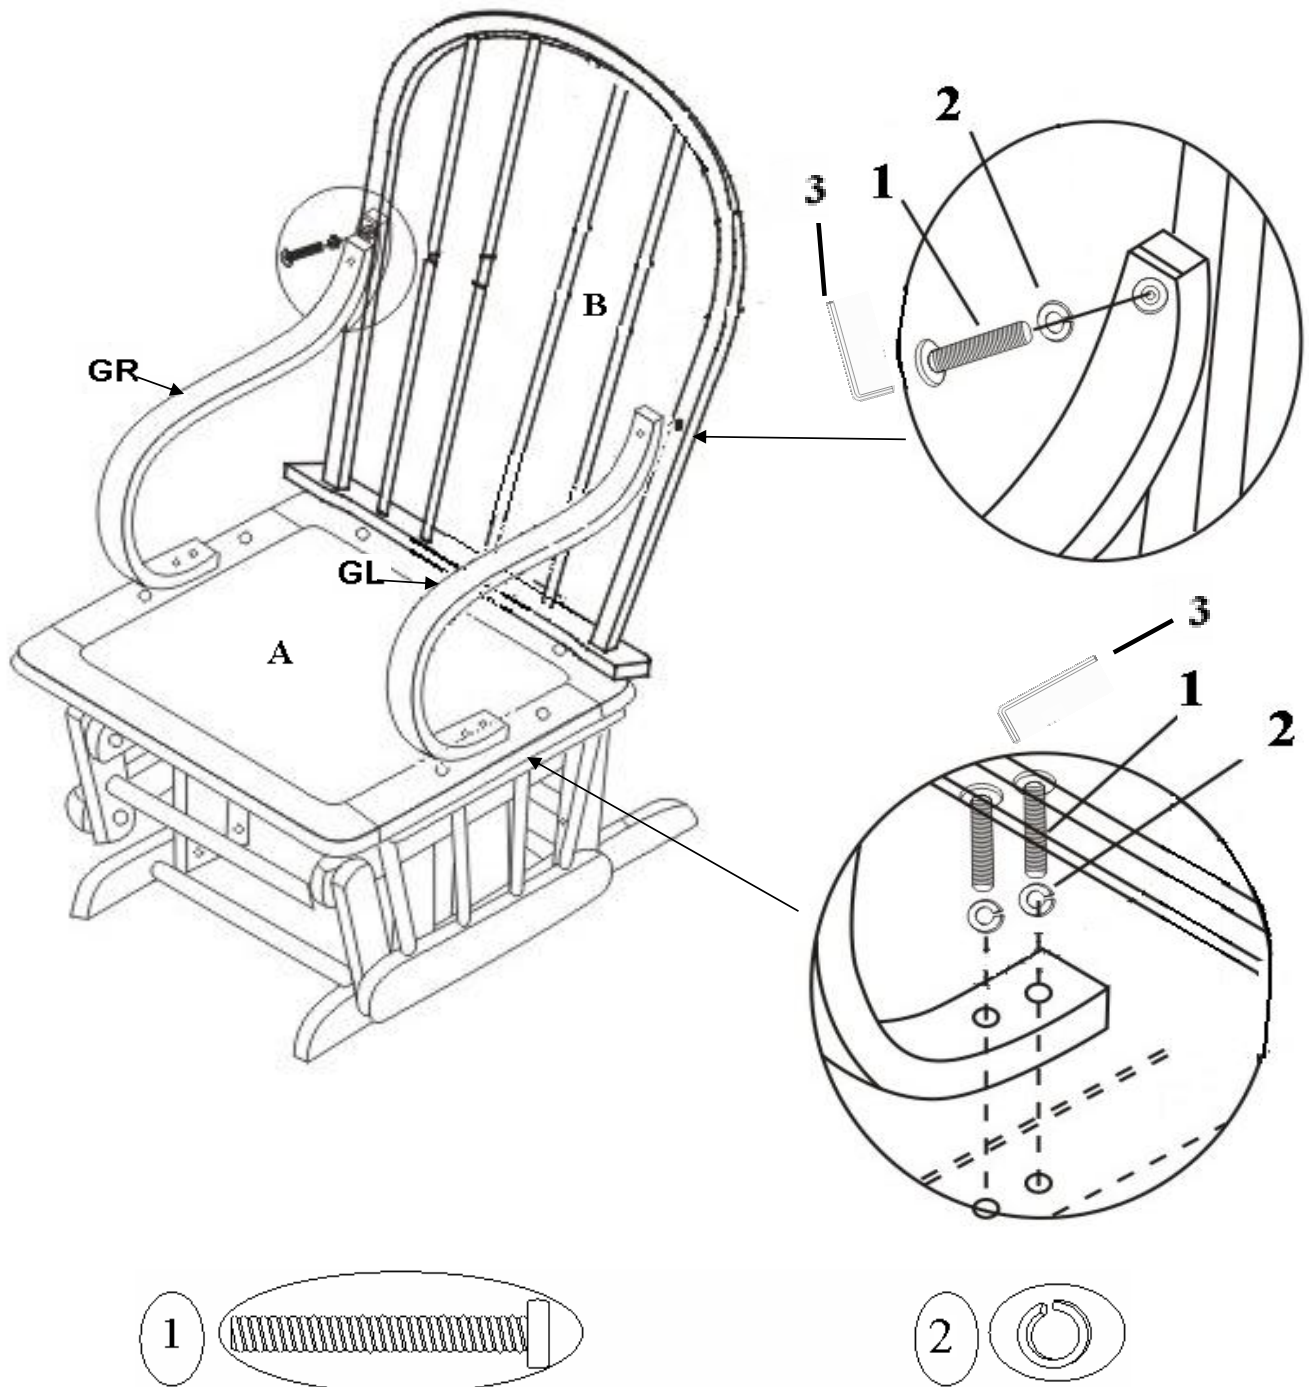

GLIDER ROCKER


WM3846E COM / WM3846N COM / WM3846C COM

STEP 3

Place seat cushion (C) onto base (A).


Attach arm cushions (E and F) to armrests (GR and GL) by snapping the buttons located on base (A) and under armrests (GR and GL).

Tie back cushion (D) to back frame (B).

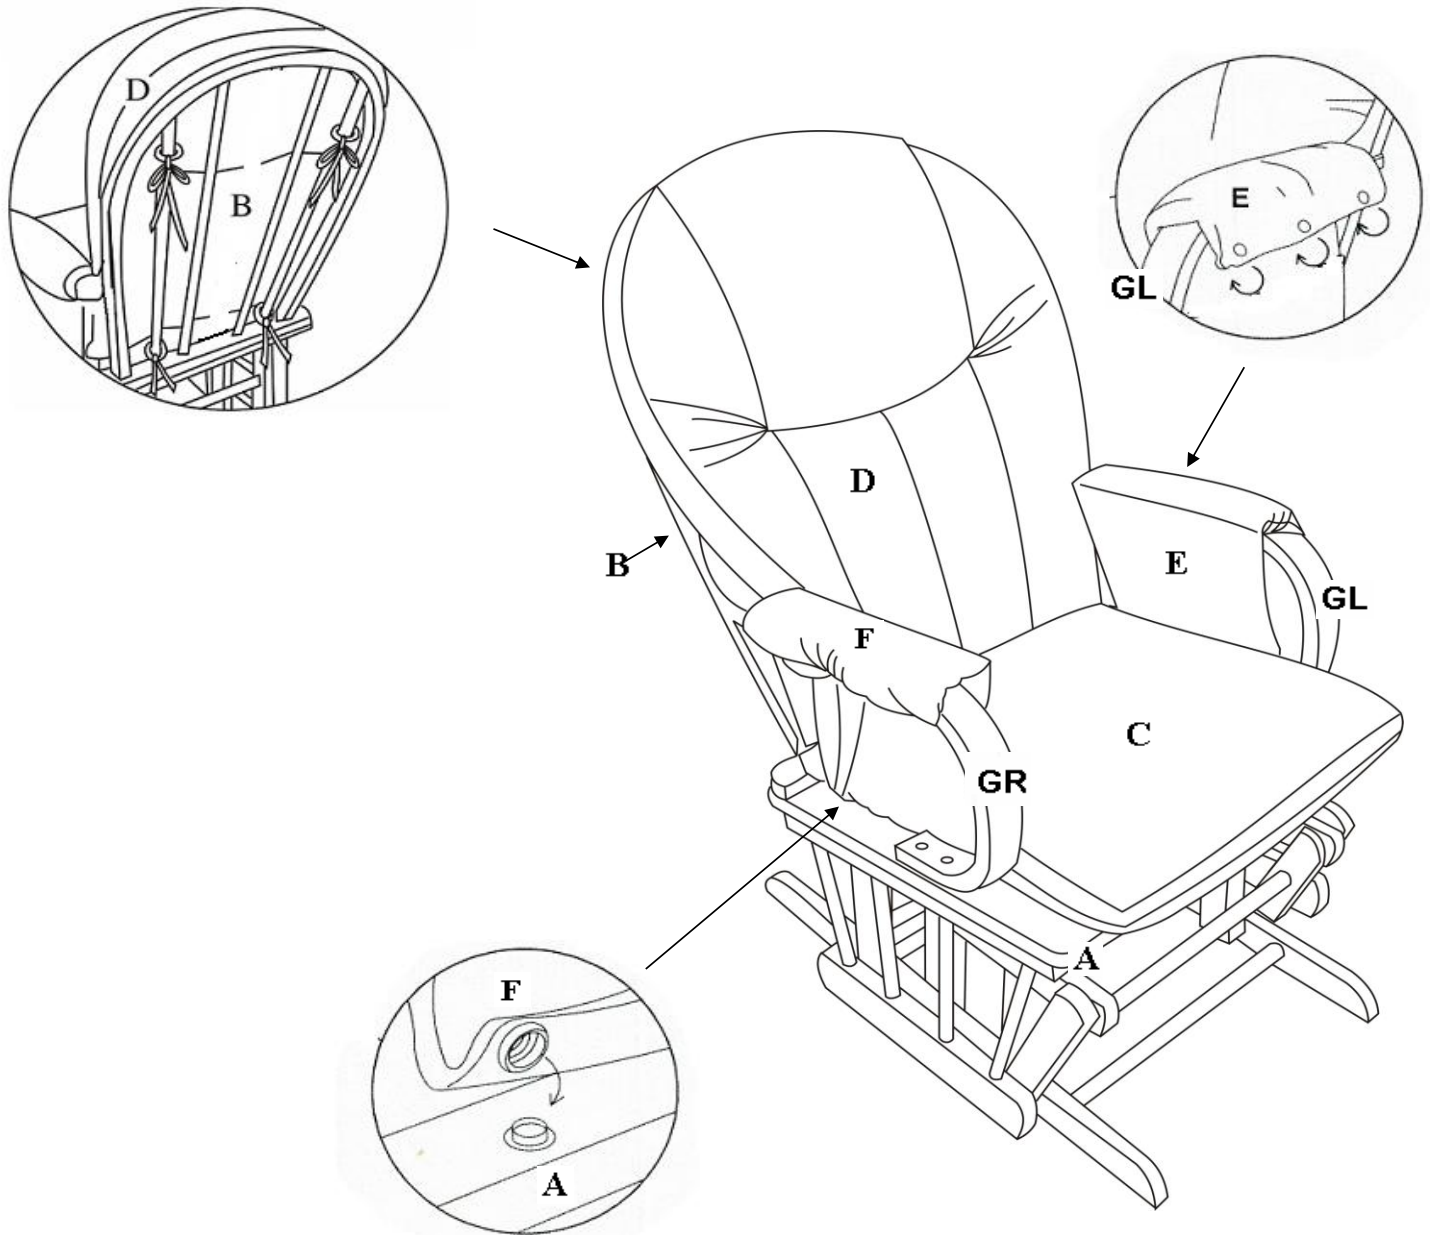

GLIDER ROCKER

WM3846ECOM / WM3846NCOM / WM3846CCOM


 **CAUTION:** This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability or causing possible injury.

DO NOT sit on the edge of the seat, armrests or on the backrest as this could cause the chair to tip over.

DO NOT use the chair as a step stool.

DO NOT leave children unattended on or beside the chair.

Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

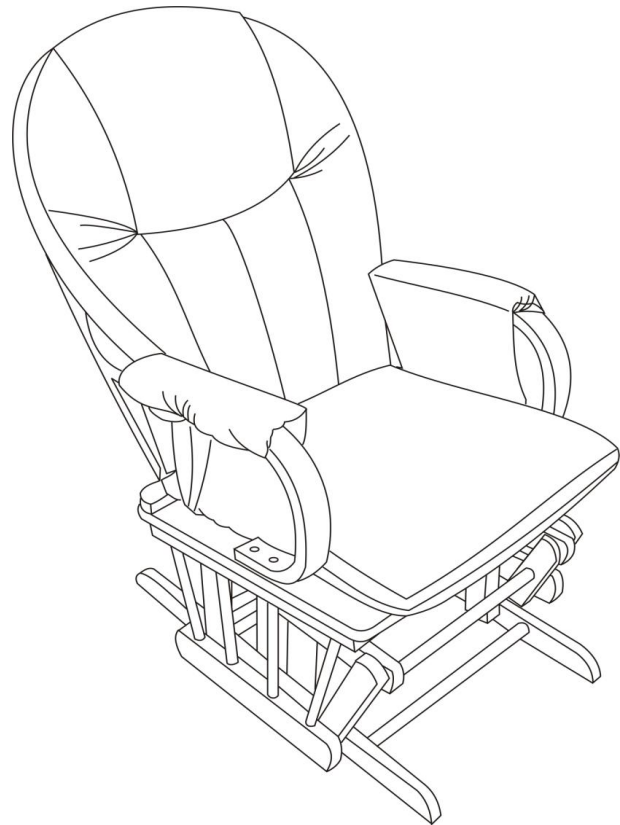

That's it ! You've finished assembling your Glider Rocker.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customerservice department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1