
ZH1825 Club Chair-Grey white linen ZH1825 Club Chair- Oatmeal Linen ZH1825 Club Chair-White linen Assembly Instructions

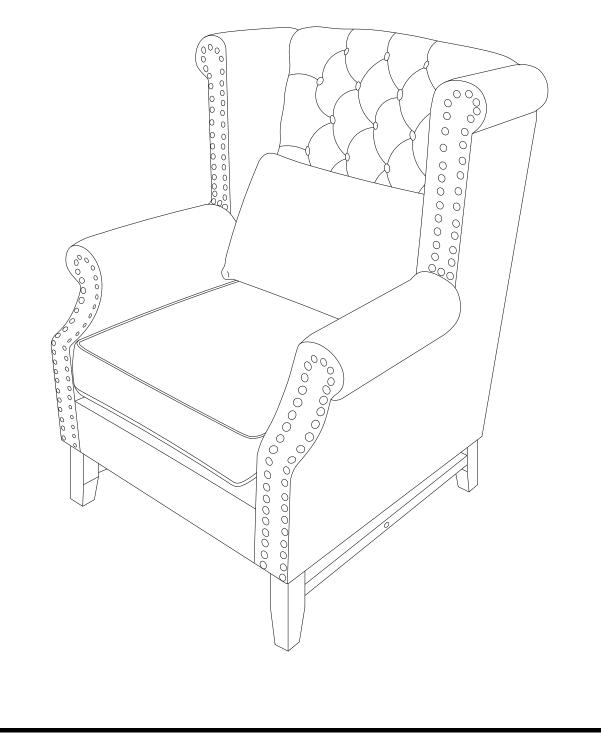

For assistance with assembly contact: Wayfair Customer Service, 877-WAYFAIR (877-929-3247) www.wayfair.com




ZH1825 Club Chair Parts List

Before beginning assembly, separate all parts and carefully study the parts diagrams below. Review all parts and hardware before disposing of any packaging.


You may receive extra hardware with your unit.

Call Customer Service for missing hardware.

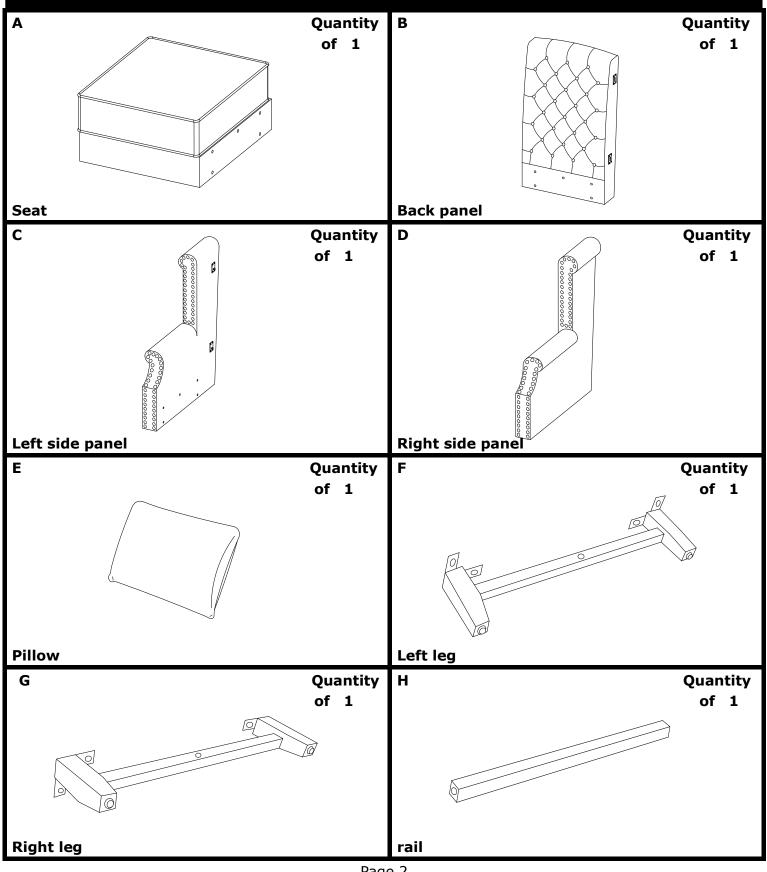

1	Quantity of 8	2	Quantity of 2
Bolt:5/16" * 1" L		Bolt:5/16" * 1-3/8" L	
3	Quantity of 15	4	Quantity of 23
Bolt:5/16" * 2-1/2" L		Spring washers	
5	Quantity of 23	6	Quantity of 2
Flat washers		Wood plugs	
7	Quantity of 1		
Allen wrench			
Care and Cleaning Instructions: Please see care and cleaning label attach of chair seat.	ed to bottom	For replacement parts or questions, pl call Customer Service at 877-WAYFAIR (877-929-3247)	

ZH1825 Club Chair Assembly Instructions

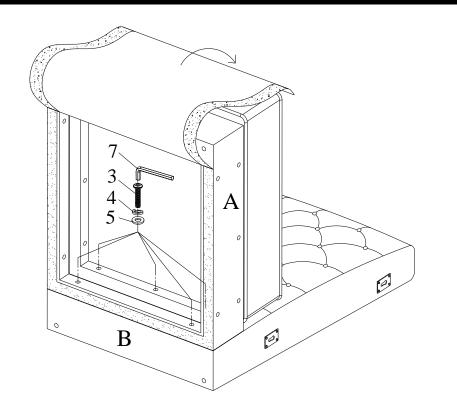


Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Lift the Velcro strip from bottom of the Seat (B).

Attach Seat (Part A) to Back Panel (Part B) by Bolts (3) and Spring washer (4) and flat washer (5), Tighten them by using Allen wrench (7) as shown in Figure 1.

Figure 1

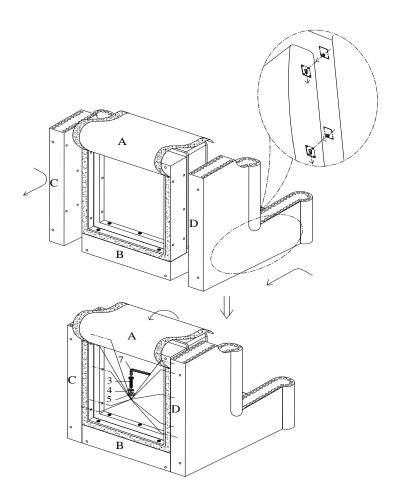

Attached left Side panel (Part C) and right Side panel (D) into Back panel (Part B) by hand as shown. Please make sure male hook on side panel will exactly go into female hook on back panel.

Use Bolts (3) and Spring washer (4) and flat washer (5) to connect left Side panel (Part C) and right Side panel (D) to Seat (Part A), Tighten Blots (3) by using Allen wrench (7) as shown in Figure 3.

Then close Velcro strip on the bottom of Seat (Part A).

Figure 2

