

 
**CX1123 left facing club chair – brown
PU leather**

**CX1123 left facing club chair – black
PU leather**

Assembly Instructions



For assistance with assembly contact:
Wayfair Customer Service,
877-WAYFAIR (877-929-3247)
www.wayfair.com

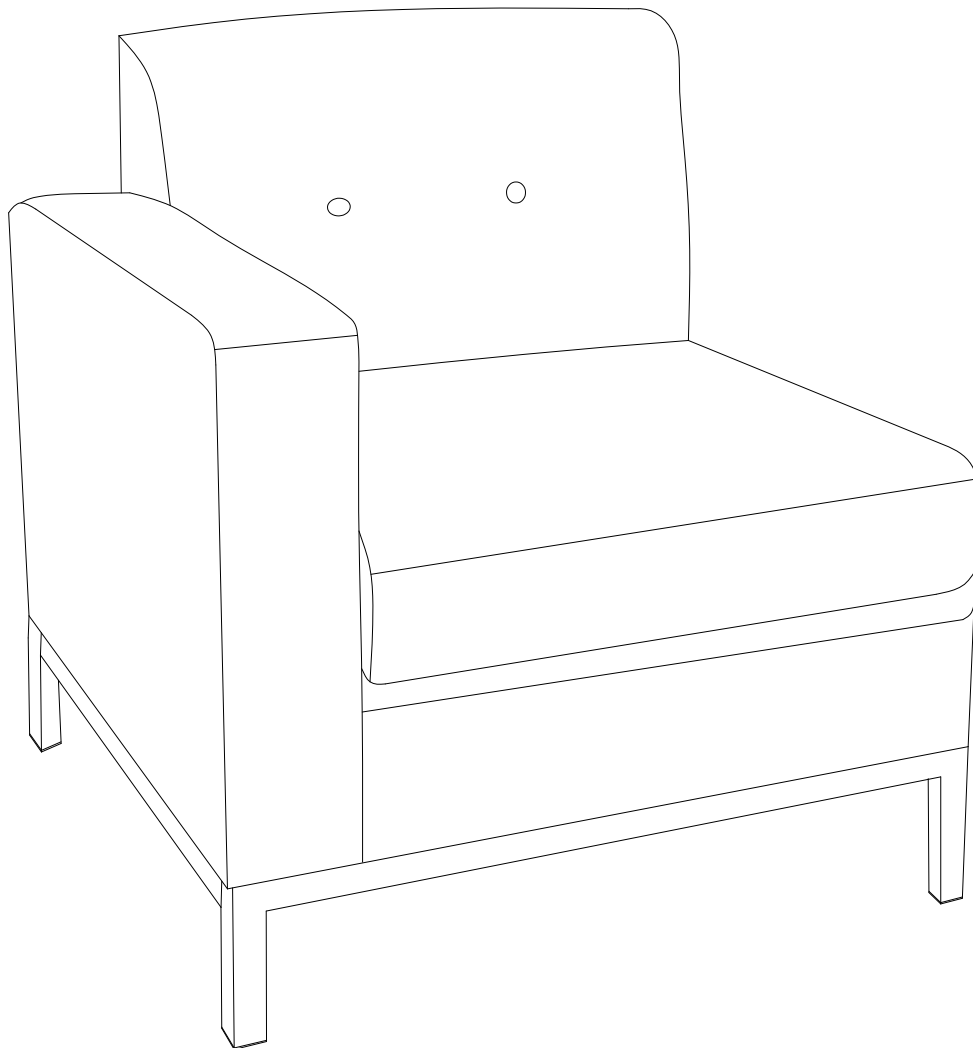

LEFT FACING CLUB CHAIR

Parts List

 
Before beginning assembly, separate all parts and carefully study the parts diagrams below.

Review all parts and hardware before disposing of any packaging.

You may receive extra hardware with your unit.

Call Customer Service for missing hardware.


A

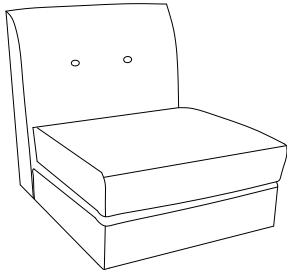

**Quantity
of 1**

Back & Seat

 
B

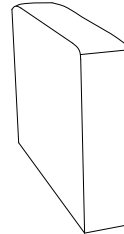

**Quantity
of 1**

Armrest

 
C

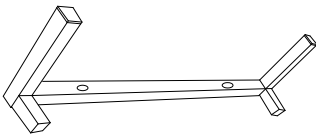

**Quantity
of 2**

Metal Leg

 
D



**Quantity
of 2**

Bottom Rail

 
1



**Quantity
of 6**

Short Bolt Ø 1/4*1-1/2"L

 
2

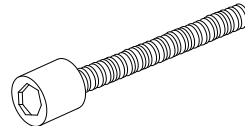

**Quantity
of 5**

Long Bolt Ø 5/16*3-3/4"L

 
3



**Quantity
of 5**

Flat Washer

 
4



**Quantity
of 5**

Spring Washer

 
5



**Quantity
of 1**

Allen Wrench M4

 6



**Quantity
of 1**

Allen Wrench M5

Care and Cleaning Instructions:

Please see care and cleaning label attached to bottom of chair seat.

For replacement parts or questions, please call Customer Service at 877-WAYFAIR (877-929-3247)

LEFT FACING CLUB CHAIR

Assembly Instructions

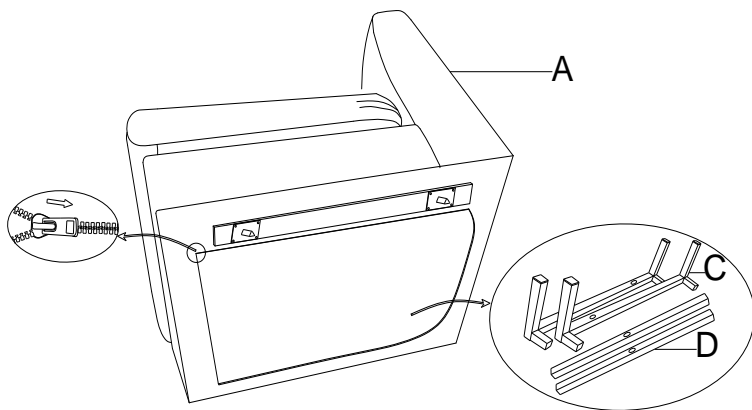 


Figure 1

Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Pull the zipper on bottom of the Back & Seat (**A**).

Then lift the black dust cover from the bottom of the Back & Seat (**A**). Take out 2 legs (**C**) and 2 bottom rails (**D**).

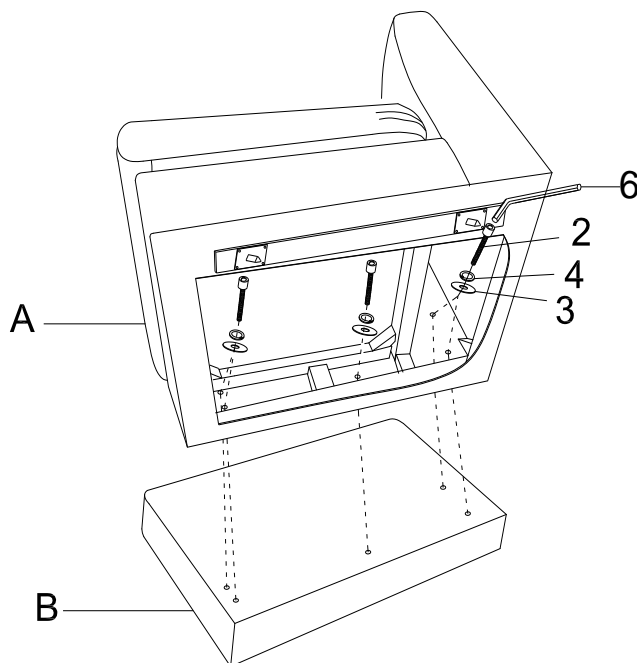 


Figure 2

Attach armrest (**B**) to Back & Seat (**A**) by long bolts (**2**), flat washer (**3**) and spring washer (**4**).

Tighten bolts (**2**) by using Allen wrench M5 (**6**) as shown on Figure 2.

Close the black dust cover. Zip up the bottom of the Back & Seat (**A**).

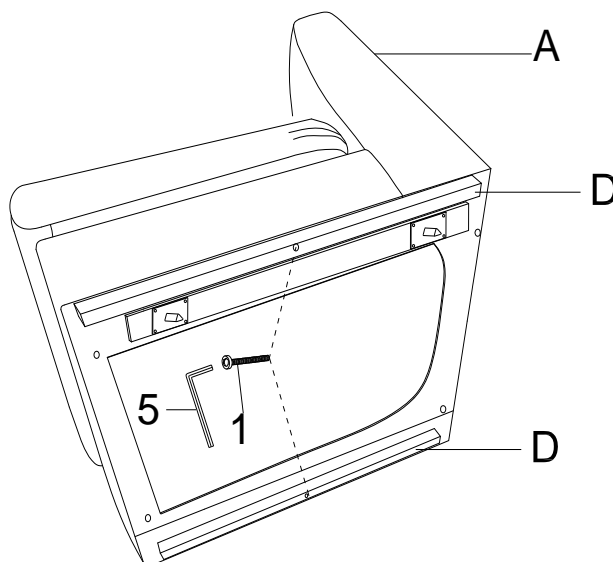 


Figure 3

Attach 2 bottom rails (**D**) to the bottom of Back & Seat (**A**) by short bolts (**1**).

Tighten them by using Allen wrench M4 (**5**) as shown on Figure 3.

Don't tighten them too tight.

LEFT FACING CLUB CHAIR

Assembly Instructions

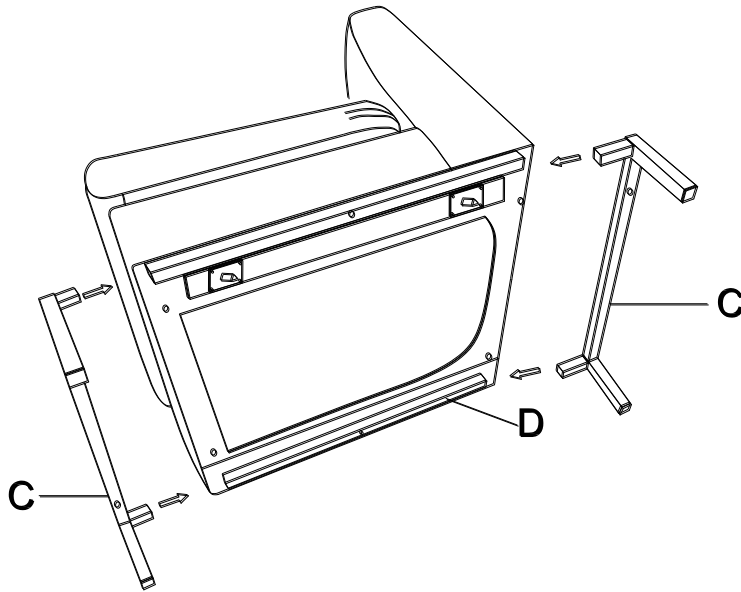 


Figure 4

Insert legs (**C**) into the bottom rails (**D**). Please make sure legs (**C**)'s tenon go into bottom rails (**D**)' end.

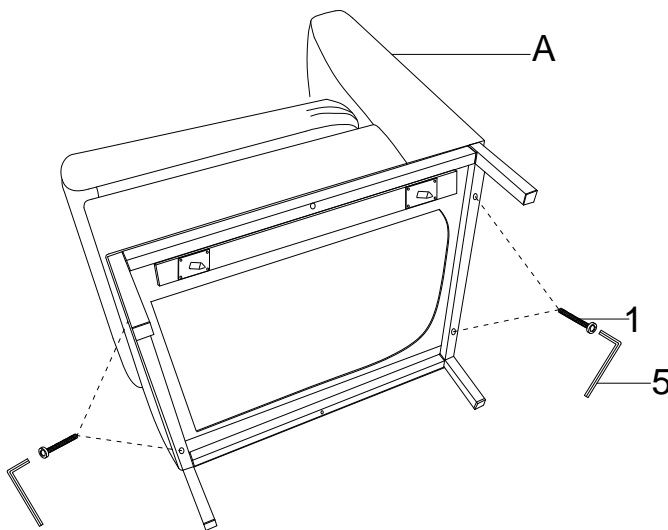 


Figure 5

Use 4 short bolts (1) to connect legs (**C**) to the bottom of Back & Seat (**A**)

Tighten short bolt (1) by using Allen wrench M4 (**5**) as shown on Figure 5.

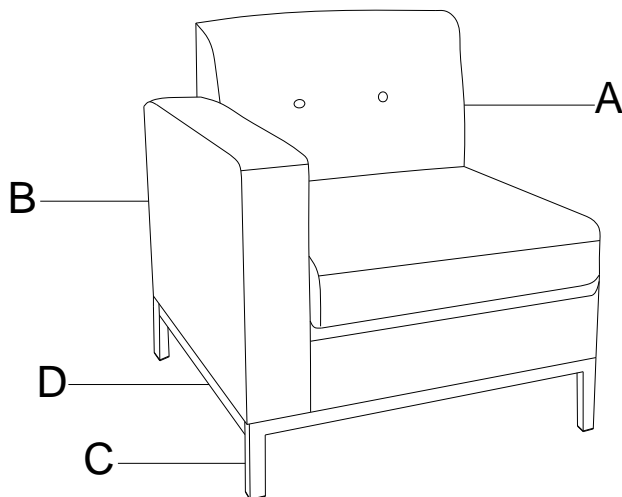 


Figure 6

Tighten all bolts.

Turn over the chair.

Now your chair is ready to use!

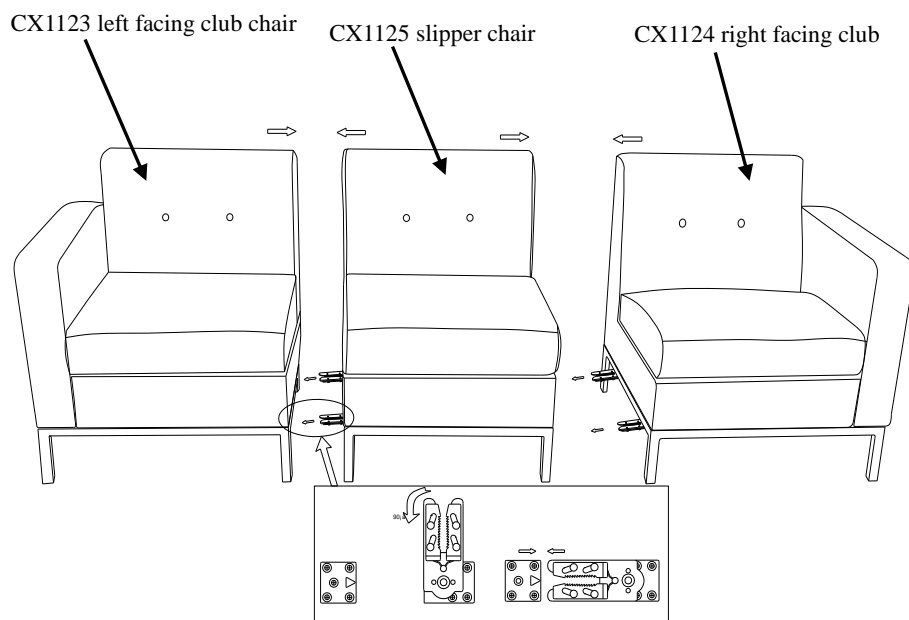 


Figure 7

When you need to assemble CX1123 left facing club chair and CX1124 right facing club and CX1125 slipper chair

Please swirl the connector on bottom of CX1124/ CX1125 firstly, then you can put CX1123/ CX1124/ CX1125 together as shown in Figure 7.

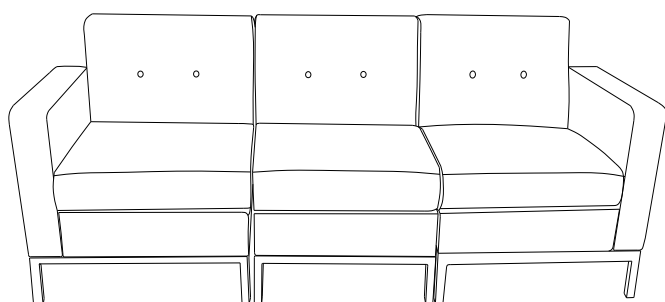 


Figure 8

Now your CX1123/ CX1124/ CX1125 whole set chair is ready to use!