


Product Instructions for:

DD1337-4-ESO/DD1337-5-RED/DD1337-6-WHT Parsons Dining Chair

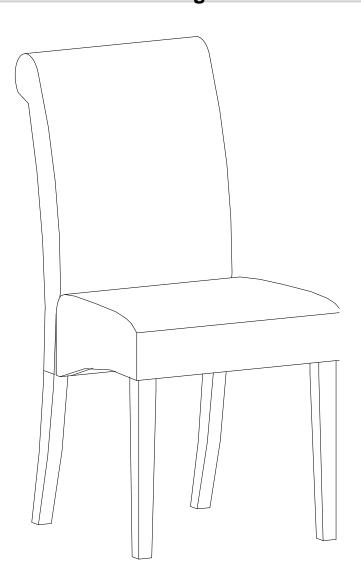


DD1337-4-ESO/DD1337-5-RED/DD1337-6-WHT Parsons Dining Chair

Before beginning assembly, separate all parts and carefully study the parts diagrams below. Review all parts and hardware before disposing of any packaging. You may receive extra hardware with your unit. Call Customer Service for missing hardware.

| Parts List | |
|----------------------------------|---------------------------------|
| A:Back Panel (1) | B: Seat (1) |
| | |
| C:Front Leg (2) | |
| | |
| 1: Short Bolt Ø 5/16*1-3/4"L (5) | 2: Long Bolt Ø 5/16*2-1/8"L (4) |
| | |
| 3: Flat Washer (9) | 4: Spring Washer (9) |
| | |
| 5: Allen Wrench (1) | |
| | |
| | |

DD1337-4-ESO/DD1337-5-RED/DD1337-6-WHT Parsons Dining Chair

Assembly Instructions

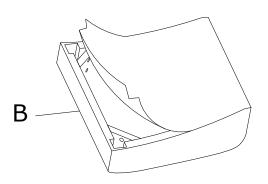


Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.

Step 1

Lift the Velcro strip from the bottom of the Seat (B).

Figure 1

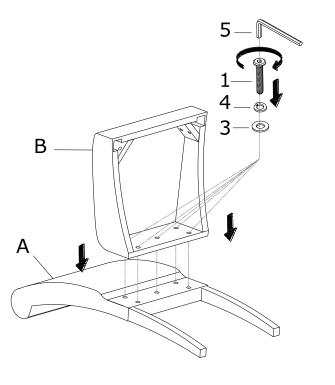


Step 2

Connect Seat (B) to Back Panel (A) with Short Bolts (1), Spring Washer (4) and Flat Washer (3).

Tighten Bolt with Allen Wrench (5) as shown in Figure 2.


Figure 2

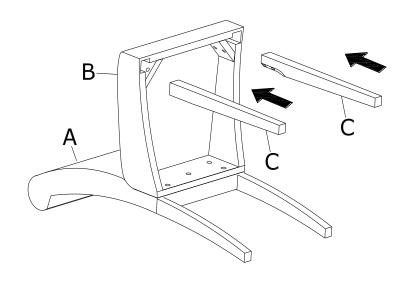

Step 3

Insert the Front Leg (C) into the Seat (B) as shown in Figure 3.

Figure 3

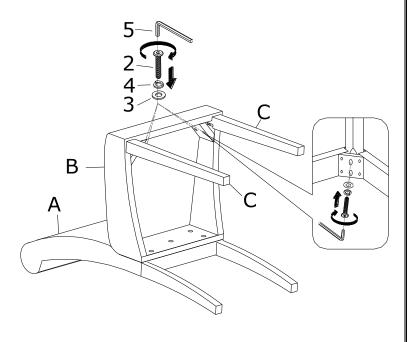


Step 4

Connect Front Leg (C) to Seat (B) with Long Bolt (2), Spring Washer (4) and Flat Washer (3).

Tighten Bolt with Allen Wrench (5) as shown in Figure 4.


Figure 4

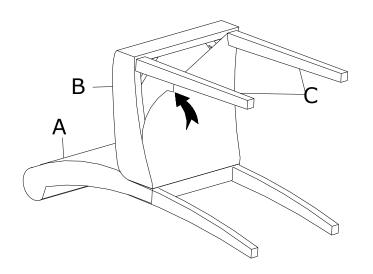

Step 5

Close the Velcro strip from the bottom of the Seat (B)

Figure 5

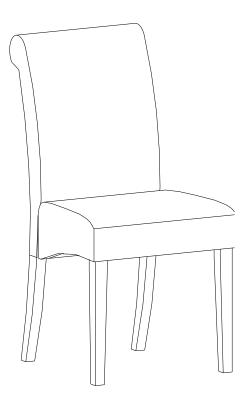

Step 6

Recheck all bolts are securely tightened.

Turn over the dining chair.

Now your Parsons Dining Chair is ready to use!