



For our most current instructions, to request missing, lost or broken parts, or for any other Customer Service issues, please visit our website at **www.walkeredison.com** or call us at 877-207-5906.

Revised 10/2013

This TV stand can be assembled in two (2) different configurations depending on personal preference. Each configuration is outlined below with the appropriate assembly steps required. Also, each step throughout these assembly instructions includes a small icon of the corresponding configuration for your reference.

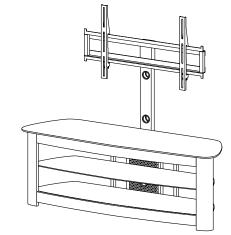


 Configuration 1 - TV Mount on Stand To build this configuration, follow steps 1 through 12.



Configuration 2 - TV Stand Only

To bulid this configuration, follow steps 1 through 5 and step 11.

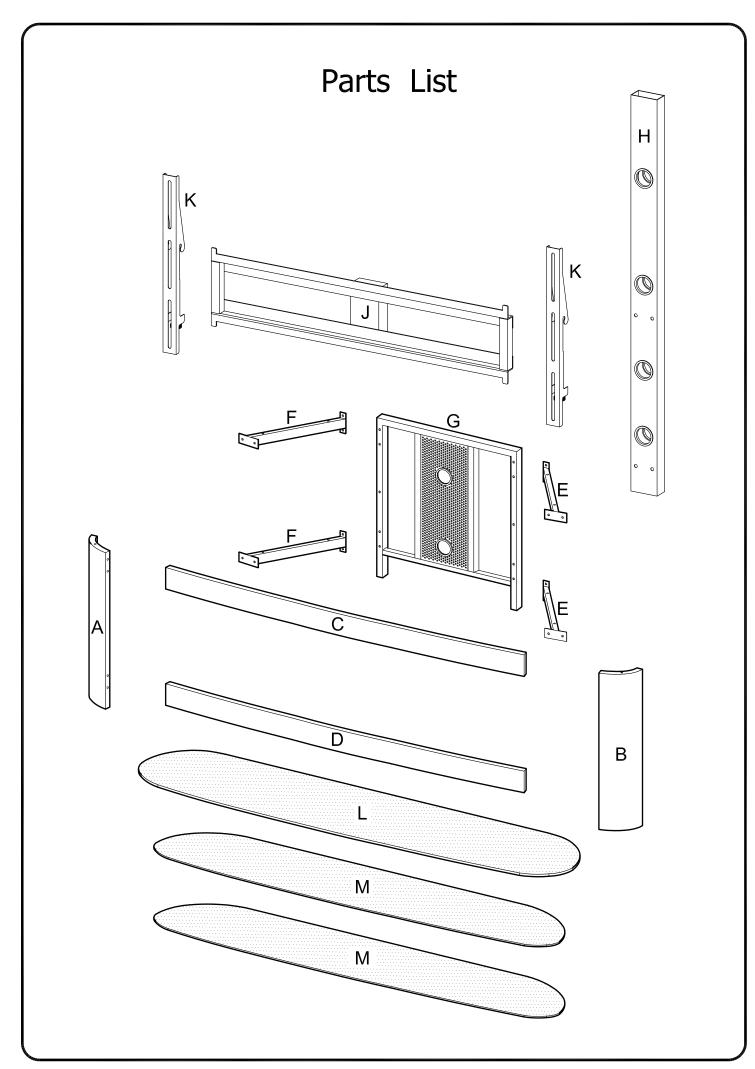

Hardware List

1			Cam bolt	8	pcs
2			Cam lock	8	pcs
3	~~ (0)	Ø1/4"x1/2"	Bolt	20	pcs
4	\bigcirc	Ø16mm	Washer	24	pcs
5			Suction cup pin	8	pcs
6			Pin	4	pcs
7		Ø1/4"x2-1/8"	Bolt	4	pcs
8	ę		Rubber pad	2	pcs
9	8	M4	Wrench	1	рс
10			Touch-up marker	1	рс




Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

TV Mounting Hardware List

0		Small washer	10	pcs
\bigcirc		Large washer	10	pcs
\bigcirc	M4/M5x15mm	Small spacer	4	pcs
\bigcirc	M6/M8x19mm	Large spacer	4	pcs
	M4x12	Bolt	4	pcs
	M4x30	Bolt	4	pcs
	M5x12	Bolt	4	pcs
	M5x30	Bolt	4	pcs
	M6x12	Bolt	4	pcs
	M6x30	Bolt	4	pcs
	M6x40	Bolt	4	pcs
	M8x16	Bolt	4	pcs
	M8x40	Bolt	4	pcs
	M8x30	Bolt	4	pcs
<	2.5"L	Wood screw	6	pcs
< <u></u> }	1.5"L	Self-drilling metal screw	6	pcs
9	M5	Wrench	1	рс

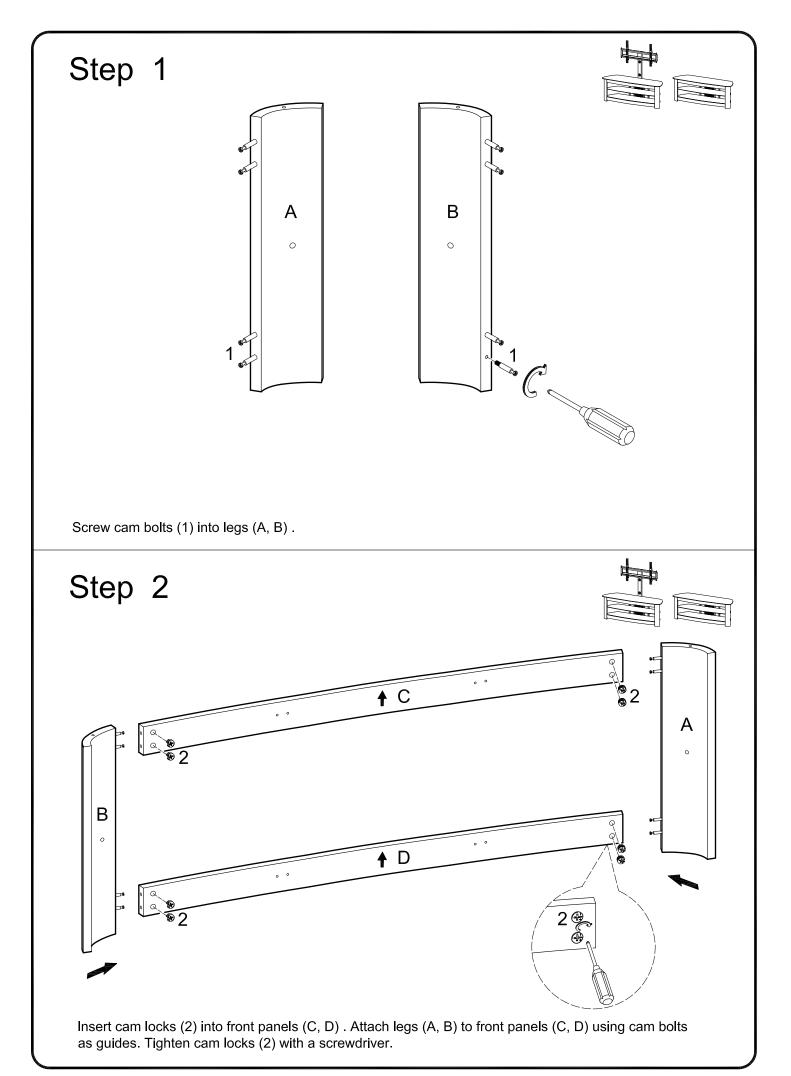

P.6

