roilto∩⊘5™ Subwoofer



7400 Linder Ave, Skokie, IL 60077 800.323.3226 - 847.626.6300

www.lbllighting.com

© 2008 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company

Installation and Operation Guide



What's in the box

Subwoofer (1) connects wirelessly to any railtones transmitter for the audio signal. The transmitter is included in the railtones 2-speaker kit (sold separately).

Power Adapter (1) provides power to the subwoofer.

How the wireless system works

Multi-Zone Capability

The audio signal is transmitted wirelessly on any one of three zones available on the transmitter. Refer to the instructions included with the railtones kit to set up the system.

After setting up the transmitter, the subwoofer must then be "tuned" to the signal zone selected on the transmitter. A blue light will indicate if the subwoofer is receiving a signal from the transmitter.

Troubleshooting

Some speakers connect to the transmitter, but the subwoofer does not.

- 1. Make sure the subwoofer is set to the same zone as the transmitter.
- 2. Unplug the subwoofer and plug it back in.
- 3. Move the subwoofer closer to the transmitter.

The subwoofer will not play music, but it is connected to the transmitter. Make sure the subwoofer is on, the volume is turned up, and it is not muted.

The remote control does not work.

- 1. Move closer to the subwoofer and aim the remote control directly at the remote sensor.
- 2. Replace the remote control's battery.

Refer to the instructions provided with the railtones system for more troubleshooting options.

Important Notes

Location

Do not use the wireless transmitter near a microwave. Do not install this system in a damp or wet location.



Interference


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to the system not expressly approved by LBL Lighting could void the user's authority under FCC guidelines to operate the equipment.

Setting up the subwoofer

The default setting for the subwoofer is Zone 1. To change the zone setting, first turn off power to the subwoofer by unplugging the power adapter. The status light should be off. Toggle the 3-position switch to select the zone that the transmitter is broadcasting on. The subwoofer will automatically try to connect to the transmitter after it is plugged in.

SUBWOOFER STATUS LIGHT

Connected to Transmitter	No Connection
Solid Blue	Solid Red

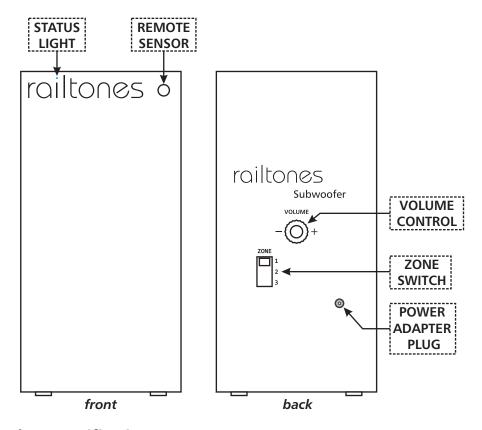

Product Specifications

Speaker size: 4 inches

Amplifier output: 30 Watts maximum Audio input: 2.4 GHz digital wireless signal

Signal Zones: 3 Range: up to 100 feet Power input: 24 Volt DC

Cabinet size: 8.66 x 8.66 x 4.33 inches