



# ESSEX ARC LAMP MODEL # 3292-01



## PLEASE READ AND SAVE THESE INSTRUCTIONS:

1. REMOVE ALL PARTS FROM PACKAGING AND LAY ON A FLAT SURFACE.
2. SCREW POLE (C) CLOCKWISE INTO POLE (B) TO TIGHTEN.
3. SCREW POLE (D) CLOCKWISE INTO POLE (C) TO TIGHTEN.
4. SCREW POLE (E) CLOCKWISE INTO POLE (D) TO TIGHTEN AND PULL THE REMAINING SLACK OF THE POWER CORD OUT CAREFULLY THROUGH THE OPENING (J) IN THE POLE.
5. INSERT THE POLE (B) INTO BASE (A). POSITION ARC TO POINT DIRECTLY ACROSS THE CENTER OF THE BASE. WHEN IN POSITION, TIGHTEN SCREWS (H) WITH ALLEN WRENCH (I) TO SECURE LAMP BODY TO BASE. SCREWS (H) ARE PRE-INSERTED IN THE LAMP BASE.
6. AFFIX THE SHADE (F) TO LAMP HOLDER (E) WITH SOCKET RING (G) BEFORE SCREWING IN LIGHT BULB.

NOTE: PLEASE SAVE THE ALLEN WRENCH IN CASE IT IS NEEDED FOR FUTURE ADJUSTMENTS OR ASSEMBLY.

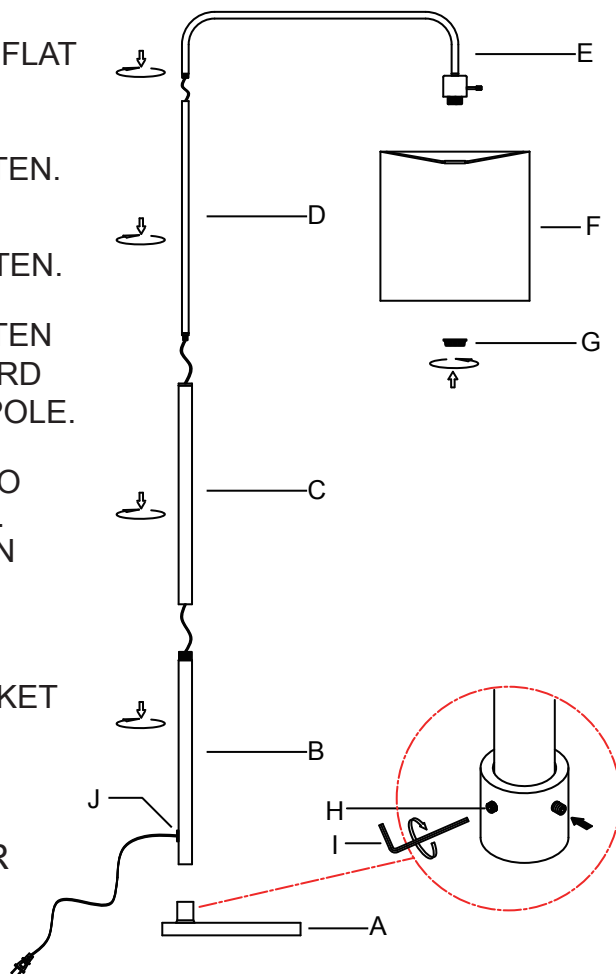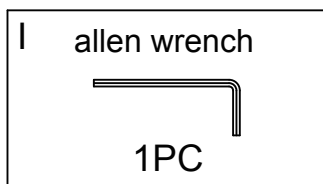

## MAINTENANCE:

**BULB INFORMATION:** This lamp requires the use of a maximum 32-Watt 3-way CFL light bulb or a 150-Watt maximum 3-way standard incandescent bulb (bulb is not included).

Wattages listed are maximums - lower wattages may be used .

To clean lamp, wipe with clean, dry cloth

## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER PLUG.**



21 Penn Plaza #909 New York, NY 10001  
Tel : (212) 736 4440 Fax : (212) 736 4806  
www.adessohome.com