

**COASTER**<sup>®</sup>  
FINE FURNITURE

**800772**

**WRITING TABLE**

---

**ASSEMBLY INSTRUCTION**

**COASTER FINE FURNITURE**



[www.coastercompany.com](http://www.coastercompany.com)

**ASSEMBLY INSTRUCTION**









**ASSEMBLY TIPS:**

- 1、 Remove hardware from box and sort by size.
- 2、 Please check to see that all hardware and parts are present prior to start of assembly.
- 3、 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


**▲Warning!**

- 1、 Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2、 This product is for home use only and not intended for commercial establishment.

**PARTS IDENTIFICATION**


<b>A PRINCIPAL PART</b>  <b>1PCS</b>	<b>C BOTTOM PANEL</b>  <b>1PCS</b>
<b>B LONG LEG</b>  <b>4PCS</b>	<b>D SHORT LEG</b>  <b>4PCS</b>
<b>Z</b>	<b>HARDWARE PACKAGE</b>
<b>1 BOLT (5/16" *2" )</b>  <b>8PCS</b>	<b>3 FLAT WASHER</b>  <b>8PCS</b>
<b>2 LOCK WASHER</b>  <b>8PCS</b>	<b>4 ALLEN WRENCH</b>  <b>1PCS</b>

**STEP 1**

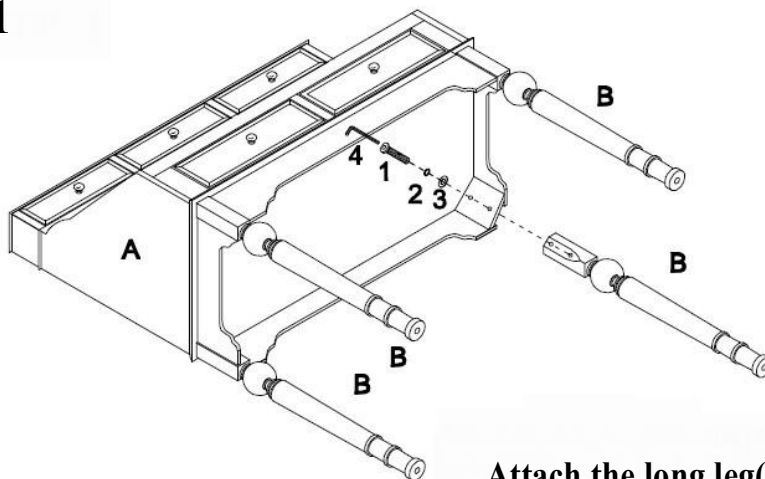


Attach the long leg(B)to the principal part(A) by bolt(1)through the lock washer(2) and flat washer(3). Tighten with allen wrench(4).

**STEP 2**

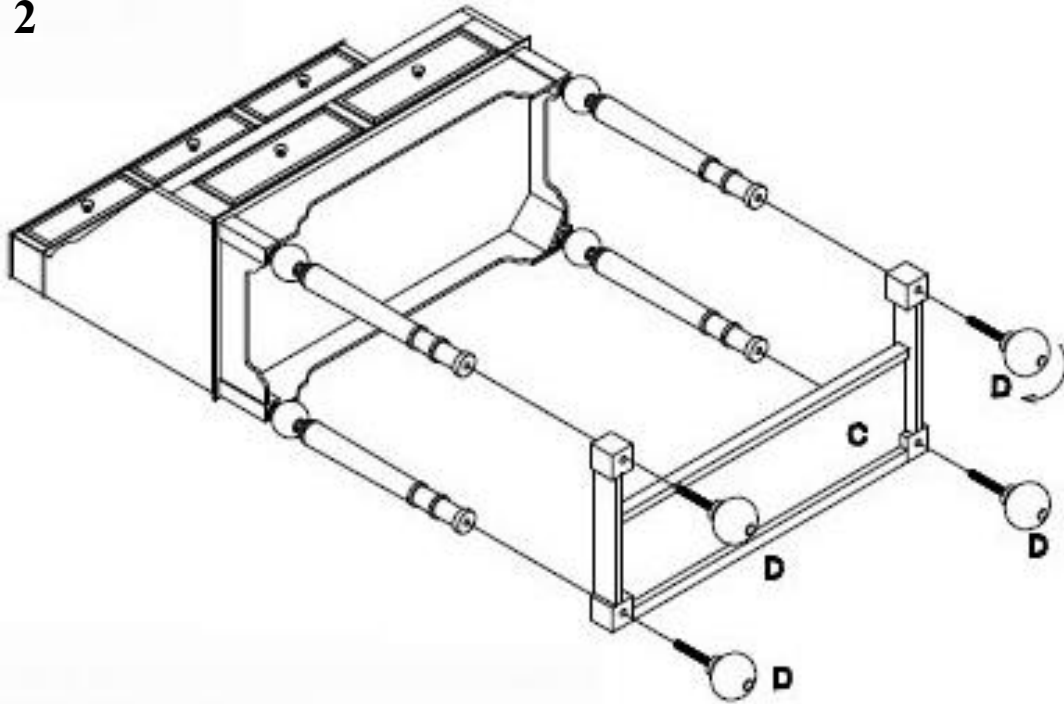

**Attach the short leg(D)through the bottom panel(c)  
to the long leg(B) as shown.**

**STEP 3**

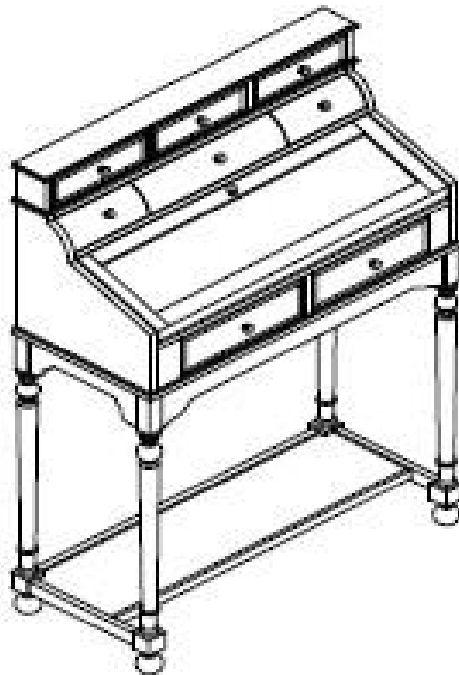

**THE ASSEMBLY IS NOW COMPLETE.**