

COASTER[®] 5908

FINE FURNITURE

CONSOLE TABLE

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY TIPS:


 


1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.






 


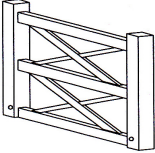

Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

PARTS IDENTIFICATION


| | | | |
|----------|---|-----------|-------|
| A |  | LEG FRAME | 2PCS |
| B |  | SHELF | 2SETS |
| C |  | APRON | 2PCS |
| D |  | TOP PANEL | 1PC |

HARDWARE IDENTIFICATION

| | | | |
|----------|--|--------------|------|
| 1 |  | ALLEN WRENCH | 1PC |
| 2 |  | LONG BOLT | 4PCS |
| 3 |  | WOOD PLUG | 4PCS |
| 4 |  | SHORT BOLT | 8PCS |
| 5 |  | LOCK WASHER | 8PCS |
| 6 |  | FLAT WASHER | 8PCS |
| 7 |  | BARREL NUT | 4PCS |
| 8 |  | SCREW | 6PCS |


STEP 1

Align and hand tighten leg frame to shelf using short bolt, lock washer and flat washer. Align and hand tighten apron to leg frames using long bolt and barrel nut. Tighten all bolts with Allen wrench. Insert wood plug to cover the hole in leg.

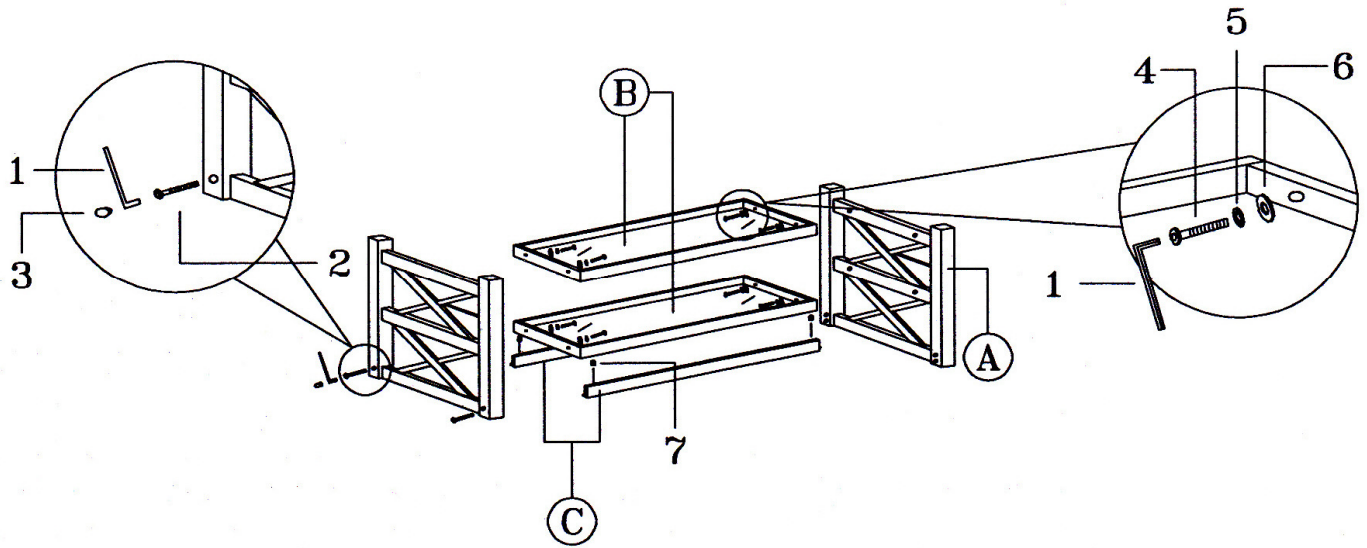

STEP 2

Place top panel upside down on soft surface. Align and fasten top panel to apron using screw and tighten with screw driver (Not Included).

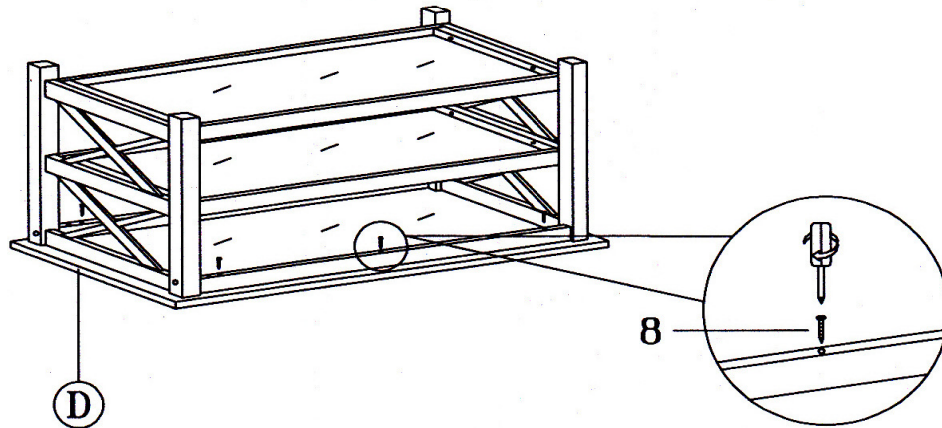

STEP 3

Flip table over using two people to lift and flip this table.

