

COASTER®
FINE FURNITURE

103192

DINING CHAIR

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE




www.coastercompany.com

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.

 
**Warning!**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

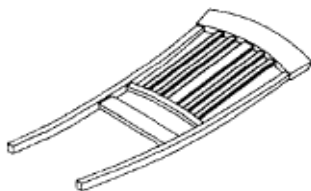PARTS IDENTIFICATION**A**

CHAIR BACK

2 PCS

B

FRONT LEG FRAME

2 SETS

C

SIDE RAIL

4 PCS

D

WOOD SEAT

2 PCS

HARDWARE IDENTIFICATION**1**

BOLT

12 PCS

2

 
LOCK WASHER

12 PCS

3

ALLEN WRENCH

1 PC

4


SCREW

8 PCS

NOTE : QUANTITIES SHOWN ARE FOR TWO CHAIRS


STEP 1

Align and fasten side rail to front leg frame using bolt and lock washer and then tighten with wrench

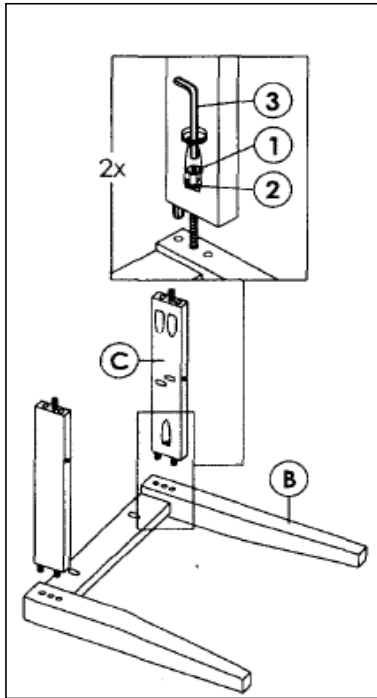


STEP 2

Align and fasten side rail to back leg using bolt and lock washer and then tighten with wrench

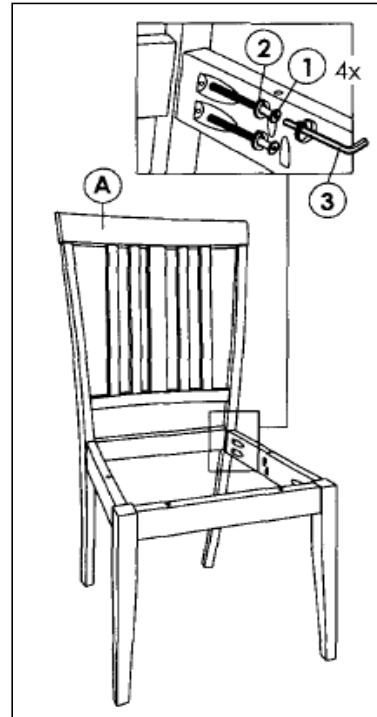

STEP 3

Align and tighten wood seat to side rail using screw

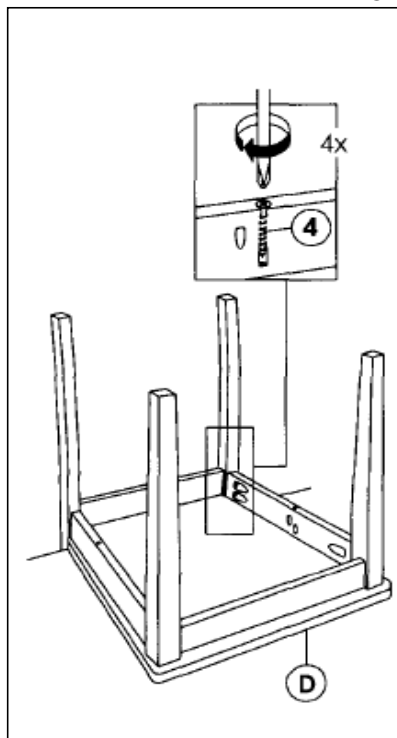

STEP 4

Complete

