

**3PCS DINING SET** 

# **ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE**



www.coastercompany.com

#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



#### Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment


<b>PARTS IDENTIFICATION</b>		<b>HARDWARE IDENTIFICATION</b>			
A TABLE TOP	1PC	1 ,		)WRENCH	1PC
B TABLE LEG	4PCS	2		HEX NUT	8PCS
C LEFT SIDE FRAME	2PCS	3		LOCK WASHER	8PCS
D RIGHT SIDE FRAME	2PCS	4		FLAT WASHER	8PCS
FRONT & BACK RAIL	4PCS	5		ALLEN WRENCH	1PC
F TOP & BOTTOM BACK SLAT	4PCS	6 (		BOLT	16PCS
G MIDDLE BACK SLAT	2PCS	7		BAREEL NUT	16PCS
H CUSHIONG SEAT	2PCS	8	<ammun (♣)<="" th=""><th>PAN HEAD SCREW</th><th>8PCS</th></ammun>	PAN HEAD SCREW	8PCS
		9		DOWEL	8PCS

### ASSEMBLY INSTRUCTIONS

## STEP 1


Place table top upside down on soft suface, align and fasten all legs to table top using bolt, lock washer and flat washer and tighten with wrench.

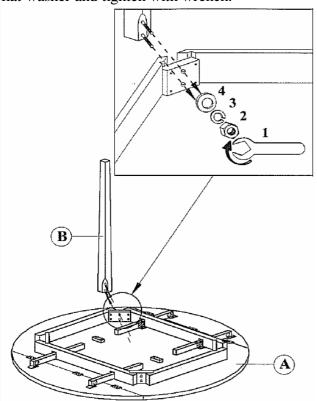

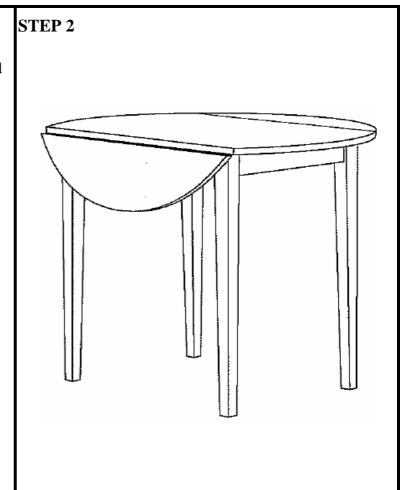


## STEP 3

Align and fasten back slats, front and back rails to right side frame using bolt and barrel nut and tighten with allen wrench.

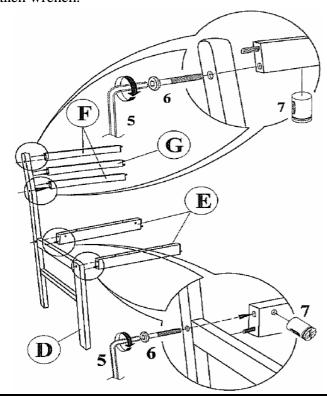

#### STEP 4


Align and fasten back slats, front and back rails to left side frame using bolt and barrel nut and tighten with wrench

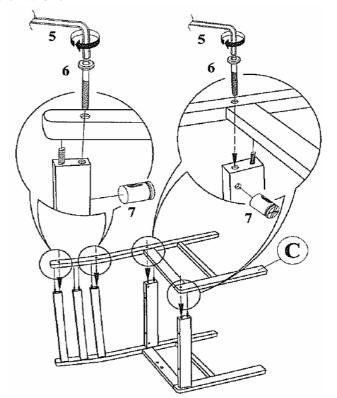



# STEP 5

Insert dowels into side rails

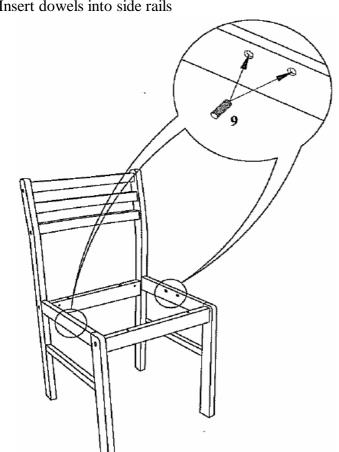

## STEP 6

Align and fasten cushion seat to front and back rails using screws and tighten with screw driver (Not provided).

