
Faucet Installation Instructions

Faucet Installation Instructions

CL101

CL101

- \bullet Hole Diameters are 1 $\% {\rm ^{"}}$ minimum to 1 $5 {\rm ^{"}}$ maximum
- Maximum deck thickness is 1 ½"
- This faucet comes completely assembled and water tested
- Tools required-channel lock pliers (or pipe wrench), basin wrench, small crescent wrench and Teflon tape
- Shut off water supply prior to beginning installation

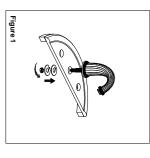


nut (in that order). Step 1
Side escutcheon onto spout shank and place spout through mounting hole in sink. Secure spout with rubber washer, metal washer and



Step 2 Make sure copper tubes (2A) are installed facing away from the spout. Align handles to desired position and then secure valves from underneath with metal washers and threaded Hot valve is marked with red tag and should be installed on the left side of the spout. locknuts. Hand tighten locknuts onto shank insert valves through mounting hole in sink


and secure position by tightening screws

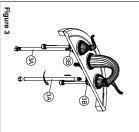

Step 7


Figure 7

Connect the supply hoses (3A) to the bottom of valve bodies (3B) as shown. Step 3

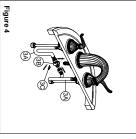


Step 4


Carefully end hoses (3A) to fit available space and thread hose couplings onto sides of the Tee (3B). Insert Tee (3B) onto spout shank until it is completely seated. Place clip (3C) onto slot at bottom of Tee to secure.

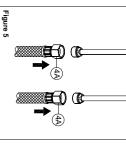

Make connections to 1/2" IPS water lines (4A, not included). Use wrenches to tighten connections. Do not overtighten. Step 5

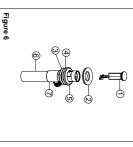

 Remove stopper (1) and flange (2). Screw nut (3) all the way down. Push washer (4) and gasket (5) down. Remove tailpiece (6) from body (7), add Teffon tape, replace tailpiece. Step 6

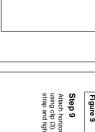

Attach horizontal rod (1) to strap (2) using clip (3). Insert lift rod (4) into strap and tighten screw (5).



RP40001*

Important: After installation is completed, remove aerator. Turn on water supply and allow both hot and cold water for run for at least one minute each. While water is running check for leaks. Replace aerator. Step 10




⇎

RP70265

RP40107*-

RP70021 (3C-Clip) (3B-Tee)

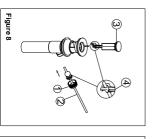

RP17110*

RP64053

RP50003 -15 <u>|</u>

RP50115 --

RP20036 (C) [⊥]

RP70266 -

0

RP60035


RP20035 (H) -

RP70001-

Step 8 Remove pivot nut (1). Insert stopper (3) into drain body then insert rod (2) into eyelet of stopper (as shown above). Hand tighten pivot nut (1).

B

Apply a small bead of Plumber's putty to underside of flange (1). Insert body (2) into sink. Screw flange (1) into body (2). Pivot (3) must face back wall. Pull assembly down firmly and hold in place DO NOT TWIST. Tighten nut, washer & gasket (4), clean off excess Plumber's

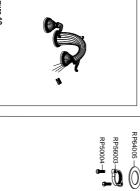

Parts Finish Codes Æ В РС Millennium Brass PVD Brushed Nickel PVD Polished Chrome *Specify Finish

products containing chlorides on any parts of this Never use acids, harsh abrasives, detergents, or cloth and non-abrasive liquid dish soap. Towel Maintenance: Clean with warm water, soft cotton

For additional assistance or service call: 1-888-560-5222 USA 8:30 a.m. to 5:30 p.m. EST Monday-Friday

G

For additional assistance or service call: 1-888-560-5222 USA 8:30 a.m. to 5:30 p.m. EST Monday-Friday